



Setup Guide

STEAMVR BASE STATION 2.0

**Welcome to
Virtual Reality.**

1 Install SteamVR

If you're setting up VR for the first time, visit our website for comprehensive instructions and assistance.

Before setup, be sure your operating system and video drivers are up to date.

Download SteamVR from the website below and install it on your VR Ready PC.

Create or log into your Steam account before proceeding.



steamvr.steampowered.com




Read the enclosed safety information to reduce the risk of accidents such as tripping, falling, entanglement, collisions, or electrical and fire hazards.

2 Prepare your play area

For Room Scale VR, you will need at least 2m x 1.5m (6.5ft x 5ft) of free space. Standing-only or seated setups can be achieved in smaller spaces.

Choose a play area that gives you enough room that your outstretched arms, including controllers, will not touch walls, ceiling, or objects around you.


Be sure there is nothing dangerous in or around your play area, such as pets, stairs, or windows.

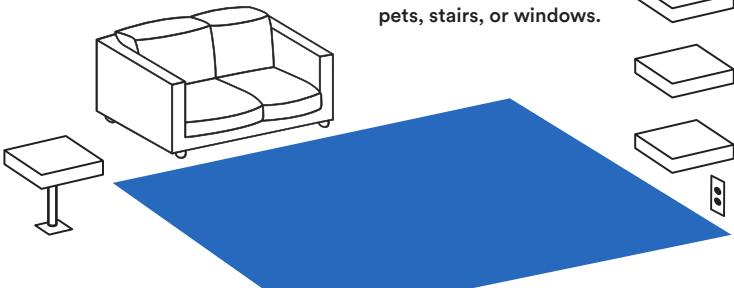

3 Attach your base station stands

For now, screw each stand onto the bottom of a base station.


Later, as a more permanent solution, you may choose to use these same stands as wall mounts. Visit our website for detailed wall-mounting instructions.

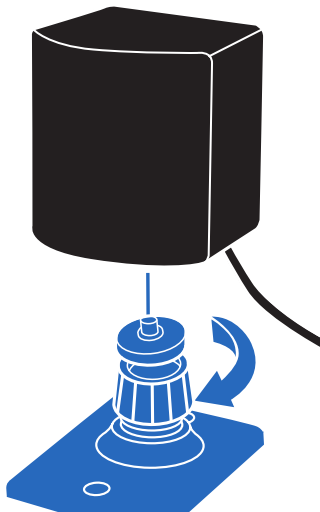

4 Plug in & place your base stations

Place your base stations at opposite corners of your play area, pointing toward its center. In general, higher up is better, though be sure to select a stable surface when placing them.

Plug each base station into an outlet and remove its protective film.

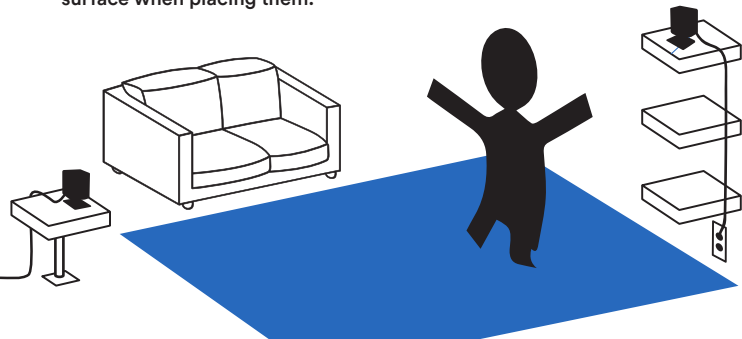

5 Enjoy VR!

Launch SteamVR by clicking the VR button in the upper corner of Steam.

VR



Follow the on-screen instructions to complete setup and enjoy VR.





For additional setup and safety information,
visit our website.

steamvr.steampowered.com



V003703-00