


# *Aveli*

**Laminator**  
**Aveli XS A4**  
**Manual**

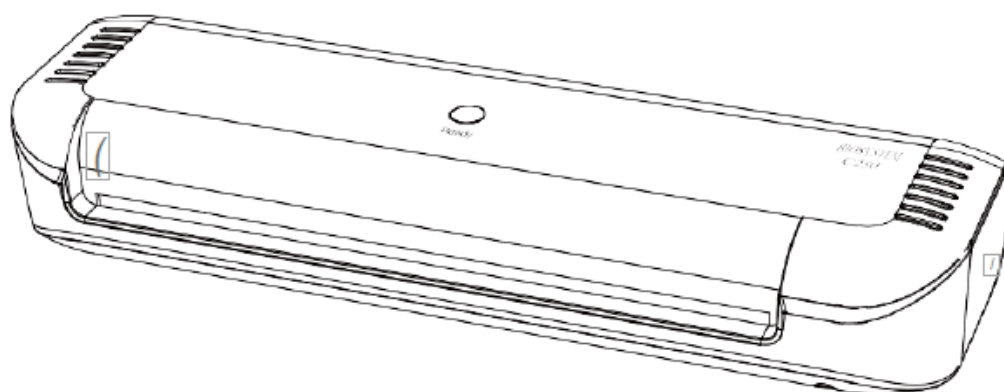

## **Content**

1. Important safety information.....	2
2. Exemption from liability.....	2
3. Use.....	3
4. Description of the device.....	3
5. Operation.....	4
6. Cleaning .....	5
6.1. Cleaning the outer surface of the device.....	5
6.2. Cleaning the heating rollers.....	5
7. Technical documentation.....	6
8. Disposal.....	6
9. Guarantee.....	6

## 1. Important safety information

- Place the laminator on an easily accessible, level, dry, heat resistant and sufficiently stable work surface. Do not place the laminator on the edge of the work surface.
- The maximum thickness of the paper and the lamination film is 100 Mic. The thickness of the laminating film is 80-100 Mic. In case, lower or higher thickness than specified, the laminating film may be squeezed and bubble formation. If it happens, please turn off the laminator and remove the laminating film.
- Never insert metallic objects (e. g. paper clips, staples etc.) or objects other than laminating pouches which are intended for this laminator into the laminating pouch infeed slot.
- Never laminate damp documents or organic objects (e.g. flowers, leaves etc.).
- Make sure that children do not insert any objects into the laminator. The device is not a toy!
- Keep the laminating set away from pets.
- Do not leave the laminator unattended while it is operating and do not perform any other activities during operation.
- Always switch the laminator off and pull the mains plug out of the socket when you are not using the laminator, cleaning it or in the event of a fault.
- Do not cut the laminating pouches into pieces before laminating and do not in any case cut off the sealed edges from the laminating sheets.
- DO NOT insert the open end of the film into the machine to prevent it from winding inside the machine.
- After 30 minutes of lamination, a 30-minute break is recommended.
- The laminator will become hot during operation. You may burn yourself.
- Always let the laminator cool off completely before you clean it.
- If an object (sleeves, tie etc.) is unintentionally taken into the laminating pouch infeed slot, immediately disconnect the mains plug.
- **WARNING:** Limitation of the possibility of electric shock:
  - ① Do not use in humid places. The device is intended for indoor use only.
  - ② Do not remove the outer cover of the device or try to repair the device yourself.
  - ③ Avoid contact of the power cord with hot surfaces.
  - ④ Unplug the appliance when not in use or before handling.

## 2. Exemption from liability


Due to the constant development of technology, the functions of the product may differ. The product and all accessories described in this documentation are subject to continuous improvement and further development. For this reason, we reserve the right to change the components, accessories, technical specifications and related product documentation described in this documentation at any time without prior notice.

### 3. Use

This laminator is designed for hot lamination of paper.

- The thickness of the laminating film is 80-100 Mic
- Suitable for home or small office use.
- Unsuitable for lamination: money, policy cards, receipts, stamps, credit cards, magnetic stripe cards, and similar items. Also, do not laminate sharp objects, rigid plastic, historically valuable documents and unique documents.

### 4. Description of the device

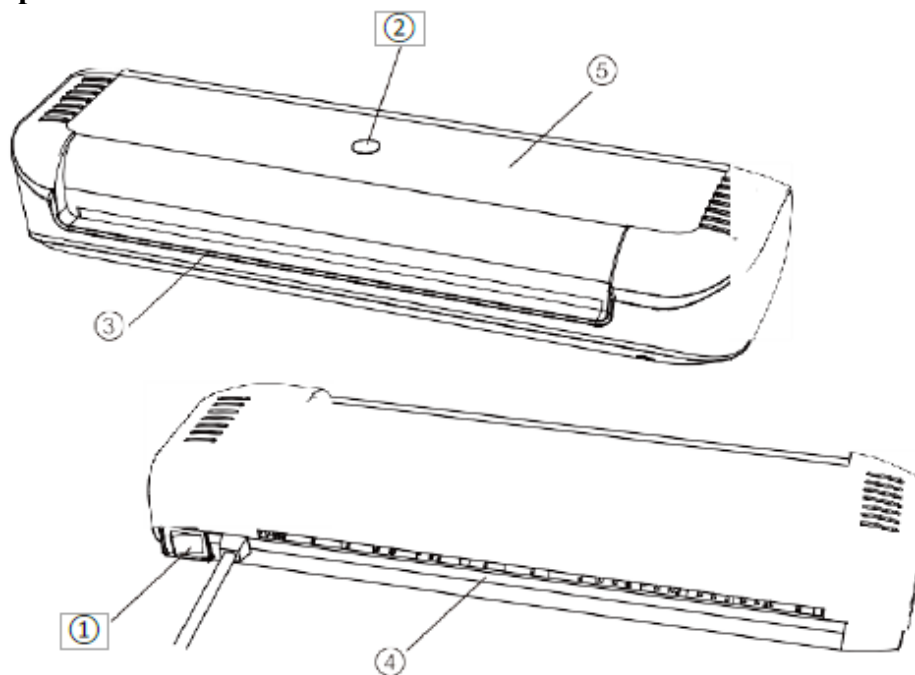

- 1) Button ON/OFF
- 2) Ready indicator
- 3) The laminating pouch infeed slot - on the front of the laminator
- 4) The laminating pouch output slot - on the back of the laminator.
- 5) Plastic cover: ABS

## 5. Operation

- 1) Carefully unpack the laminator and place it on a flat and stable surface.
- 2) Connect the mains plug to a socket and move the ON/OFF switch „ to ON .



**Warning:** Connect the mains plug to a properly installed socket with a protective conductor (AC 220-240 V/ 50 Hz).

- 3) The ready indicator - will turn from black to red within the next 3-4 minutes.
- 4) Once the ready indicator is green, place the document between the two sides of a laminating pouch.
- 5) Insert the laminating pouch so that it is centred and with the closed-edge first into the laminating pouch infeed slot- on the front of the laminator. The process starts automatically.



**Notes:** Make sure that the document is flush with and aligned as close as possible to the sealed edge of the laminating pouch.

- 6) The heating rollers will automatically pull the laminating pouch in and move it to the laminating pouch output slot,, on the back of the laminator. Do not use force to pull out the laminating pouch!
- 7) Remove the laminating pouch and let it cool off briefly on a flat surface.



**Warning:** The laminating pouch will become hot during operation.

You may burn yourself, be carefully!

- 8) Move the ON/OFF switch - to OFF to switch the laminator off.

## 6. Cleaning

### 6.1. Cleaning the outer surface of the device



**Warning:** Always let the laminator cool off completely before you clean it.

The cover can be cleaned with a damp cloth with a small amount of soap.



**Note:** Do not use any solvents or aggressive cleaning agents.

### 6.2. Cleaning the heating rollers

1. Switch the laminator on by moving the ON/OFF switch - to ON.
2. Once the ready indicator - turns red, fold a sheet of paper (A4) and insert it, folded edge first, into the laminating pouch infeed slot -.
3. Keep repeating this process until no more glue deposits cling to the paper.
4. Switch the laminator off by moving the ON/OFF switch to OFF.

## 7. Technical documentation

Model:	Aveli XS A4
Mains voltage:	AC 220-240 V, 50 HZ
Power consumption:	45 W, 0,63 A
Weight:	cca 0,685 kg
Dimensions	cca 330x100x58 mm
Preheating time:	2-4 min
Pouch thickness:	80 mic - 100 mic
Operating speed:	300 mm/min
Laminating temperature:	cca 125 °C
Maximum film width:	A4
Rolling mechanism:	2 rollers
Lamination:	Hot
Ready indicator:	yes



Declaration of conformity: the EU declaration of conformity can be requested from the service.

## 8. Disposal

Dispose of the packaging divided into different types of materials. Dispose of cardboard and paperboard as waste paper and foil using recyclable., ..., material collection service.

(Applicable in the European Union and other European states with systems for the separate collection of reusable waste materials)



Old devices may not be disposed of in the household waste! Should the laminator no longer be capable of being used at some point in time dispose of it in accordance with the regulations in force in your state or country. This ensures that old appliances are recycled in a professional manner and also rules out negative consequences for the environment. For this reason, electrical equipment is marked with the symbol shown here.

## 9. Guarantee

In the event of a breakdown, return the device together with proof of payment and the original packaging to the store where you purchased the device.