

# Aveli

## **Aveli COMBI A3**

- ✓ Laminator
- ✓ Trimmer (3 types)
- ✓ Corner rounder

## Content

1. Important safety information. ....	2
1.1 Important safety information laminator .....	2
1.2 Important safety information, trimmer .....	3
2. Exemption from liability .....	4
3. Use.....	4
4. Description of the device.....	5
4.1. Functional switches and indication.....	6
4.2 Cutting head .....	6
5. Operation .....	7
5.1. Laminator .....	7
5.1.1 Hot lamination.....	7
5.1.2 Cold lamination .....	8
5.1.3. Clearing jammed lamination foil.....	9
5.2. Trimmer .....	10
5.2.1 Selecting the type of cut .....	10
5.2.2. Cutting material .....	11
5.2.3. Changing the cutting head.....	12
6. Cleaning the outer surface of the device.....	13
6.1 Cleaning the outer surface of the device.....	13
6.2 Cleaning the heating rollers.....	13
7. Technical documentation.....	14
8. Disposal .....	15
9. Guarantee.....	15

## **1. Important safety information**

Follow these instructions for safe use and reliable operation of the device:

- Read this manual carefully and follow the instructions and information in the machine.
- Keep this manual for future reference.
- Place the laminator on an easily accessible, level, dry, heat resistant and sufficiently stable work surface. Do not place the laminator on the edge of the work surface.

### **1.1 Important safety information, laminator**

- Do not use the device with a damaged power cord or plug.
- Never use the device near hot surfaces or in a humid environment and protect it from direct sunlight and strong dust.
- Always switch the laminator off and pull the mains plug out of the socket when you are not using the laminator, cleaning it or in the event of a fault.
- Never insert metallic objects (e. g. paper clips, staples etc.) or objects other than laminating pouches which are intended for this laminator into the laminating pouch infeed slot.
- Never laminate damp documents or organic objects (e.g. flowers, leaves etc.).
- Make sure that children do not insert any objects into the laminator. The device is not a toy!
- Keep the laminating set away from pets.
- Do not leave the laminator unattended while it is operating and do not perform any other activities during operation.
- Always switch the laminator off and pull the mains plug out of the socket when you are not using the laminator, cleaning it or in the event of a fault.
- Make sure the On / Off switch is in the OFF position before connecting the unit to the power supply.
- The device is used only for lamination of A3 size foils.
- The maximum thickness of the paper and the lamination film is 125 Mic. The thickness of the laminating film is 80, 100 and 125 Mic. In case, lower or higher thickness than specified, the laminating film may be squeezed and bubble formation. If it happens, please turn off the laminator and remove the laminating film.
- Do not use laminating foils designed for cold lamination during hot lamination. This could damage the machine, the laminating film and the document.
- Do not cut the laminating pouches into pieces before laminating and do not in any case cut off the sealed edges from the laminating sheets.
- DO NOT insert the open end of the film into the machine to prevent it from winding inside the machine.
- After 30 minutes of lamination, a 30-minute break is recommended.
- The laminator will become hot during operation. You may burn yourself.
- Always let the laminator cool off completely before you clean it.
- If an object (sleeves, tie etc.) is unintentionally taken into the laminating pouch infeed slot, immediately disconnect the mains plug.

### **1.2 Important safety information, trimmer.**

- During moving or packing the device, never touch the machine near the cutting head. The blades of the cutting head are very sharp. Danger of injury!
- Handle the device carefully.
- The trimmer is intended only for cutting paper, cards, photo paper and laminating films.
- Remove all staples and paper clips from the paper before cutting.
- The blades of the cutting head must not be lubricated or sharpened.
- Do not use the machine if the cutting head or protective cover is damaged.
- When replacing the cutting head, be careful not to cut your fingers. Always avoid contact with the knife edge
- Keep out of reach of children. The device is not a toy!
- If an object (sleeves, tie etc.) is unintentionally taken into the laminating pouch infeed slot, immediately disconnect the mains plug.

## **2. Exemption from liability**

 
Due to the constant development of technology, the functions of the product may differ. The product and all accessories described in this documentation are subject to continuous improvement and further development. For this reason, we reserve the right to change the components, accessories, technical specifications and related product documentation described in this documentation at any time without prior notice.

## **3. Use**

This laminator with a trimmer can only be used for:

- hot and cold lamination of foils with thicknesses of 80, 100 and 125 Mic, the total thickness of the laminated document (photos, pictures, cards, leaflets, etc.) being a maximum of 0.6 mm.
- paper, cards, photo paper and laminating foils of the maximum size A3 format, the material to be cut being not thicker than
- 3 sheets (80 g / m<sup>2</sup>) in a straight cut,
- 3 sheets (80 g / m<sup>2</sup>) in a wavy section,
- 3 sheets (80 g / m<sup>2</sup>) in perforation section.
- Any other use is considered as non-intended use. Arbitrary changes or modifications are not permitted.

#### 4. Description of the device

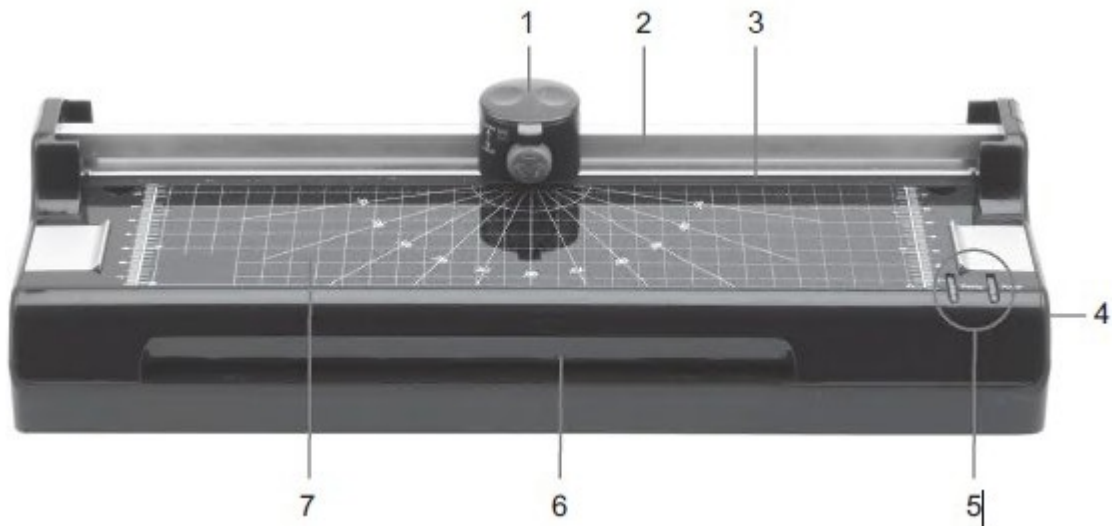


- 1 Cutting head
- 2 Guide rail
- 3 Pressing rail with finger protection
- 4 Function switch (temperature control)
- 5 Indicator elements (LEDs)
- 6 Laminator infeed
- 7 Visual positioning aids in cm (lines, angles, scale)



- 8 ON/OFF switch
- 9 Anti-blocking slider (for clearing jams) (ABS)
- 10 Corner rounder (The function for rounding off the corners is located on the reverse side of the devices.)

#### 4.1. Functional switches and indication

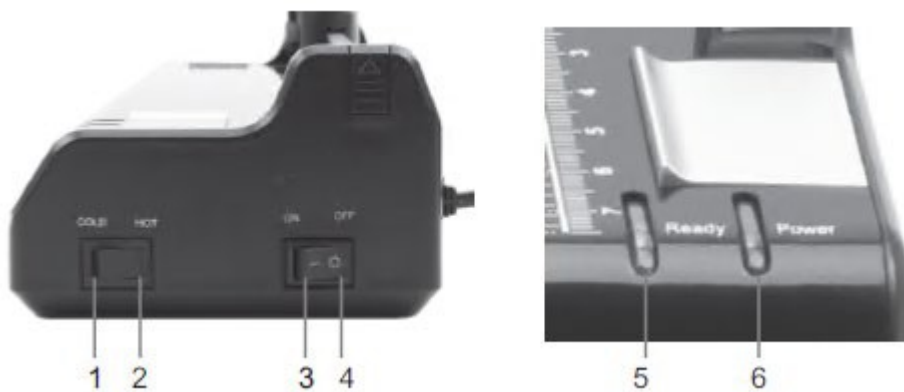 

- 1- 2 Switch: cold and hot laminating
- 3- 4 ON/OFF switch
- 5 READY indicator
- 6 POWER indicator

#### 4.2 Cutting head



- 1 Lock settings
- 2 Rotary knob to set the type of cut

## 5. Operation

Carefully unpack the device and place it on a flat and stable surface.

- Connect the mains plug to a socket and move the ON/OFF switch ,, to ON .



**Warning:** Connect the mains plug to a properly installed socket with a protective conductor (AC 220-240 V/ 50 Hz).

- The ready indicator - will turn from black to red within the next 3-4 minutes.

### 5.1 Laminator

The laminator can complete hot and cold lamination:

- In the case of hot lamination, the lamination foil is adhered together.
- In the case of cold lamination, the lamination foil is pressed together.

Select the lamination method according to the material to be laminated.



**Note:** Only cold lamination should be used for thermopaper and ultrasonic images!

#### 5.1.1 Hot lamination

1) Plug the appliance into an easily accessible electrical socket.

2) Use the on/off switch on the right of the appliance to switch on: "HOT", the red display (POWER indicator) lamp shows.

3) The drive motor for the transport rollers starts up. The correct operating temperature is reached after about 3-5 minutes and the green display (READY indicator) lamp shows.

4) Insert the document to be laminated in the pouches so that there is a margin of approx. 3 - 5 mm to the edge of the foil on all side



**Warning:** Only use foil intended for hot laminating.

5) Insert the foil containing the document in the laminator's insertion slot. Insert the ready closed side of the pouch first.



**Note:** To prevent the laminating foil from creasing, never insert the open end of the foil pocket in the insertion slot of the laminator first. The laminating process occurs automatically.



**Warning:** The lamination foil is very hot and soft when ejected following lamination. Therefore, handle the laminated document with due care!




**Note:** To flatten and smoothen the laminated product, place a book or similar heavy, flat object on it.

6) When you have completed the laminating process, turn the function switch to the right in COLD position and remove the power plug from the power socket. Let the device cool down before packing it away, for example.




**Warning:** The device is very hot directly after laminating! Risk of injury!

### 5.1.2 Cold lamination

 **Attention:** If you have just finished using the laminator for hot laminating, you must let the laminator cool down. It takes about 30 minutes to cool down sufficiently.


1) Turn the function switch to the right in the COLD position.

 **Note:** Only use cold lamination foil for cold laminating.

2) Remove the protective foil from the lamination foil.

3) Insert the document to be laminated in the lamination foil so that there is a margin of approx. 3 - 5 mm to the edge of the foil on all sides.

4) Guide the laminating foil containing the document to be laminated in the laminator infeed with the closed side first. The laminating process occurs automatically.

 **Note:** To prevent the lamination foil from creasing, never feed the open side of the lamination foil first in the laminator infeed.

### 5.1.3 Clearing jammed lamination foil

The device is equipped with an ABS switch (anti-blocking sliding switch) to clear foil jams quickly.

Proceed as follows if the lamination foil jams:

1. Switch the device off: Set the On/Off switch to OFF.
2. Slide the ABS switch fully to the left.
3. Hold the laminator firmly and pull the lamination foil together with the document to be laminated out of the laminator's infeed.
4. Slide the ABS switch fully to the right.
5. Clean the transport rollers of any deposits and residual adhesive by inserting a folded piece of paper in the laminator infeed, refer to Chapter "Cleaning the transport rollers".



**Note:** If foil jams occur repeatedly or jammed foil cannot be removed from the laminator, please contact the sales representative place where you purchased the device (refer to Guarantee).

## 5.2. Trimmer

The trimmer can be used to cut paper, card, photo paper and lamination foil.

 
### 5.2.1. Selecting the type of cut

The trimmer is equipped to complete three types of cut:  
straight cut,  
wave cut,  
perforation cut.




**Note:** The blades are accommodated in protective housing.


- 1) Pull the setting lock on the cutting head upwards to the OPEN position.
- 2) Turn the rotating knob for the cut until the symbol related to the required cut is at the top.
- 3) Press the setting lock on the cutting head downwards to the LOCK position.

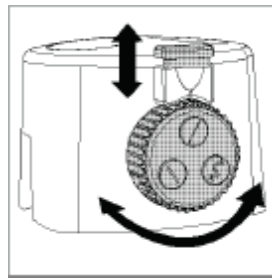

### 5.2.2. Cutting material


- 1) Place the device on a stable, level surface with the cutting head facing up.
- 2) Slide the cutting head to one side of the guide rail.
- 3) Slide the material to be cut under the transparent pressing rail at the required position.

 
 **Note:** Observe the permissible quantity of material which may be cut, refer to Chapter “Intended Use” or “Technical Data”.

 **Note:** The visual positioning aids simplify correct alignment of the material to be cut.

- 4) Hold the material to be cut firmly with one hand so that it cannot slip when cut. Otherwise, the cut may be inaccurate.


- 5) To complete the cut, press the cutting head down and slide it along the guide rail to the other side.

 **Note:** To prevent a faulty cutting edge, do not run the cutting head back again but remove the cut material directly after completing the cut.

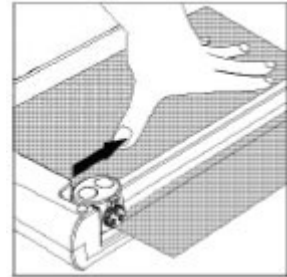

### 5.2.3. Changing the cutting head

When the blades in the cutting head are damaged or worn, the cutting head must be replaced.

 **Note:** Only the entire cutting head can be replaced.

- 1) Remove the end cap of the guide rail from the base plate by pushing it upwards at the lower end at the same time as pushing it inwards gently.
- 2) Replace the old cutting head with a new one.
- 3) Slide the guide rail back in the device in the base plate and install the new cutting head in the process.
- 4) Place the end cap from above on to the opening at the end of the guide rail.



## 6. Cleaning

### 6.1 Cleaning the outer surface of the device



**Warning:** Always let the laminator cool off completely before you clean it.

The cover can be cleaned with a damp cloth with a small amount of soap.



**Note:** Do not use any solvents or aggressive cleaning agents.

### 6.2 Cleaning the heating rollers

Sediments and adhesive residues on the rollers may adversely affect the lamination result.

Therefore, the rollers must be cleaned after use:

- It uses a folded sheet of paper for cleaning, which it inserts on the entrance side of the laminator. Residues of glue are captured on paper and printed together with it. Repeat if necessary.
- Unplug the appliance before cleaning with a damp cloth.
- The cover can be cleaned with a damp cloth with a small amount of soap.
- Do not use any solvents or aggressive cleaning agents.

## 7. Technical documentation:

	Aveli COMBI A3
Hot and cold lamination	
Maximum lamination width:	230 mm
Pouch thickness:	80, 100 a 125 Mic
Operating speed:	250 mm/min
Preheating time:	3–5 min
Indicator elements:	LED POWER (red) LED READY (green)
Special features:	ABS switch Automatic shutdown on overheating
Trimmer	
Special features:	Rotary knob to set the type of cut Lock settings Visual positioning aids in cm (lines, angles, scale)
Selectable types of cut:	straight cut wave cut perforation cut
Maximum film width:	A3
Maximum cutting capacity:	straight cut: 3 sheets (80 g/m <sup>2</sup> ) wave cut: 3 sheets (80 g/m <sup>2</sup> ) perforation cut: 3 sheets (80 g/m <sup>2</sup> )
Colour:	white-black
Dimensions:	385 × 135 × 100 mm
Weight:	1,3 kg
Mains voltage:	220–240 V, 50 Hz
Power consumption	265 W; 1,1 A



Declaration of conformity: the EU declaration of conformity can be requested from the service.

## 8. Disposal



██████████ Dispose of the packaging divided into different types of materials. Dispose of cardboard and paperboard as waste paper and foil using recyclable material collection service. (Applicable in the European Union and other European states with systems for the separate collection of reusable waste materials)

Old devices may not be disposed of in the household waste! Should the laminator no longer be capable of being used at some point in time, dispose of it in accordance with the regulations in force in your state or country. This ensures that old appliances are recycled in a professional manner and also rules out negative consequences for the environment. For this reason, electrical equipment is marked with the symbol shown here.

## 9. Guarantee

In the event of a breakdown, return the device together with proof of payment and the original packaging to the store where you purchased the device.