



Chalumeau de Cuisine Réf. 2040.00

MODE D'EMPLOI

Le chalumeau ne contient aucun gaz à l'achat.

Remplissage :

Utilisez uniquement du gaz Butane (gaz à briquet en vente dans les bureaux de tabac).

Remplissez-le dans un endroit bien aéré. Assurez-vous que le robinet +/- est sur la bonne position (Fig.4) en le tournant dans le sens des aiguilles d'une montre jusqu'à l'arrêt.

Tournez le chalumeau la tête en bas, insérez l'embout de la cartouche de butane dans l'orifice de remplissage et appuyez pendant 3-4 secondes. Répétez l'opération 3 fois.

Le rejet de gaz par la valve indique que le chalumeau est plein. (Fig.1)

Important :

Laissez le gaz se stabiliser environ 2 minutes avant utilisation.

Videz occasionnellement le chalumeau complètement en appuyant sur la valve de remplissage et en maintenant le chalumeau loin de vous. Cela permet de nettoyer les valves.

Allumage du Chalumeau :

Tournez le robinet +/- de 2 à 3 tours dans le sens contraire des aiguilles d'une montre. Le gaz s'échappe.

Appuyez sur le bouton d'allumage rouge (Fig.3). La flamme s'allume instantanément.

Si la flamme ne s'allume pas, ré-appuyez sur le bouton rouge.

Si la flamme ne s'allume toujours pas, fermez le robinet +/- en le tournant jusqu'à l'arrêt, dans le sens des aiguilles d'une montre.

ELOIGNEZ LE CHALUMEAU DE VOTRE VISAGE et ré-appuyez sur le bouton rouge. Vous devez apercevoir une étincelle à la tête du brûleur. Si vous apercevez bien cette étincelle, répétez la procédure d'allumage. Si vous n'apercevez pas d'étincelle, le chalumeau est endommagé.

Réglage de la flamme :

Ajustez la flamme avec le robinet +/- entre 1,2 et 2,5 cm. Une flamme plus longue ne fait que gaspiller du gaz.

Une flamme moins chaude peut être obtenue en tournant le collier d'admission d'air.

Eteindre le Chalumeau :

Tournez le robinet +/- dans le sens des aiguilles d'une montre jusqu'à l'arrêt.

Assurez-vous que le chalumeau est refroidi et éteint avant de le ranger.

PRECAUTIONS :

Ne pas toucher le brûleur durant et après l'utilisation.

Ne pas laisser à la portée des enfants.

Ne pas pointer le chalumeau vers le corps ou la figure.

Ne pas exposer au soleil ou stocker dans un endroit où la température excède les 40° C.

Assurez-vous que le robinet +/- est complètement fermé après utilisation.

Ne pas utiliser pendant plus d'1 heure

Laissez le chalumeau refroidir avant de le ranger.

Ne jamais percer ou mettre au feu.

Suivez les instructions inscrites sur la cartouche de gaz.

Le Chalumeau est distribué par :


DE BUYER INDUSTRIES

FAYMONT - BP 2 - F-88340 LE VAL D'AJOL - FRANCE

TÉL. 33 (0)3 29 30 66 12 - FAX : 33 (0)3 29 30 60 03

<http://www.debuyer.com> - debuyer@wanadoo.fr

INSTRUCTION

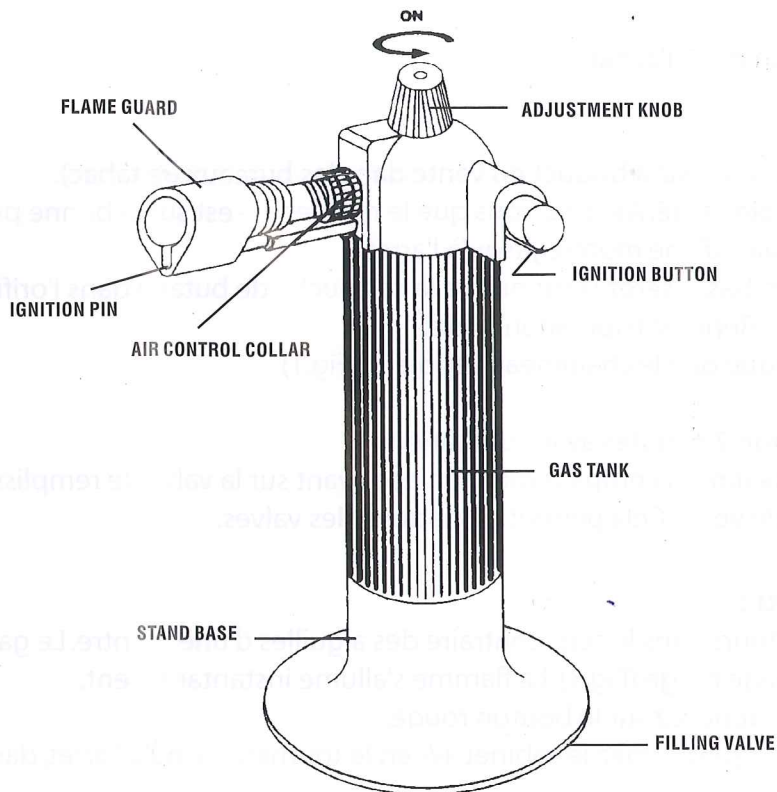

INSTRUCTION

THE MICRO TORCH DOES NOT CONTAIN ANY BUTANE GAS WHEN FIRST PURCHASED

READ THESE INSTRUCTIONS CAREFULLY AND FAMILIARISE YOURSELF WITH THE PRODUCT BEFORE LIGHTING OR USING. RE-READ THE INSTRUCTIONS PERIODICALLY TO REFRESH YOUR MEMORY. RETAIN THESE INSTRUCTIONS FOR FUTURE USE.

BUTANE LIGHTER GAS CAN BE BOUGHT FROM MOST NEWSAGENTS AND TOBACCONISTS.
ALSO FROM TOBACCONISTS COUNTERS IN LEADING SUPERMARKETS"

Filling the torch

- Use Only butane fuel.
- Fill only outdoors in a well ventilated area.
- Make sure the ON/OFF valve is in the OFF position. (Fig 4). Turn clockwise until it stops.
- Turn the unit upside down and insert fill stem into fill valve and press down for 3 to 4 seconds Repeat three times. Back spray from fill valve indicates that appliance is full. (Fig 1)
- Do not add attachments to the end of the gas refill canister.

Lighting The Torch



- Turn the ON/OFF knob 2/3 turn counter clockwise. Gas will blow out of the burner with a hiss. (Fig 2)
- Push the ignition button The flame will ignite instantly. (Fig 3)
- If torch does not light, then press ignitor button again. If torch still does not light. Check and make sure that the air control collar doesn't cover the vent hole. Turn off the ON/OFF valve (Turn ON/OFF valve clockwise until it stops.) Hold torch at an angle so that you can see inside the front of the burner. With the fuel shut off, press the ignition button, a spark should jump from the ignition pin to the inner face of the burner do not press the ignition button with burner pointed toward your self or any thing flammable. If spark jumps, repeat lighting procedure. If torch still does not light. Try lighting after turning on 1/2 and 3/8 turn.
- Do not to add attachments to the end of the gas refill canister as the valve is designed to accept the gas direct from the gas can without any adaptors added. (These adaptors are only usually provided for cigarette lighters).

Flame Adjustment:

- Adjust the torch flame to 1/2 to 1 inch, longer flames only waste fuel.
- Cooler flames may be achieved by adjusting the air collar until the flame softens. Do not do this while operating as the air control collar gets hot.

Shut down

- Turn ON/OFF valve clockwise until it stops. Be sure flame is out and torch is cool before storing torch.

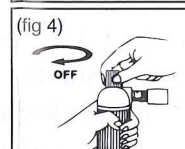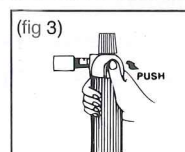

⚠ Do not try to repair or disassemble any parts of the torch.

Warning:

1. DO NOT TOUCH FLAME GUARD OR AIR CONTROL COLLAR IN USE OR SOON AFTER AS IT WILL BE HOT.
2. KEEP OUT OF REACH OF CHILDREN.
3. BUTANE GAS IS EXTREMELY FLAMMABLE, PLEASE HANDLE WITH CARE.
4. ALWAYS POINT AWAY FROM EYES AND BODY WHEN IGNITING OR OPERATING.
5. DO NOT STORE UNDER DIRECT SUNLIGHT OR ANY PLACE WHERE TEMPERATURES WILL EXCEED 40°C (140°F)
6. MAKE SURE THE ADJUSTMENT KNOB IS FIRMLY CLOSED AND THE FLAME IS COMPLETELY EXTINGUISHED AFTER USING.
7. DO NOT CONTINUALLY USE THIS TOOL FOR LONGER THAN ONE HOUR.
8. AFTER USING, LET THE TOOL COOL DOWN BEFORE STORAGE.
9. DO NOT PUNCTURE OR DISPOSE OF IN A FIRE.
10. READ AND FOLLOW ALL INSTRUCTIONS AND CAUTIONS ON THE FUEL CANISTER.