

Wi-Fi Smart Switch

User Manual • Uživatelský manuál

Dear customer,

Thank you for purchasing our product. Please read the following instructions carefully before first use and keep this user manual for future reference. Pay particular attention to the safety instructions. If you have any questions or comments about the device, please contact the customer line.



www.alza.co.uk/kontakt



+44 (0)203 514 4411

Importer Alza.cz a.s., Jankovcova 1522/53, Holešovice, 170 00 Praha 7, www.alza.cz

Introduction

Wi-Fi switch is using Wi-Fi protocol to control the lights. There is no need to change the electrical appliances and traditional wirings if there is an existing Neutral Line, the old traditional switch can be replaced directly, to simply realize the function of APP remote control, timer, scene control etc if working with the wireless router. What is more, it works with Amazon Alexa, Google home assistant, Tmall Genie, Xiaomi, XiaoAi smart speakers for voice control over the electrical appliances.

Please let a certified & competent person to carry out any electrical work according to the user manual.

It is limited to indoor usage. Please turn off the power before installation and uninstallation. Turn on the power after your installation and then add the devices into the App.

Parameters

Operational voltage:	100-240 V AC, 50/60 Hz
Rated current:	Max 10 A (resistive load)
Load type:	Incandescent lamp: 500 W/gang LED lamp: 120 W/gang Energy saving lamp: 200 W/gang
Materials:	Tempered glass panel and fireproof PC
Environment:	Working temperature: 0-40 °C Relative humidity: less than 95%
Wireless standard:	Wi-Fi IEEE802.11b/g/n 2.4 GHz
Security system:	WPA-PSK/WPA2-PSK

Download the APP


Search “Smart Life” in the application store or scan the QR code below.




Installation

Turn off the power and follow the instructions.


- Wiring diagram

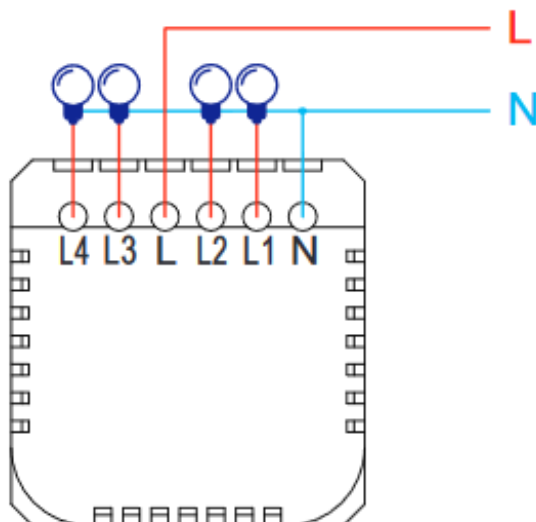

- Use screwdriver to open the glass panel

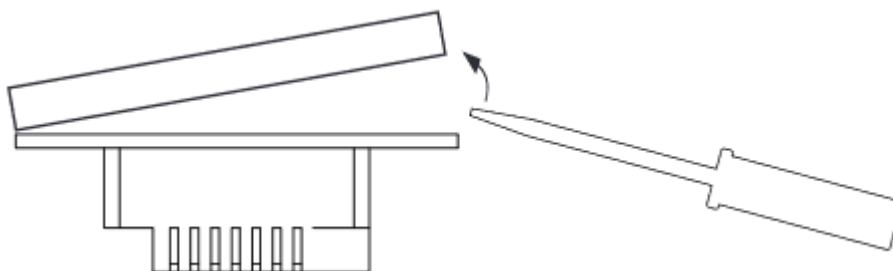

- Put the switch into the installation box and fix it with two screws

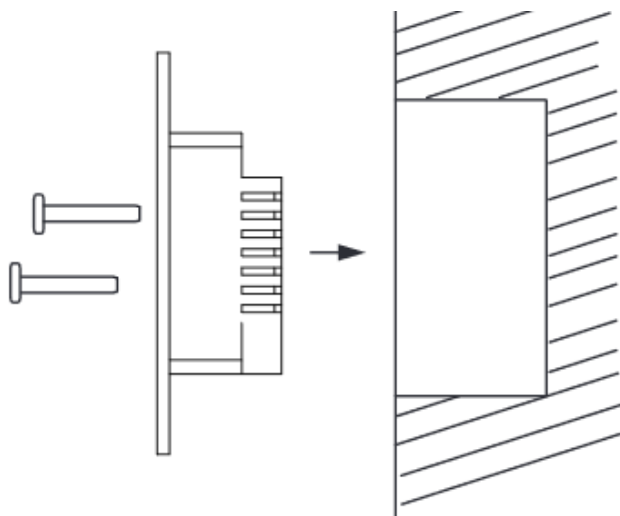

- Cover the glass panel and finish the installation
- Turn on the power

Reset & Switching network configuration mode

LED indicator explained

Wi-Fi indicator	Device status
Blue indicator fast blinking	Fast linking mode, the device is waiting for network connection
Blue indicator blinking slowly	AP mode, the device is waiting for network connection
Blue indicator is ON	Network disconnected
Blue indicator is OFF	Network connected

Reset of Wi-Fi switch

If the Wi-Fi indicator is on or off, press any button 5 times, press it again and hold it for 5 seconds, release when you hear “Di-Di-Di”. Reset was successful.

Switching operation of network between fast blinking (fast linking mode) and slow blinking (AP mode).


Press any button 5 times, press it again and hold it for 5 seconds, release when you hear “Di-Di-Di”. Switch was successful, the indicator will change after a few seconds. Switch the mode of Fast linking and AP by operation described above.

Add device


1. Connecting your mobile with the desired Wi-Fi network
 - Open the APP, finish registration and login
 - Click on the button in the middle to add the device or click the “+” at the top right corner.

Note: The APP can differ due an update, this user manual is only for reference

2. Enter the interface below

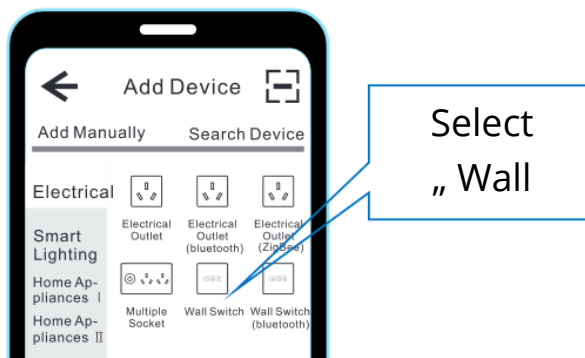

3. Confirm the Wi-Fi indicator is rapidly blinking

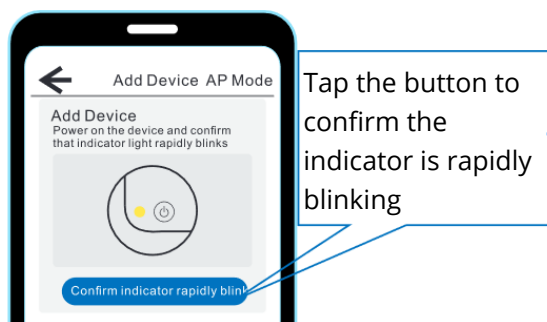

4. Enter the Wi-Fi password and tap “Confirm”

5. Wait patiently while device connects to the network (Device is connected when 100 % appears on the screen)

6. Device successfully added. You can edit the name of the device and area where it belongs. Click “Complete” to finish.

7. Choose the desired device and follow the instructions of the APP

AP Mode

You can choose AP mode if fast linking mode failed

1. Tap “AP Mode” at the top right corner

2. Make sure the Wi-Fi indicator blinks slowly – confirm it by tapping the button on the screen

3. Enter the Wi-Fi password and tap “Confirm”

4. Tap "To connect", the device name is Smartlife_XXXX
5. Find the device and tap "To connect", return after successful connection
6. Wait patiently while device connects to the network
7. Device successfully added. You can edit the name of the device and area where it belongs. Click "Complete" to finish.
8. Choose the desired device and follow the instructions of the APP

Pair and clear up the RF code

1. How to pair the RF code
 - 1.1. (can be turned on and off): Press the key for a long time (the state should be ON at this time). and release the key after 8 seconds when you hear "drops" 2 times. Then press the corresponding button on the remote control and match the RF code of the switch after hearing the "drop" 1 long tone. Work. The key to the remote controller can control the switching of the state of the switch on and off corresponding to the position of the switch.
 - 1.2. 1.2 (Only opens): Press the button for a long time without putting it ON (the state should be on at this time). After 5 seconds, you will hear a "drop" sound. After that, release the button, press the corresponding button on the remote control, and when you hear the long sound of "Drop", turn on. The matching of RF codes is successful. The key of the remote controller can control the corresponding position of the switch to be open.
 - 1.3. 1.3 (Only closes): Press the button for a long time without putting it on (the state should be Turned OFF at this time). After 5 seconds, you will hear a "drop" sound. After that, release the button, press the corresponding button on the remote control, and when you hear the long sound of "Drop", turn it on. The

matching of RF codes is successful. The key of the remote controller can control the corresponding position of the switch to be closed.

2. How to clear up the RF code

Press the button for a long time (the state should be ON at this time)., and after 11 seconds you will hear "drop" 4 times, release the button, all of the switches. The remote-control code was cleared successfully.

Warranty Conditions

A new product purchased in the Alza.cz sales network is guaranteed for 2 years. If you need repair or other services during the warranty period, contact the product seller directly, you must provide the original proof of purchase with the date of purchase.

The following are considered to be a conflict with the warranty conditions, for which the claimed claim may not be recognized:

- Using the product for any purpose other than that for which the product is intended or failing to follow the instructions for maintenance, operation and service of the product.
- Damage to the product by a natural disaster, the intervention of an unauthorized person or mechanically through the fault of the buyer (e.g. during transport, cleaning by inappropriate means, etc.).
- Natural wear and aging of consumables or components during use (such as batteries, etc.).
- Exposure to adverse external influences, such as sunlight and other radiation or electromagnetic fields, fluid intrusion, object intrusion, mains overvoltage, electrostatic discharge voltage (including lightning), faulty supply or input voltage and inappropriate polarity of this voltage, chemical processes such as used power supplies, etc.
- If anyone has made modifications, modifications, alterations to the design or adaptation to change or extend the functions of the product compared to the purchased design or use of non-original components.

EU Declaration of Conformity

Identification data of the manufacturer's / importer's authorized representative:

Importer: Alza.cz a.s.

Registered office: Jankovcova 1522/53, Holešovice, 170 00 Prague 7

IČO: 27082440

Subject of the declaration:

Title: Smart Switch

Model / Type: WS-EUB

The above product has been tested in accordance with the standard(s) used to demonstrate compliance with the essential requirements laid down in the Directive(s):

Directive No. 2014/53/EU

Directive No. 2011/65/EU as amended 2015/863/EU

Prague, 27.8.2020



WEEE

This product must not be disposed of as normal household waste in accordance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE - 2012/19 / EU). Instead, it shall be returned to the place of purchase or handed over to a public collection point for the recyclable waste. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. Contact your local authority or the nearest collection point for further details. Improper disposal of this type of waste may result in fines in accordance with national regulations.



Vážený zákazníku,

děkujeme Vám za zakoupení našeho produktu. Prosíme, pečlivě si přečtěte následující instrukce před prvním použitím a uživatelskou příručku si uschovejte pro pozdější užití. Zejména dbejte na bezpečnostní pokyny. Pokud máte jakékoliv dotazy či připomínky ohledně přístroje, prosíme, obraťte se na zákaznickou linku.



www.alza.cz/kontakt



+420 255 340 111

Dovozce Alza.cz a.s., Jankovcova 1522/53, Holešovice, 170 00 Praha 7, www.alza.cz

Úvod

Spínač Wi-Fi používá k ovládání světel Wi-Fi protokol. Není třeba měnit elektrické spotřebiče a tradiční zapojení, pokud existuje stávající neutrální linka. Starý tradiční spínač lze vyměnit přímo. Jen si jednoduše uvědomte funkci dálkového ovládání aplikace, časovače, ovládání scény atd., pokud pracujete s bezdrátovým routerem. Spínač navíc funguje s inteligentními reproduktory Amazon Alexa, asistentem Google Home, Tmall Genie, Xiaomi a XiaoAi pro hlasové ovládání elektrických spotřebičů.

Základní elektrické práce nechejte provádět podle vašich příruček nebo autorizovanou a kompetentní osobu.

Zařízení je omezeno na vnitřní použití. Před instalováním a odinstalováním vypněte napájení. Po instalaci zapněte napájení a poté přidejte zařízení do aplikace.

Parametry

Provozní napětí:	100-240 V AC, 50/60 Hz
Jmenovitý proud:	Max 10 A (odporová zátěž)
Typ zatížení:	Žárovka: 500 W/gang LED žárovka: 120 W/gang Úsporná žárovka: 200 W/gang
Materiály:	Panel z tvrzeného skla a nehořlavý počítač
Pracovní prostředí:	Pracovní teplota: 0-40 °C Relativní vlhkost: méně než 95%
Bezdrátový standard:	Wi-Fi IEEE802.11b/g/n 2.4 GHz
Bezpečnostní systém:	WPA-PSK/WPA2-PSK

Stažení aplikace


Vyhledejte „Smart Life“ v obchodě s aplikacemi nebo naskenujte QR kód níže.




Instalace

Vypněte napájení a postupujte podle pokynů.


- Elektrické schéma

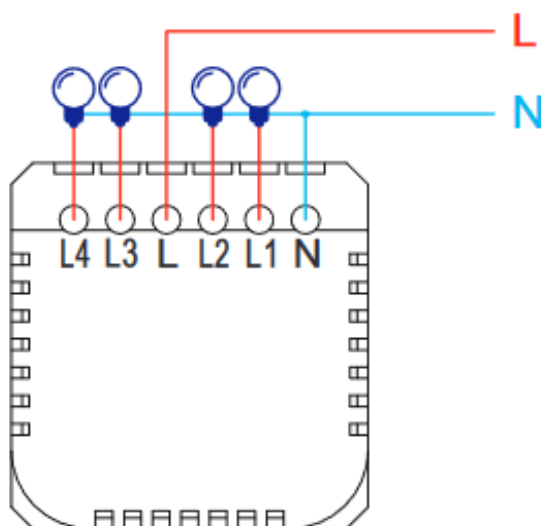

- Pomocí šroubováku otevřete skleněný panel

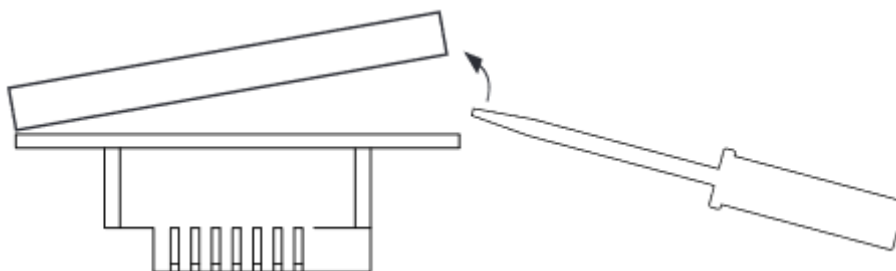

- Vložte spínač do instalační krabíčky a připevněte jej dvěma šrouby

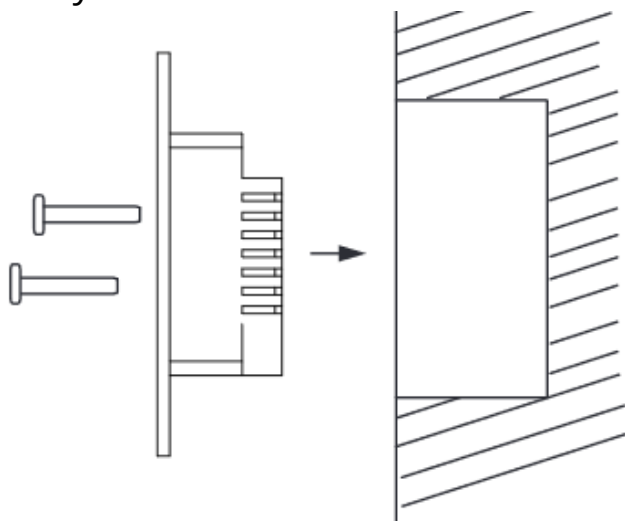

- Zakryjte skleněný panel a dokončete instalaci
- Zapněte napájení

Obnovení a přepnutí režimu konfigurace sítě

Vysvětlení LED indikátoru

Wi-Fi indikátor	Status zařízení
Modrý indikátor rychle bliká	V režimu rychlého propojení zařízení čeká na připojení k síti
Modrý indikátor pomalu bliká	Režim aplikace, zařízení čeká na připojení k síti
Modrý indikátor je zapnutý	Síť odpojena
Modrý indikátor je vypnutý	Síť připojena

Resetování Wi-Fi spínače

Pokud je indikátor Wi-Fi zapnutý nebo vypnutý, stiskněte pětkrát libovolné tlačítko, stiskněte jej znovu a podržte jej po dobu 5 sekund, uvolněte jej, jakmile uslyšíte „Di-Di-Di“. Reset byl úspěšný.

Přepínání provozu sítě mezi rychlým blikáním (režim rychlého propojení) a pomalým blikáním (režim aplikace).

Stiskněte libovolné tlačítko 5krát, znovu stiskněte a podržte jej po dobu 5 sekund, uvolněte jej, jakmile uslyšíte „Di-Di-Di“. Přepnutí proběhlo úspěšně, indikátor se po několika sekundách změní. Přepněte režim rychlého propojení a aplikace výše popsaným postupem.


Přidat zařízení

1. Připojení mobilu k požadované síti Wi-Fi.

- Otevřete aplikaci, dokončete registraci a přihlášení.
- Kliknutím na tlačítko uprostřed přidáte zařízení nebo klikněte na „+“ v pravém horním rohu.

Poznámka: Aplikace se může v důsledku aktualizace lišit, tato uživatelská příručka slouží pouze pro informaci.

2. Vstupte do rozhraní níže.

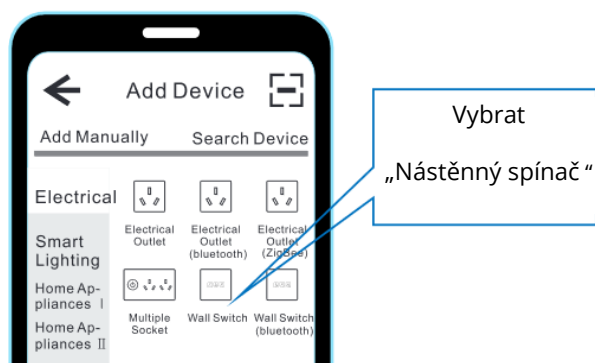

3. Zkontrolujte, zda indikátor Wi-Fi rychle bliká.



4. Zadejte heslo Wi-Fi a klepněte na „Confirm“ (Potvrdit).

5. Vyčkejte, než se zařízení připojí k síti (Zařízení je připojeno, když se na obrazovce objeví 100%).

6. Zařízení bylo úspěšně přidáno. Můžete upravit název zařízení a oblast, kam patří. Dokončete kliknutím na „Complete“ (Dokončit).

7. Vyberte požadované zařízení a postupujte podle pokynů aplikace.

Režim aplikace

Pokud režim rychlého připojení selhal, můžete zvolit režim aplikace.

1. Klikněte na „AP Mode“ (Režim aplikace) v pravém horním rohu.
2. Ujistěte se, že indikátor Wi-Fi bliká pomalu - potvrďte to kliknutím na tlačítko na obrazovce.
3. Zadejte heslo Wi-Fi a klikněte na “Confirm” (Potvrdit).
4. Klepněte na “To connect” (Připojit), název zařízení je Smartlife_XXXX.
5. Najděte zařízení a klikněte na “To connect” (Pro připojení), po úspěšném připojení se vraťte.
6. Trpělivě vyčkejte, než se zařízení připojí k síti.
7. Zařízení bylo úspěšně přidáno. Můžete upravit název zařízení a oblast, kam patří. Dokončete kliknutím na “Complete” (Dokončit).
8. Vyberte požadované zařízení a postupujte podle pokynů aplikace.

Spárování a vymazání RF kódu

1. Jak spárovat RF kód

- 1.1. (Lze zapnout a vypnout): Dlouze stiskněte tlačítko (stav by měl být v tuto chvíli zapnutý). Uvolněte klíč po 8 sekundách, když uslyšíte dvakrát „poklesnutí“. Poté, co uslyšíte dlouhý „tón“, stiskněte odpovídající tlačítko na dálkovém ovladači a spárujte RF kód spínače. Klíčem k dálkovému ovladači lze ovládat přepínání stavu zapnutí a vypnutí podle polohy spínače.
- 1.2. (Pouze se otevře): Stiskněte tlačítko po dlouhou dobu bez zapnutí (stav by měl být v tuto chvíli zapnutý). Po 5 sekundách uslyšíte zvuk „poklesnutí“. Poté tlačítko uvolněte, stiskněte odpovídající tlačítko na dálkovém ovladači a jakmile uslyšíte dlouhý zvuk „poklesnutí“, zapněte jej. Přiřazení RF kódů bylo úspěšné. Klíč dálkového ovladače může ovládat odpovídající polohu spínače, který má být otevřen.

- 1.3. (Pouze se zavře): Stiskněte tlačítko po dlouhou dobu bez zapnutí (stav by měl být v tuto chvíli vypnutý). Po 5 sekundách uslyšíte zvuk „poklesnutí“. Poté tlačítko uvolněte, stiskněte příslušné tlačítko na dálkovém ovladači a jakmile uslyšíte dlouhý zvuk „poklesnutí“, zapněte jej. Přiřazení RF kódů bylo úspěšné. Klíč dálkového ovladače může ovládat odpovídající polohu spínače, který má být zavřen.
2. Jak vymazat RF kód
Stiskněte tlačítko na dlouhou dobu (stav by měl být v tuto chvíli zapnutý). Asi po 11 sekundách uslyšíte 4krát „poklesnutí“, uvolněte tlačítko, všechny spínače. Kód dálkového ovládání byl úspěšně vymazán.

Záruční podmínky

Na nový výrobek pořízený v prodejní síti Alza.cz je poskytnuta záruka 2 roky. Pokud potřebujete opravu nebo jiné služby během záruční doby, kontaktujte přímo prodejce výrobku, je nutné předložit originální doklad o zakoupení s původním datem zakoupení. Kopie dokladů o zakoupení výrobku, změněné, doplněné, bez původních údajů nebo jinak poškozené doklady o zakoupení výrobku nebudou považovány za doklady prokazující zakoupení reklamovaného výrobku.

Za rozpor se záručními podmínkami, pro který nemusí být uplatněný reklamační nárok uznán, se považuje:

- Používání výrobku k jinému účelu, než pro který je výrobek určen nebo nedodržení pokynů pro údržbu, provoz a obsluhu výrobku.
- Poškození výrobku živelnou pohromou, zásahem neoprávněné osoby nebo mechanicky vinou kupujícího (např. při přepravě, čištění nevhodnými prostředky apod.).
- Přirozené opotřebení a stárnutí spotřebního materiálu nebo součástí během používání (jako jsou např. baterie atd.).
- Vystavení nepříznivému vnějšímu vlivu, např. slunečnímu a jinému záření či elektromagnetickému poli, vniknutí tekutiny, vniknutí předmětu, přepětí v síti, napětí vzniklému při elektrostatickém výboji (včetně blesku), chybnému napájecímu nebo vstupnímu napětí a nevhodné polaritě tohoto napětí, vlivu chemických procesů např. použitých napájecích článků apod.

Pokud byly kýmkoliv provedeny úpravy, modifikace, změny konstrukce nebo adaptace ke změně nebo rozšíření funkcí výrobku oproti zakoupenému provedení nebo použití neoriginálních součástí.

EU PROHLÁŠENÍ O SHODĚ

Identifikační údaje dovozce:

Dovozce: Alza.cz a.s.

Registrované sídlo: Jankovcova 1522/53, Holešovice, 170 00 Praha 7

IČO: 27082440

Předmět prohlášení:

Název: Inteligentní Wi-Fi spínač

Model / Typ: WS-EUB

Výše uvedený produkt byl testován v souladu s normou (normami) používanými k prokázání souladu se základními požadavky stanovené směrnicí (směrnic):

Směrnice č. 2014/53/EU

Směrnice č. 2011/65/EU ve znění 2015/863/EU

Praha, 27.8.2020



WEEE

Tento produkt nesmí být likvidován jako běžný domácí odpad v souladu se směrnicí EU o likvidaci elektrických a elektronických zařízení (WEEE – 2012/19/EU). Místo toho musí být vrácen v místě zakoupení nebo odevzdán ve veřejné sběrně recyklovatelného odpadu. Správnou likvidaci přístroje pomůžete zachovat přírodní zdroje a napomáháte prevenci potenciálních negativních dopadů na životní prostředí a lidské zdraví. Další podrobnosti si vyžádejte od místního úřadu nebo nejbližšího sběrného místa. Při nesprávné likvidaci tohoto druhu odpadu mohou být v souladu s národními předpisy uděleny pokuty.

