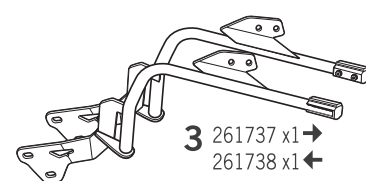


SHAD

HONDA CB 500 X '14
H0CX54iF

3P
SYSTEM

DESIGNED IN
BARCELONA

- | | | | | |
|--|---|---|---|--|
| 
1 261735 x1 →
261736 x1 ← | 
2 260648 x2
Ø16 Ø9 x 5 | 
3 261737 x1 →
261738 x1 ← | 
4 304081 x4
M8 x 20 DIN 7380 | 
5 303020 x12
Ø8 |
| | 
6 302024 x6
M8 | 
7 304170 x1
M8 x 60 Din 7380 | 
8 304053 x1
M8 x 30 DIN 7380 | |

! WARNING!

(GB)

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

(E)

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

(D)

Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

(I)

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

(F)

Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

