


# ■ Charging your InkCase i7



Battery Full

■ Battery Empty 

### ■ Switching on your InkCase i7

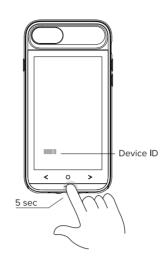

Press and hold the Power Button for 5 nds, to switch on the InkCase i7.

Note the Device ID at the bottom left corner of the startup screen during boot up. You will need this Device ID during the InkCase setup.


### ■ Switching off your InkCase i7



To switch off the InkCase i7, press and hold the Power Button for 5 sec.


The last viewed image will remain on the display after the InkCase i7 is switched off.

### ■ Standby Mode

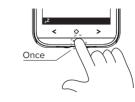


Press the Power Button once to switch to standby mode. Standby mode also locks the touch buttons from accidental clicks.

### ■ Restarting the InkCase

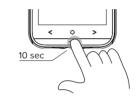

Press and hold the Power Button for 10 secs to reset an unresponsive

#### ■ Navigating the InkCase

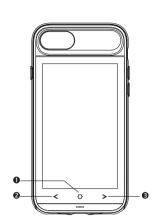

Tap on the Right or Left Touch Buttons (2 & 3) on the InkCase to navigate to the next or previous display.

Double tap on the Menu Button (1) to switch between functions. A popup dialog box will appear, use the left and right touch buttons to switch between various modes. Tap Menu Button (1) once to select.

### ■ Downloading InkCase App

Download "InkCase" app from iTunes App Store.



InkCase app enables you to:

© Connect InkCase to iPhone via Bluetooth

Send images from iPhone to InkCase

Send eBooks to InkCase for eReading

্ব Access Live Information

Save News articles

### ■ Setting up InkCase i7 with your iPhone



Launch InkCase App. Select 'My InkCase' tab to setup your new InkCase i7. Pair InkCase i7 and iPhone via Bluetooth in Device List.

You should recognize the Device ID from the startup screen.

Note: Make sure to allow all permissions for InkCase. Go to iPhone Settings > InkCase . Also set Location to 'Always'.

# ■ Sending images to InkCase i7



Click Photos tab in InkCase app. Select an image from the photo album or take a new photo. Crop and save image. Select saved image to send to InkCase i7.

# ■ Deleting images from InkCase i7

Navigate to image you want to delete using left and right touch buttons. Press and hold the Menu Button for 3 seconds to access delete menu-



Press and Hold Menu Button for 3 seconds to access Delete Menu.

### ■ Sending ebooks to InkCase i7

Method 1: Import ebooks to InkCase

Method 2: Access ebook files via email or any file sharing app on the iPhone. Select ebook file and share to InkCase app.



Click Reader tab in InkCase app. Select the desired ebook and send to InkCase i7.

# ■ Deleting ebooks from InkCase i7

Double tap Menu Button to access ebooks function in InkCase i7. Tap Menu Button once to enter ebook lists. Press and Hold Menu Button for 3 seconds to access delete menu. (pg.9)

# ■ Sending News to InkCase i7

Navigate to any articles in iPhone's browser. Select the share button  $\dot{\mathbb{1}}$ to send to InkCase i7.

Alternatively, you can also share it from any dedicated News apps such as CNN and BBC.



Navigate to Read Later tab in InkCase app and select Sync button to send all articles to InkCase i7.

### ■ Deleting News from InkCase i7

Method 1: Click Read Later tab in InkCase app. Swipe left on article you wish to delete and select 'archive'. Select Sync button again.

Method 2: Double tap Menu Button to access News function in InkCase i7. Tap Menu Button once to enter News lists. Press and Hold Menu Button for 3 seconds to access delete menu. (pg.9)

# ■ Setting Up Live Information Center

Double tap Menu Button to access Live Information Center. Allow all permission for InkCase at Settings > InkCase.

Activities tracking: Open Health app > Sources > InkCase > Allow all

Reminders: Open Reminders app > Input tasks > Set tasks to priority '!', '!!'

# **■** Firmware Upgrade

Download the Firmware Upgrade Tool

Install the Firmware Upgrade Tool on your computer. Launch the Firmware Upgrade Tool, select desired language. Connect InkCase i7 to the computer with the InkCase's magnetic USB cable

If InkCase i7 was not detected, Press and hold the Power Button for 10 secs. Follow on screen instructions to complete the firmware upgrade.

# **■** Specifications

(217dpi)

- Supports iPhone 7
- Display: 4.3 inch E Ink • Screen Resolution: 480 x 800
- Bluetooth 4.0 BLE • 1 Tact Button and 3 Touch Buttons
- Dimension: 140.7 x 69.5 x 11 mm
- Weight: 62g
- Battery Capacity: 460mAH
- Standby Time: 5 days

# ■ Icons Glossary

- () Power Off
- zZ Standby Mode
- Battery Full
- □ Battery Empty **■** + Battery Charging
- 22 Bluetooth Disconnected
- Bluetooth Connected
- InkCase Photo
- ☐ InkCase Ebooks
- 公 InkCase Notifications 🖈 Read It Later
- Transferring More Pages

Delete Image