




User Manual

- Please read this manual before operating this scanner.
- After you finish reading this manual, store it in a safe place for future reference.

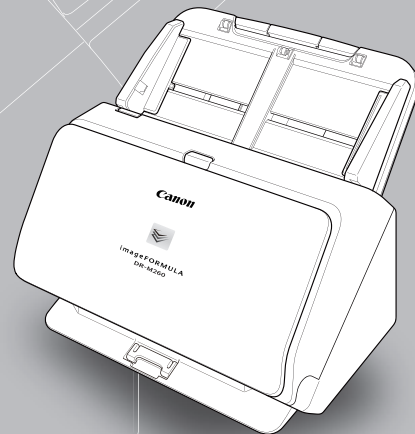

FCC REGULATIONS (For 120 V model)

Document Scanner, Model M111281

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment OFF and ON, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Use of shielded cable is required to comply with Class B limits in Subpart B of Part 15 of FCC Rules.

Do not make any changes or modifications to the equipment unless otherwise specified in the manual. If such changes or modifications should be made, you could be required to stop operation of the equipment.

Canon U.S.A. Inc.

ONE CANON PARK, MELVILLE, NY 11747, U.S.A.

Tel. No. (800)652-2666

RADIO INTERFERENCE REGULATIONS (For 120 V models)

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the interference-causing equipment standard entitled "Digital Apparatus", ICES-003 of the Industry Canada.

RÈGLEMENT SUR LE BROUILLAGE RADIOÉLECTRIQUE (For 120 V models)

Cet appareil numérique respecte les limites de bruits radioélectriques applicables aux appareils numériques de Classe B prescrites dans la norme sur le matériel brouilleur: "Appareils Numériques", NMB-003 édictée par l'Industrie Canada.

International ENERGY STAR® Office Equipment Program



As an ENERGY STAR® Partner, CANON ELECTRONICS INC. has determined that this machine meets the ENERGY STAR® Program guidelines for energy efficiency.

The International ENERGY STAR® Office Equipment Program is an international program that promotes energy saving through the use of computers and other office equipment. The program backs the development and dissemination of products with functions that effectively reduce energy consumption. It is an open system in which business proprietors can participate voluntarily. The targeted products are office equipment, such as computers, monitors, printers, fax, machine, copiers, and scanners. The standards and logos are uniform among participating nations. This model doesn't provide setting options for power management.

European Union (and EEA) only.



This symbol indicates that this product is not to be disposed of with your household waste, according to the WEEE Directive (2002/96/EC) and your national law. This product should be handed over to a designated collection point, e.g., on an authorized one-for-one basis when you buy a new similar product or to an authorized collection site for recycling waste electrical and electronic equipment (EEE). Improper handling of this type of waste could have a possible negative impact on the environment and human health due to potentially hazardous substances that are generally associated with EEE. At the same time, your cooperation in the correct disposal of this product will contribute to the effective usage of natural resources. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, waste authority, approved WEEE scheme or your household waste disposal service. For more information regarding return and recycling of WEEE products, please visit www.canon-europe.com/environment. (EEA: Norway, Iceland and Liechtenstein)

Für EMVG

Dieses Produkt ist zum Gebrauch im Wohnbereich, Geschäfts- und Gewerbebereich sowie in Kleinbetrieben vorgesehen.

Model Names

The following name may be provided for the safety regulations in each sales region of the Document Scanner.

DR-M260: Model M111281

Reproduction Warning

This device is designed to be used in a legal manner, in accordance with all applicable laws, including, but not limited to, counterfeit and copyright laws, as well as laws pertaining to national security. Any person(s) found to have reproduced any of the following materials (regardless of whether such reproduction was intentional or not) for the purpose of misrepresenting such material as the original may be prosecuted in accordance with the applicable laws and regulations.

- Paper money or bank notes (domestic and foreign)
- Postage stamps, revenue stamps, or other similar stamps
- Stock certificates, bond certificates, promissory notes, cheques, or other valuable certificates
- Passports, licenses, or other certificates or documents issued by government officials or agencies

This is not an exhaustive list.

Canon is not responsible for how this scanner is used by an individual. Please note that certain intellectual property is protected by copyright law, and copyrighted items may not be reproduced without the express permission of the copyright holder except for personal or household use under limited circumstances.

Trademarks

- Canon and the Canon logo are registered trademarks, of Canon Inc. in the United States and may also be trademarks or registered trademarks in other countries.
- imageFORMULA is a trademark of CANON ELECTRONICS INC.
- Microsoft, Windows, PowerPoint, and SharePoint are registered trademarks or trademarks of Microsoft Corporation in the United States and other countries.
- Microsoft product screen shot(s) reprinted with permission from Microsoft Corporation.
- ENERGY STAR® is a registered trademark of the United States Environmental Protection Agency.
- ISIS is a registered trademark of Emc Corporation in the United States.
- Adobe, the Adobe logo, Acrobat, the Adobe PDF logo, and Adobe Reader are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.



Powered by
ADOBE® PDF LIBRARY

- Other product and company names herein may be the trademarks of their respective owners. However, the ™ and ® symbols are not used in this document.

Copyright

Copyright 2017 by CANON ELECTRONICS INC. All rights reserved. No part of this publication may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, or by any information storage or retrieval system without the prior written permission of CANON ELECTRONICS INC.

Disclaimers

The information in this document is subject to change without notice.

CANON ELECTRONICS INC. MAKES NO WARRANTY OF ANY KIND WITH REGARD TO THIS MATERIAL, EITHER EXPRESS OR IMPLIED, EXCEPT AS PROVIDED HEREIN, INCLUDING WITHOUT LIMITATION, THEREOF, WARRANTIES AS TO MARKETABILITY, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OF USE OR NON-INFRINGEMENT. CANON ELECTRONICS INC. SHALL NOT BE LIABLE FOR ANY DIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES OF ANY NATURE, OR LOSSES OR EXPENSES RESULTING FROM THE USE OF THIS MATERIAL.

CANON ELECTRONICS INC. IS NOT LIABLE FOR THE STORAGE AND HANDLING OF DOCUMENTS SCANNED WITH THIS PRODUCT, OR THE STORAGE AND HANDLING OF RESULTING SCANNED IMAGE DATA.

IF YOU INTEND TO DISCARD THE ORIGINALS OF SCANNED DOCUMENTS, YOU THE CUSTOMER ARE RESPONSIBLE FOR INSPECTING THE SCANNED IMAGES AND VERIFYING THAT DATA IS INTACT.

THE MAXIMUM LIABILITY OF CANON ELECTRONICS INC. UNDER THIS WARRANTY IS LIMITED TO THE PURCHASE PRICE OF THE PRODUCT COVERED BY THE WARRANTY.


Setup Guide

Please read first.


STEP 1

Checking the Accessories


If any of the items listed below are missing or damaged, contact your local authorized Canon dealer or service representative.

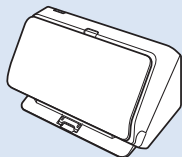


Scanner




Feed Tray

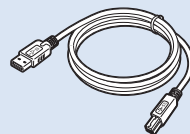


USB Cable
Type A/Type B

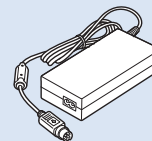

AC Adapter



Power Cord



Setup Guide



Warranty Card
(U.S.A. and Canada only)



Setup Disc

- Items included in this manual are subject to change without notice.
- You must keep the machine's packaging and packing materials for storing or transporting the machine.
- For Europe, a print version of *Reference Guide* is supplied in English.
The content of the *Reference Guide* can be found in other languages in the *User Manual* on the Setup Disc.
- The shape of the power plug varies by country and region.

Setup Disc Contents

Install the following software necessary for using the scanner from the supplied Setup Disc.

- **CaptureOnTouch**

This is a dedicated scanning application for DR Series scanners.

- **CapturePerfect 3.1**

This is a scanning application for the DR series scanner.








- **Scanner Driver**

This is the scanner driver for this product.

- **! IMPORTANT**

When scanning with third-party software, use the scanner driver of this scanner to configure scanning conditions. For details on how to open the scanner driver, refer to the manuals supplied with each software application.

After taking the scanner out of the box, install the feed tray and remove the protective sheets (▼).

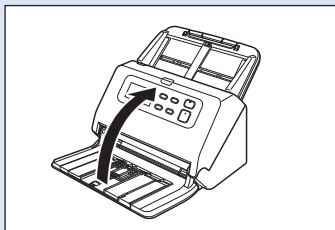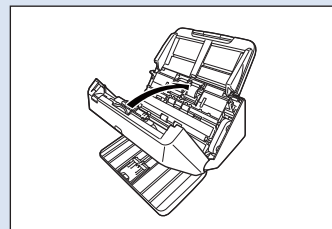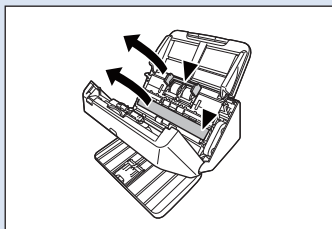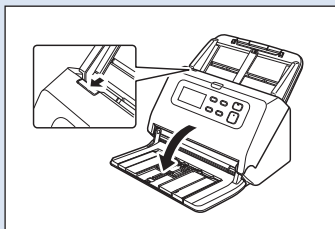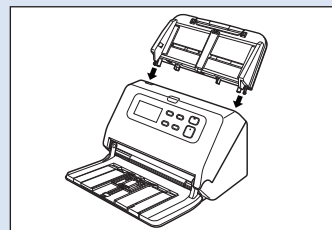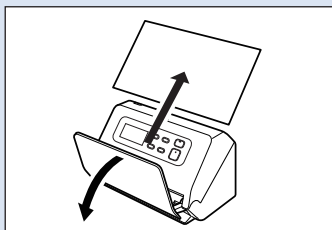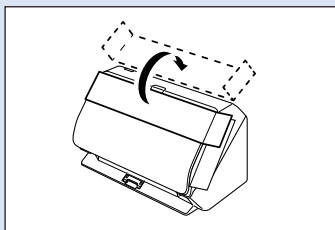

STEP 2

Installing the Software

System requirements

To use the scanner, your computer must satisfy the following system requirements.

Computer

CPU:	Intel Core 2 Duo 1.66GHz or faster
Memory:	1 GB or more
Hard disk:	3 GB or more available space required for installation of all software
USB interface:	USB3.1 Gen1/USB2.0
Monitor:	Resolution of 1024 × 768 (XGA) or better recommended.
Optical drive:	Drive capable of reading CDs.

Operating system

- Microsoft Windows 7 Service Pack 1 or later (32-bit and 64-bit editions)
- Microsoft Windows 8.1 (32-bit and 64-bit editions)
- Microsoft Windows 10 (32-bit and 64-bit editions)
- Microsoft Windows Server 2008 R2 Service Pack 1 or later
- Microsoft Windows Server 2012 R2
- Microsoft Windows Server 2016

This is the environment as of May 2017.

For the latest software support information, go to the Products page on the Canon website.

Other requirements

- An ISIS-compatible application or a TWAIN-compatible application that is compatible with the above operating systems.
- .NET Framework 4.0 or later



IMPORTANT

- If you connect this scanner to a USB3.1 Gen1 enabled USB port, some computers may not recognize the scanner. If unrecognized, connect it to a USB2.0 port.
- Use the USB interface provided as standard with your computer. However, normal operation is not guaranteed with all USB interfaces, even if present as standard equipment on the computer. For details, consult your local authorized Canon dealer.

- Scanning speeds are lower if your computer's standard USB interface is USB Full-Speed (equal to USB 1.1.)
- The USB cable you are using should be the one originally included with the scanner.
- If the CPU, memory, interface card, and other specifications do not satisfy the installation requirements, the scanning speed may be greatly reduced and transmission may take a long time.
- Even if the computer satisfies the system requirements, the scanning speed may vary, depending on the specification of the computer and the environment.
- The scanner drivers provided with the scanner do not necessarily operate on all ISIS or TWAIN-compatible applications. For details, contact your application software retailer.
- In Windows 10 tablet mode, the software may disrupt the display.
- The Desktop Experience feature must be enabled for Windows Server 2008 R2 and Windows Server 2012 R2.

Precautions for Use in 64-bit Operating Systems

- All ISIS/TWAIN-compatible applications are not guaranteed to operate.
- Scanning speed may vary depending on the specifications of your computer.


Software Installation

! IMPORTANT


- Install the software before connecting the scanner to the computer.
- Log on to Windows as an Administrator.
- Close all other applications before installing the software.

1 Insert the Setup Disc into the Disk drive of the computer.


The setup menu automatically starts up when you insert the disc into the drive. (If the menu does not start up, execute setup.exe from the disc.)

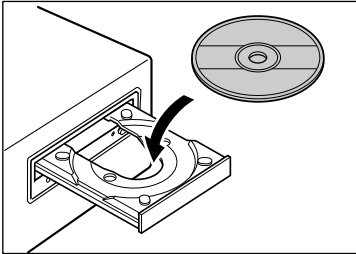

If the following screen appears, click [Yes] or [Allow].

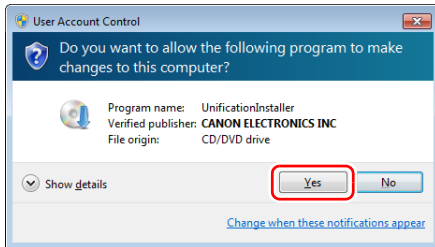

2 Click [Typical Installation].

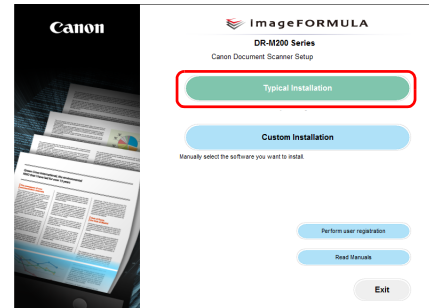


About Installation of the Bundled Software

When installing the bundled software, you can choose which of the bundled software to install if you select [Custom Installation].


💡 Hint

If you want to reinstall only specific software that you have previously uninstalled, select [Custom Installation] and specify the software.


3 Click [Install].

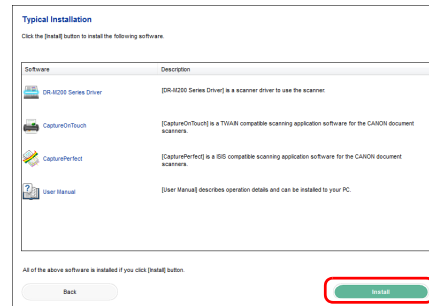

4 Follow the instructions on the screen to complete installation.

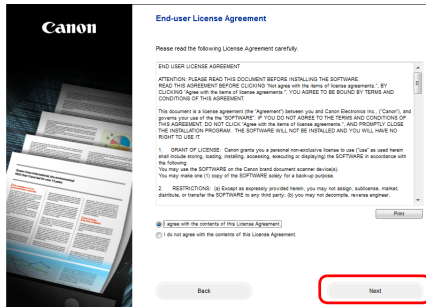

5 Click [Exit] to finish installing the software.

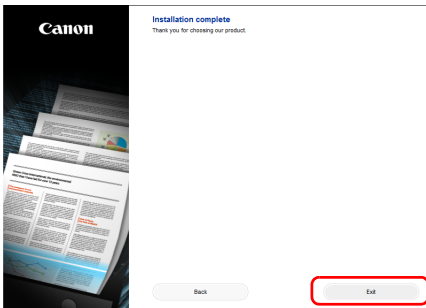


STEP 3

Connecting to a Computer

Connect the scanner to the computer and the power supply.

! IMPORTANT

- Do not connect the scanner to the computer before installing the software.
- Before connecting the scanner to the computer, verify that the power of the scanner is OFF.
If the power is ON, turn it OFF.

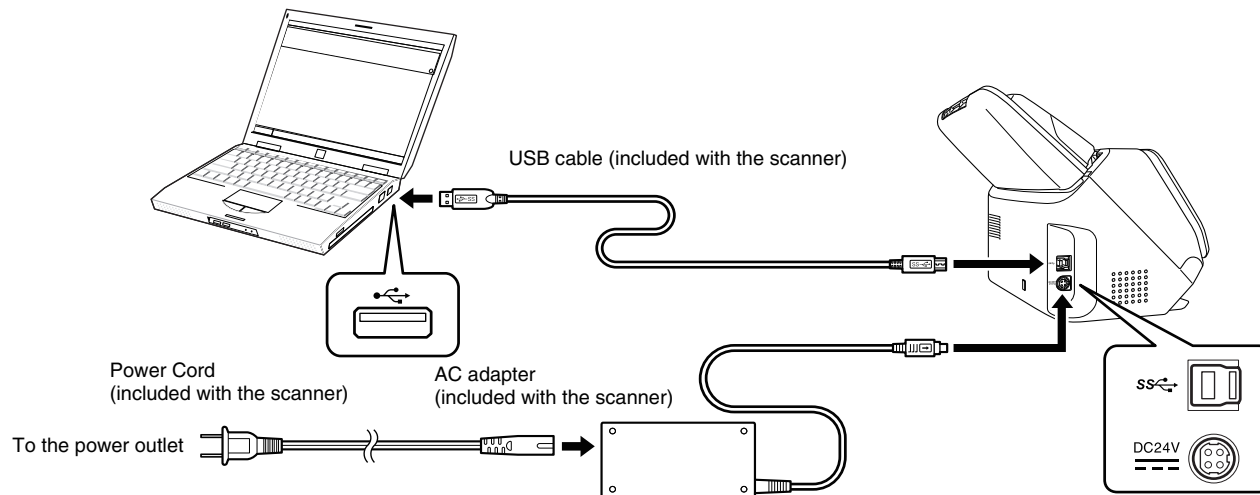


STEP 4

Turning the Power ON

The power of the scanner can be turned ON and OFF with the power button on the front of the scanner.

- 1 Make sure that the scanner and computer are connected properly.
- 2 Press the power button.

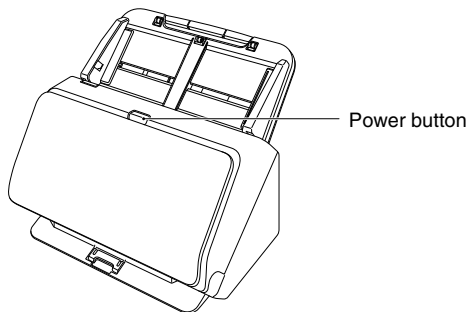


The power button lights blue when the power turns ON.




Hint

A balloon message such as shown below appears on the task bar. If you wait a while, automatic scanner recognition will end and the scanner will become ready to use.

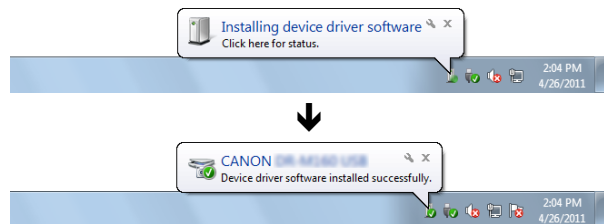

When the scanner is properly connected to the computer, the (CaptureOnTouch) icon appears on the taskbar as follows.



If the taskbar icon appears as , the scanner is not properly connected to the computer. Check the status of the power switch and USB cable.

Turning Off the Power

Press and hold the power button until the indicator goes out.



IMPORTANT

- After turning the scanner off, wait at least 10 seconds before turning it back on.
- If you will not be using the scanner for an extended period, you should disconnect the power cord from the AC outlet for safety.



Hint

The scanner's auto power off setting is enabled by default, and the scanner will turn off automatically if it is not operated for 4 hours. For details on how to disable this setting, see ["Removing the Document Feed Tray" on p. 89.](#)

This completes setup.

Introduction

Thank you for purchasing the Canon imageFORMULA DR-M260 Document Scanner.

Please read the following manuals carefully and familiarize yourself with the functions of the scanner before use to ensure you sufficiently understand the functions and make the most of the scanner's capabilities. After reading the manuals, store them in a safe place for future reference.

Manuals for the Scanner

Documentation for this scanner consists of the following manuals.

● Setup Guide


This describes setup procedures for the scanner. Read this manual when you first use the scanner.

● User Manual (this manual)

This manual contains the operating procedures of the scanner.
(PDF electronic manual only)


Hint

- The manual (User Manual) for this scanner is stored on the Setup Disc as an electronic manual in PDF format.
- If you are using Windows, the User Manual (electronic manual) will be registered to the following location when the software is installed.

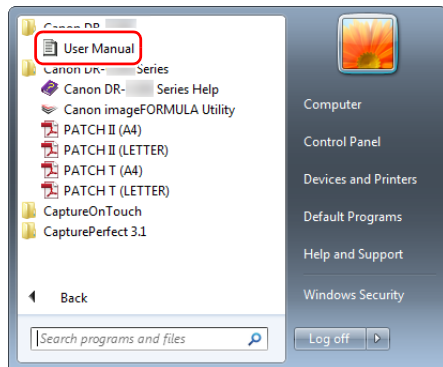

Hint

In Windows 8.1, it is registered at the following location.

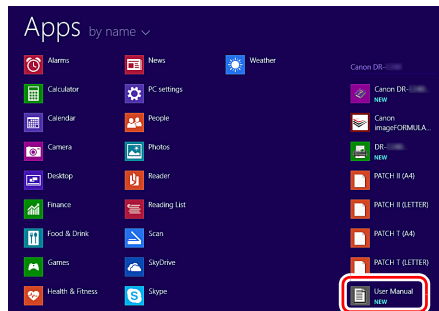

Symbols Used in This Manual

The following symbols are used in this manual to explain procedures, restrictions, handling precautions, and instructions that should be observed for safety.



WARNING

Indicates a warning concerning operations that may lead to death or injury to persons if not performed correctly. To use the scanner safely, always pay attention to these warnings.



CAUTION

Indicates a caution concerning operations that may lead to injury to persons, or damage to property if not performed correctly. To use the scanner safely, always pay attention to these cautions.



IMPORTANT

Indicates operational requirements and restrictions. Be sure to read these items carefully to operate the scanner correctly, and avoid damaging the scanner.



Hint

Indicates a clarification of an operation, or contains additional explanations for a procedure. Reading these notes is highly recommended.

Table of Contents

Setup Guide	5	Setting the Index	58
Turning Off the Power	11	Scanning Shortcut setting	59
Introduction	12	About file formats	59
Symbols Used in This Manual	13	Environmental Settings	60
Before Using the Scanner	15	Scanning with CapturePerfect	63
Important Safety Instructions	15	Scanning with CapturePerfect	63
Installation Location	15	Setting the Scanner Driver	65
AC Adapter	15	Configuration and Functions of the Scanner Driver	65
Moving the Scanner	16	Setting Basic Scanning Conditions	68
Handling	16	More Advanced Scanning Methods	
Disposal	17	(Batch Separation)	78
Features of the Scanner	18	Batch Separation (Insert blank page)	78
Names and Functions of Parts	20	Batch separation using patch code sheets	78
Basic Operation	25	Maintenance	81
Documents	25	Daily Maintenance	81
How to Place Documents	27	Cleaning the Scanner	81
Scanning multiple documents	27	Cleaning the Inside of the Scanner	81
When scanning a document one page at a time (non separation mode)	29	Cleaning the Sensor Glass and the Rollers	81
Loading passports	29	Replacing Consumable Parts	84
Placing Cards	30	Removing the Document Feed Tray	89
Placing Folded Documents	31	About the Canon imageFORMULA Driver Setting Tool	89
Scanning with Carrier Sheets	32	Troubleshooting	91
Setting the Long Document Mode	33	Common Problems and Solutions	91
Detecting a document double feed	35	Software Troubleshooting	94
Detecting Skewed Documents	38	Useful tips	95
Paper feed error detection	39	Clearing a Paper Jam	97
Scanning methods	41	Error message	99
Scanning with CaptureOnTouch	41	Uninstalling the Software	100
What is CaptureOnTouch?	41	Appendix	101
Starting and Exiting CaptureOnTouch	42	Specifications	101
Selecting a scanner	43	Replacement parts	102
Screen Descriptions	43	Option	102
Standard Scanning	44	About the Flatbed Scanner Unit 102/	
Scanning Shortcut	46	Flatbed Scanner Unit 201	102
Select document settings	55	Dimensions	103
Setting the Batch Separation	56	Index	104
Setting the output	57		

Before Using the Scanner


Important Safety Instructions

To ensure the safe operation of this scanner, be sure to read the safety warnings and precautions described below.

Installation Location

The performance of this scanner is affected by the environment in which it is installed. Make sure that the location where the scanner is installed meets the following environmental requirements.

- Provide adequate space around the scanner for operation, maintenance, and ventilation.

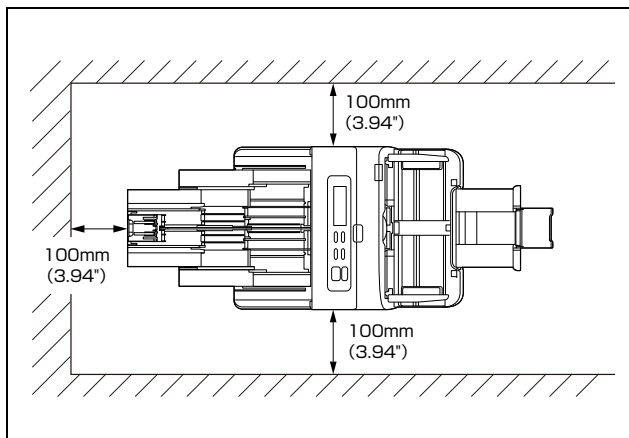

- Provide adequate space in front of the scanner for documents output after being scanned.
- Avoid installing the machine in direct sunlight. If this is unavoidable, use curtains to shade the scanner.
- Avoid locations where a considerable amount of dust accumulates as dust may adversely affect the inside of the scanner.
- Avoid warm or humid locations, such as in the vicinity of a water faucet, water heater, or humidifier. Avoid locations where ammonia gas is emitted. Avoid locations near volatile or flammable materials, such as alcohol or paint thinner.
- Avoid locations that are subject to vibration.


- Avoid exposing the scanner to rapid changes in temperature. If the room in which the scanner is installed is cold but rapidly heated, water droplets (condensation) may form inside the scanner. This may result in a noticeable degradation in scanning quality. The following conditions are recommended for optimal scanning quality:
Room temperature: 10 °C to 35 °C (50 °F to 95 °F)
Humidity: 20% to 80% RH
- Avoid installing the scanner near equipment that generates a magnetic field (e.g. speakers, televisions, or radios.)
- Do not block the exhaust port. Doing so could cause the scanner to overheat, creating a fire hazard.

AC Adapter

- Connect only to a power outlet of the rated voltage and power supply frequency (120 V, 60 Hz or 220-240 V, 50/60 Hz depending on your region).
- Do not connect other electrical equipment to the same power outlet to which the scanner is connected. Also, when using an extension cord, make sure that the extension cord is rated for the current requirements of the scanner.
- Never try to take the AC adapter apart or modify it in any way, as this is dangerous.
- The power cord may become damaged if it is often stepped on or if heavy objects are placed on it.
- Do not use the power cord while it is coiled.
- Do not pull directly on the power cord. When disconnecting the power cord, grasp the plug and remove it from the outlet.
- Keep the area around the power cord clear of objects so that the power cord can be disconnected easily in an emergency.
- Do not use an AC adapter other than the one provided with the scanner. Do not use the AC adapter provided with the scanner with other products.
- If you have any questions regarding the power supply, contact your local authorized Canon dealer or service representative for further information.

Moving the Scanner

- When moving the scanner, always hold it with both hands to avoid dropping it.
- Make sure to disconnect the interface cable and AC adapter before moving the scanner. If the scanner is transported with these items connected, the plugs and connectors may be damaged.

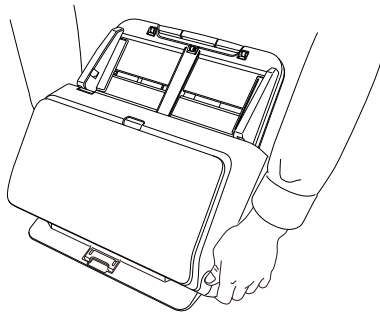

Handling

WARNING

Note the following precautions whenever using the scanner. Failure to do so may result in a fire or electric shock.

- Never use alcohol, benzene, paint thinner, aerosol sprays, or any other highly flammable substance near the scanner.
- Do not cut, damage, or modify the power cord. Do not place heavy objects on the power cord, and do not pull or excessively bend the power cord.
- Never connect the power cord when your hands are wet.
- Do not connect the scanner to a multi plug power strip.
- Do not knot or coil the power cord as this may result in a fire or electric shock. When connecting the power cord, make sure that the power plug is securely and completely inserted into the power outlet.

- The supplied power cord set is intended for use with this scanner only. Do not use it with other electronic equipment. In addition, do not use power cord sets other than the one supplied with the scanner. Doing so may result in fire or electric shock.
- Do not take the scanner apart or modify it.
- Never try to take the AC adapter apart or modify it in any way, as this is dangerous.
- Do not use flammable spray near the scanner.
- When cleaning the scanner, push the power button to turn it OFF and disconnect the power cord from the power supply.
- Clean the scanner using a slightly dampened cloth which has been well wrung out. Never use alcohol, benzene, paint thinner, or any other flammable substances.
- If the scanner makes strange noises, or gives off smoke, heat, or strange odors, or the scanner does not function or other abnormalities occur when you use the machine, immediately push the power button to turn it off, and disconnect the power plug from the power outlet. Then, contact your local authorized Canon dealer or service representative to have the unit serviced.
- Do not drop the scanner, or subject it to impact or strong shock. Should the scanner ever become damaged, immediately push the power button to turn it OFF, and disconnect the power plug from the power outlet. Then, contact your local authorized Canon dealer or service representative to have the unit serviced.
- Before moving the scanner, be sure to push the power button to turn it OFF, and disconnect the power plug from the power outlet

CAUTION

- Do not install the scanner on a surface that is unstable or tilted, or in an area subject to excessive vibrations, as this may cause the scanner to fall, resulting in personal injury or damage to the scanner.
- Never place small metal objects such as staples, paper clips, or jewelry on the scanner. These items may fall into the scanner, and cause a fire or electric shock. Should such objects ever fall inside the scanner, immediately push the power button to turn it OFF, and disconnect the power plug from the power outlet. Then, contact your local authorized Canon dealer or service representative to have the unit serviced.
- Do not install the scanner in a humid or dusty location. Doing so might cause a fire or electric shock.

-
- Do not place objects on top of the scanner. Such objects may tip or fall over, resulting in personal injury.
 - Connect only to a power outlet of the rated voltage and power supply frequency (120 V, 60 Hz or 220-240 V, 50/60 Hz depending on your region). Doing so might cause a fire or electric shock.
 - When unplugging the power cord, grasp it firmly by its plug. Do not pull directly on the power cord, as this may damage or expose the cord's internal wiring, resulting in a fire or electric shock.
 - Leave sufficient space around the power plug so that it can be unplugged easily. If objects are placed around the power plug, you will be unable to unplug it in an emergency.
 - Do not allow water or flammable substances (alcohol, paint thinner, benzene, etc.) to spill into the scanner, as this may result in a fire or electric shock. Doing so might cause a fire or electric shock.
 - Push the power button to turn the scanner OFF for safety when not using the scanner for a long period of time, such as overnight. Also, push the power switch to turn it OFF, and disconnect the power cord from the power outlet for safety when the machine will not be used for an extended period of time, such as during consecutive holidays.
 - Do not wear loose clothing or jewelry that may get caught in the scanner while you are using it, as this may result in personal injury. Be extra careful of neckties and long hair. If anything becomes caught in the scanner, immediately disconnect the power cord to stop the scanner.
 - Be careful when loading paper into the scanner and when removing jammed paper, as it is possible to cut your hand on the edge of a sheet of paper.

Disposal

When disposing of this scanner, be sure to follow all local ordinances and laws or consult with the retailer who sold you the scanner.

Features of the Scanner

The main features of the DR-M260 document scanner are described below.

- **Compact Design**

The scanner has a compact size of 285 mm (11.22")(W) x 180 mm (7.09")(D) x 178 mm (7.01")(H) when the document feed tray is removed.

- **Fast Document Feeding**

Documents can be scanned at a speed of up to 60 pages per minute (when scanning one-sided or two-sided documents of A4 size at 200 dpi).

- **High Image Quality**

The 600 dpi optical resolution sensor incorporated in the scanner enables documents to be scanned with high image quality.

- **USB3.1 Gen1 Interface**

The scanner supports SuperSpeed USB3.1 Gen1

- **Color/Grayscale Support**

Documents can be scanned in 24-bit color or 256-level grayscale.

- **Supports a Variety of Scanning Modes**

The scanner supports the following scanning modes, depending on the document type:

- Single-sided or double-sided scanning (with Skip Blank Page function)
- Continuous or single sheet feed

- **Card Scan**

You can scan business or ID cards.

- **Paper Size Detection**

The scanner automatically detects the size of a scanned document and eliminates any unnecessary space around the edges of the image when storing the image, even when storing a document of irregular size.

- **Auto Color Detection**

The scanner detects whether the scanned document is in color, grayscale, or black and white, and saves the image accordingly.

- **Full Auto Mode**

A Full Auto Mode is provided in CaptureOnTouch to allow scanning under automatically determined conditions. Scanning conditions such as the color mode and page size are set automatically based on the document being scanned.

- **Auto Resolution Detection**

When enabled in the CaptureOnTouch or scanner driver settings, this function detects the content of documents and determines the scanning resolution automatically.

- **Folio Scan**

You can scan folded documents. The scanner will scan both sides and combine the scanned images into a single image.

- **Deskew**

The scanner is equipped with a deskew function that straightens images before saving them when documents are scanned askew. The scanned images are straightened, as opposed to the actual document sheets.

- **Ultrasonic Double Feed Detection**

Ultrasonic waves are used to detect pages that are fed at the same time as well as the space between pages. Scanning stops if a double feed is detected.

- **Double Feed Detection Ignore**

When a double feed is detected, error is displayed on the operation panel. Save, select Continue and press the OK button, to continue with the scanning.

- **Double Feed Retry**

When a double feed has occurred, this function returns the document to the document feeder and re-feeds the pages.

- **Text Orientation Detection**

The text orientation on each page is detected, and the scanned image is rotated in 90-degree increments as necessary for normalization.

- **Prevent Bleed Through/Remove Background**

Prevents the background or original image on the reverse side of thin originals from appearing in scanned images.

- **Text Enhancement Modes**

The scanner is equipped with an Advanced Text Enhancement Mode to enhance the text of documents with dark or uneven backgrounds, and an Advanced Text Enhancement II mode to enhance the text when both the text and background are light. These modes may not work, depending on the type of document.

- **Color Unevenness Reduction Function**

You can control or reduce the color irregularity at the time of the scan.

- **Skip Blank Page Function**

The scanner is equipped with a Skip Blank Page function that enables you to scan a document without storing images of blank pages, regardless of whether each page of the document is two-sided or one-sided. Both sides are scanned, but saving the image is skipped for scan images judged to be from a blank page.

- **Prescan Function**

The scanner is equipped with a Prescan function that allows you to adjust the contrast and brightness of a prescanned image and then send the adjusted image to the application software, without needing to scan the document again.

- **Character/Line Emphasis Function**

If characters and lines in scanned images are not clearly visible, you can use this function to adjust their thickness during scanning.

- **Skew Detection Function**

The scanner automatically stops operation when documents are fed at an excessive slant to prevent damage to documents.

- **Feed Error Detection**

When a feed error is detected, the scanner automatically stops the scanning operation.

- **Start Scanning from the Operating Panel**

You can start scanning by launching CaptureOnTouch with the operating panel buttons. By default, Job No.1 is assigned to Scanning Shortcut, which allows you to easily scan a document by just following the instructions on the screen.

- **Auto Start**

The scanner is equipped with an auto start function, which enables scanning to be automatically started when a document placed in the feeder is detected.

- **Sleep Mode**

The scanner is designed to save energy by automatically entering the sleep mode if 10 minutes elapse without scanning or another operation being performed.

- **Passport Scan**

Scans passports using the separately sold carrier sheet (for passports), provided with the scanner.

- **A4 Carrier sheet**

Use the separately sold carrier sheet (A4), you can scan without damaging the original.




- **Hint**

Some functions may not be available depending on the software you are using.

Names and Functions of Parts

Front View (With the Eject Tray Closed)

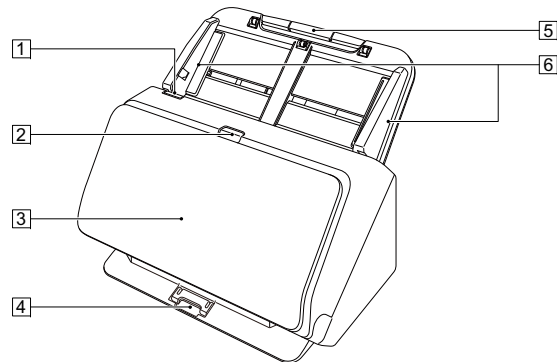

1 OPEN Lever

Pull this toward you to open the front unit.

2 Power button

Press this to turn on the scanner. When pressed, the power indicator is lit.

Press this button again to turn off the power.

The power button lights or flashes as follows depending on the scanner status.

Power Button Indication	Description
Lit	Power is on
Flashing (slowly)	Sleep mode
Flashing (quickly)	An error (paper jam, front unit is open, double feed, etc.) has occurred

3 Document Eject Tray

Open this for scanning. Scanned documents are output here.

4 Eject Tray Support

Open this when scanning multiple documents of varying sizes at one time. Scanned documents are arranged in the tray by supporting and lifting up the document eject tray from the bottom.


5 Document Feed Tray

Place the document.

6 Document Guides

Align the document guides with both edges of the document to ensure that the document feeds straightly.

Front View (With the Eject Tray Open)

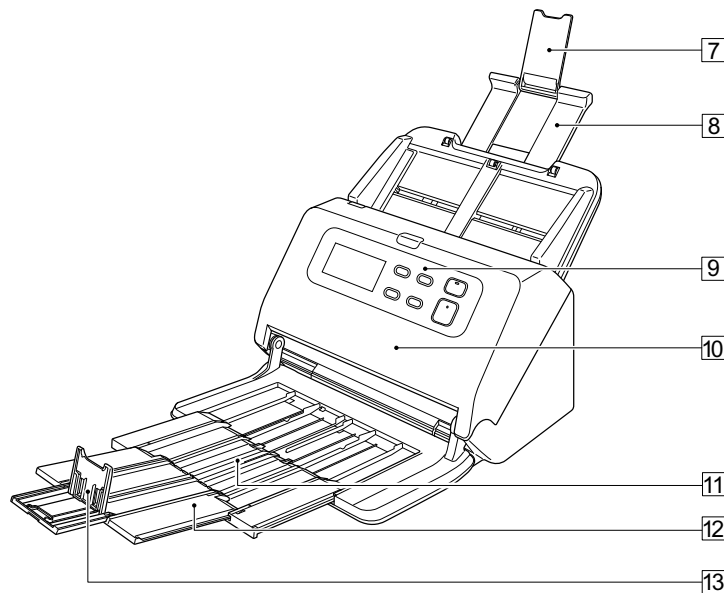

7 Feed Extension Support

Open this when placing long paper in the scanner.

8 Feed Support

Pull this out to support loaded documents.

9 Operating Panel

A range of scanning operations can be performed with this, such as starting and stopping scans, executing registered jobs, and cancelling double feed detection. ([See p. 22](#))

10 Front Unit

Open this when cleaning the inside of the scanner or replacing rollers.

11 Eject Support

Open this when loading long documents.


12 Document Eject Extension Support

If required, pull this out to match the length of loaded documents.

13 Document Eject Stopper

This prevents the document coming out of the document eject tray and aligns the leading edges of the ejected document. It can be moved to any position on the document eject extension support to match the length of the document.

Back View

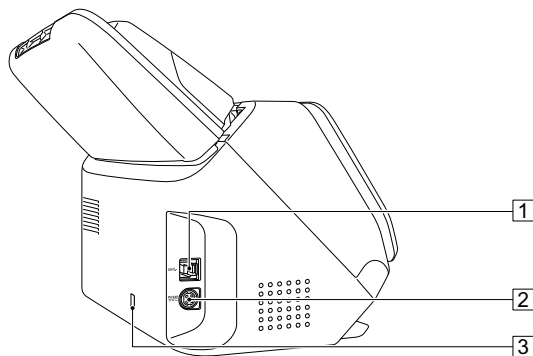

1 USB Connector

Connect the supplied USB cable to this connector.


2 Power Connector

Connect the supplied AC adapter to this connector.

3 Theft Prevention Hole (Security Slot)

Connect an anti-theft key chain or the like.

Operating Panel

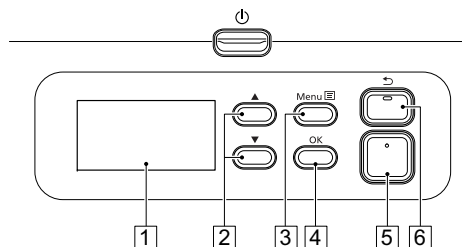

1 Display panel

Displays jobs, messages, counters etc.

2 ▲▼ button

Selects the features such as user mode and jobs.

3 Menu button

Displays the menu.

4 OK button

Confirms the job displayed on the display panel.

5 Start button

Runs the job displayed on the display panel.

6 Stop button / ↶ button


You can stop a running scan, or return back to the previous screen on the display panel.

Display panel examples

The information displayed on the display panel changes depending on the status of the scanner.

The following are representative examples.

● Information displayed on the screen

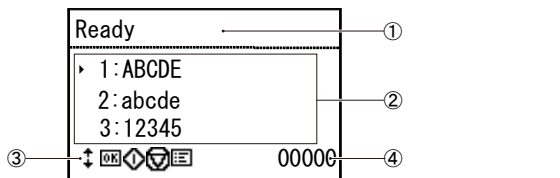

① Title area

Displays the status of the scanner.

② Comments area

Displays available menu and job items, error messages, etc.

③ Operation buttons area


Displays operation buttons that can be used during scanning.

The button, (OK) button, (Start) button, (Stop) button, and (Menu) buttons are displayed.

④ Display count area

Displays the number of documents that have been scanned.

● Jobs Screen

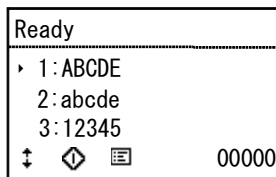


The Jobs Screen will be displayed after turning the power ON.

A maximum of 99 registered jobs can be displayed on this screen.

"ABCDE", "abcde", and "12345" are the examples of registered job names.

Select a job using the buttons, and press the Start button to execute.

● Menu Screen

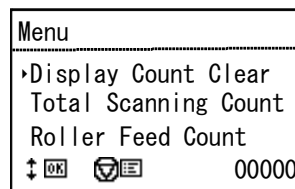

Pressing the Menu button while the Jobs Screen is displayed will cause the Menu Screen to be displayed instead.

Press the Stop button while the Menu Screen is displayed to return to the Jobs screen.

Use the buttons to select menu items, and press the OK button to confirm the selected item.

The following are items that can be selected/executed from the display panel.

Items displayed on the [Menu] screen.	Description
Display Count Clear	The number displayed in the display count area (bottom right in the display area) can be cleared.
Total Scanning Count	Displays the number of documents that have been scanned.
Roller Feed Count	Displays the number of documents fed through a replacement roller. This number can be cleared.
Display Contrast	Adjusts screen contrast.
Language	Displays available languages.

● **Message screen**

Error [C001]
Scanner cover is open.
00000

Displays the status of the scanner.

While scanning, information related to feeding is displayed.

When an error occurs, error code, and error details are displayed.

Basic Operation

Documents

The scanner can scan documents ranging in size from business cards to LTR/A4. The document sizes that this scanner can scan are shown below.

Plain Paper

Size

Width: 50 mm to 216 mm (1.97" to 8.5")

Length: 54 mm to 356 mm (2.13" to 14.02") (You can scan documents up to 5,588 mm (220") long by setting the scanner to the Long Document mode.)

Paper thickness

Normal feed: 27 to 413 g/m² (7 to 110 lb bond) 0.04 mm to 0.49 mm (0.00157" to 0.0193")

Non separation feed: 27 to 413 g/m² (7 to 110 lb bond) 0.04 mm to 0.49 mm (0.00157" to 0.0193")

Loading capacity

A4 size or smaller: 80 sheets (80g/m² (22 lb bond))


Larger than A4 size: 65 sheets (80g/m² (22 lb bond))

Make sure stacks do not exceed 10 mm in height for either of the above.

! IMPORTANT

The documents to be scanned must satisfy certain criteria. Read the following items carefully.

- When scanning multiple documents of different sizes, place the documents so that they cover the entire span of the feed rollers by aligning the centers and leading edges of the documents.

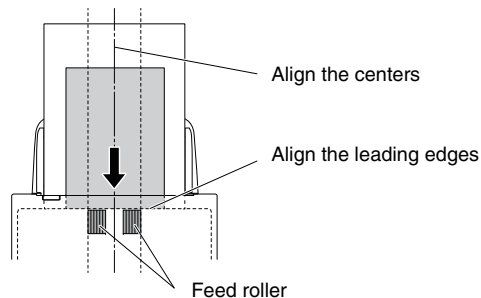

- It is recommended that documents exceeding 356 mm (14.02") size are fed one sheet at a time.
- Scanning documents before the ink is dry can cause problems with the scanner. Always make sure that the ink on a document is dry before scanning it.
- Scanning documents that are written in pencil or similar material may make the rollers and scanning glass dirty, which can lead to smudges on the scanned image and transfer the dirt to subsequent documents. Always clean the internal parts of the scanner after scanning such documents.
- When scanning a two-sided document that is printed on thin paper, the image on the opposite side of each page may show through. In this case, adjust the scanning intensity in the application software before scanning the document.
- Laminated documents may not be scanned correctly, depending on the document.

- Scanning the following types of documents can cause a paper jam or malfunction. To scan such a document, make a photocopy of the document and then scan the photocopy.



There are creases or fold lines.



Carbon paper.



There are curls.



The surface is coated.



There are tears.



Extremely thin document such as semi-transparent thin paper.



There are clips or staples.



Documents with excessive paper dust particles.

Business Card

Size: 50 mm x 85 mm (1.97" x 3.35") or larger

Paper thickness: 380 g/m² (80 lb bond) 0.45 mm (0.0177") or larger

! IMPORTANT

If a stack of business cards cannot be fed properly, reduce the number of cards in the stack.

Card (plastic)

Size: 54 mm x 86 mm (2.13" x 3.39") (ISO standard)

Card thickness: 1.4 mm (0.055") or smaller

Orientation: Horizontal feeding only

Embossed cards can be scanned.

Loading capacity: 10 cards (non-embossed), 1 card (embossed)

! CAUTION

- When scanning cards, place them to be fed horizontally. If you place cards to be fed vertically, they may not be ejected properly, and cards that get jammed may be damaged when you remove them.
- Embossed cards may not be able to be scanned correctly, depending on the type of embossment.

Passport

Size: 88 mm x 125 mm (3.46" x 4.92") (ISO standard)
Insert the passport into an optional carrier sheet (passport type) in an opened state.


Thickness: 6 mm (0.24") or less (including carrier sheet)

How to Place Documents


Scanning multiple documents

Standard paper feeding should be used when scanning multiple documents of a standard size at one time. Standard paper feeding enables multiple documents to be fed while separating each page.


1 Open the document eject tray.

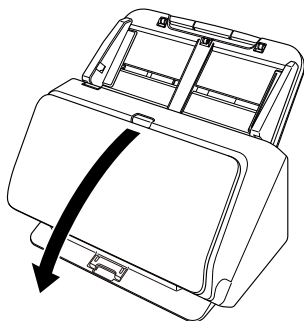

2 Pull out the eject support.

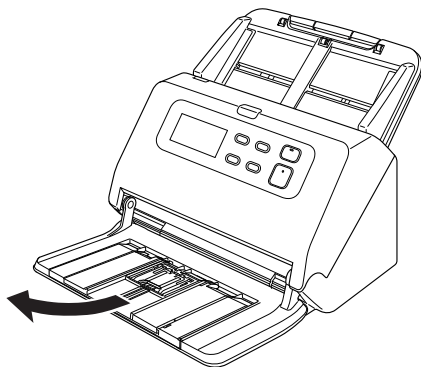

When placing long documents, pull out the document eject extension support to match the length of those documents. Also, stand the eject stopper at the end of the eject support if necessary.

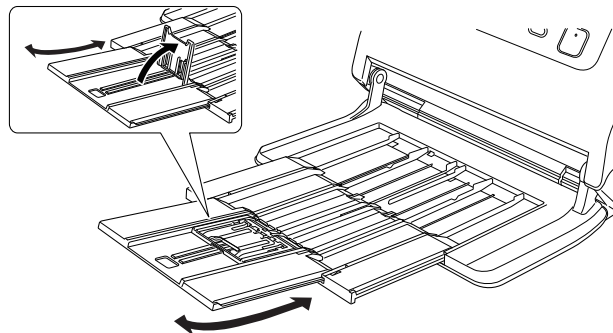


! IMPORTANT

To extend the eject support and the eject extension support, lift and pull.


💡 Hint

When scanning documents of different size at the same time, the scanned documents may not collect neatly on the eject tray. In such cases, scan with the tray extension extended.

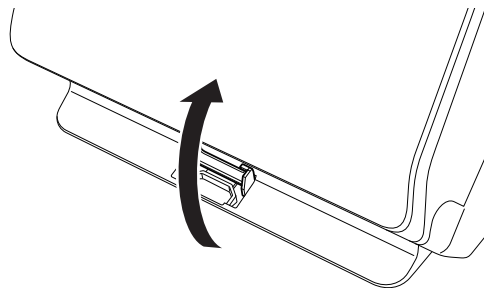


3 Pull out the feed support.


Open the feed extension support when placing long documents.

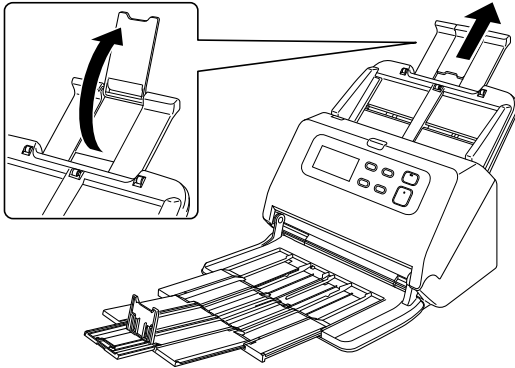

4 Adjust the document guides to fit the width of the document to be scanned.

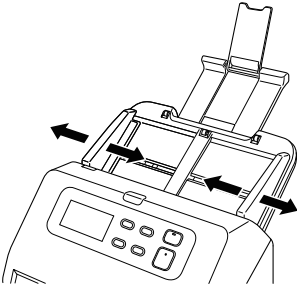

5 Set the document facing down with the top edge towards the feeder.

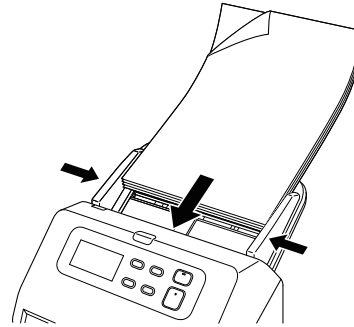

After placing the document, align the document guides with both edges of the document.

! IMPORTANT

- When placing documents into the feed tray, take care not to cut your hand on the edges of the paper.
- Before you place a document, check to make sure it does not contain paper clips, staples, or other small metal objects. These items may cause a fire or electrical shock, damage the document, or cause a paper jam or scanner malfunction.
- Do not wear loose clothing or jewelry that may get caught in the scanner while you are using it, as this may result in personal injury. Be extra careful of neckties and long hair. If anything gets caught in the scanner, immediately turn OFF the power switch, and disconnect the power cord from the power outlet to stop scanning.
- Always smooth out any folds or curls in your documents before placing them into the feeder. If the leading edge of a document is curled, it may cause a paper jam.
- If feeding stops due to a system error or paper jam while the scanner is scanning, resolve the problem, make sure that the scanned image of the last page that was successfully fed has been stored, and then resume scanning the remaining document pages.
- After you finish scanning, close the document eject tray to prevent damage to the scanner while it is not being used.


- Reading speed will decrease when the scanner's temperature rises due to operation.

When scanning a document one page at a time (non separation mode)

When scanning a thick document one page at a time or scanning a document that has multiple pages fastened together, set document feeding to non separation mode. This enables the placed document to be scanned without the pages being separated, regardless of the number of pages.

Non separation mode switching is performed by opening the scanner driver settings screen.

- 1 Opens the scanner driver's Detail Settings screen. (See p. 65)
- 2 Open the [Feeding] Tab.
- 3 Select the [Non Separation Feeding Mode] check box.

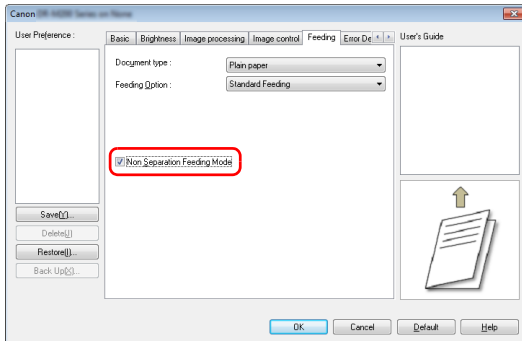

- 4 Click the [OK] button to close the settings screen.

- 5 Place the document as described in the "Scanning multiple documents" on p. 27.


! IMPORTANT

When scanning multiple page documents that are fastened together, such as invoices, place the documents so that the edge that is fastened together is facing down.

Loading passports

To scan a passport, insert the passport into the separately sold carrier sheet (for passports) and then place it onto the scanner.


- 1 Opens the scanner driver's Detail Settings screen. (See p. 65)
- 2 Open the [Feeding] Tab.
- 3 In [Document type], select [Carrier sheet(for passports)].

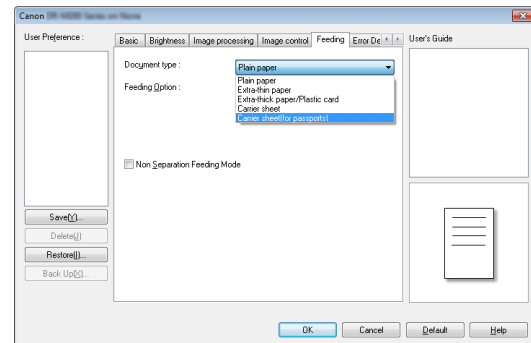


! CAUTION

Change the [Document type] to [Carrier sheet(for passports)] when you scan a passport.

- 4** Open the page of the passport that you want to scan and insert it into the carrier sheet.

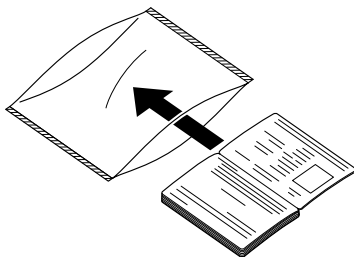

- 5** Load the document with the page you want to scan facing down.

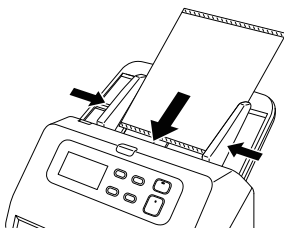

After placing the document, align the document guides with both edges of the document.

! CAUTION

If the carrier sheet or passport is not loaded properly, you may get a document jam or not get a scan image as intended.

! IMPORTANT


- Depending on the condition of the carrier sheet or passport, the image may not be scanned completely or the scanner's image correction may not function properly. If this is the case, set [Page Size] to a larger paper size (A4, for example) on the scanner driver settings screen, and then scan again. (See p. 68)

- If the size of the passport differs greatly from the size of the carrier sheet, a document jam may occur or the scanner's image correction may not function properly.
- The maximum thickness that can be scanned is 6 mm (0.24") with the passport inserted inside the carrier sheet. If the thickness exceeds 6 mm (0.24"), the scanner may break down due to problems such as paper jam.
- Documents other than passports should not be inserted into the carrier sheet and scanned. This may cause the scanner to break down.

Placing Cards


When scanning cards, place one card at a time horizontally.

- 1** Opens the scanner driver's Detail Settings screen. (See p. 65)
- 2** Open the [Feeding] Tab.
- 3** In [Document type], select [Extra-thick paper/Plastic card].

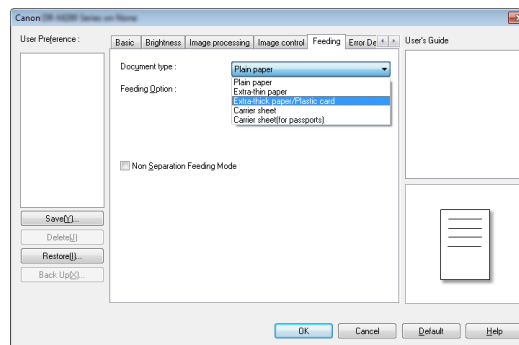


- 4** Adjust the document guides to fit the width of the card to be scanned.

- 5** Place the card horizontally, with the reverse side facing you, and the top of the card facing down.

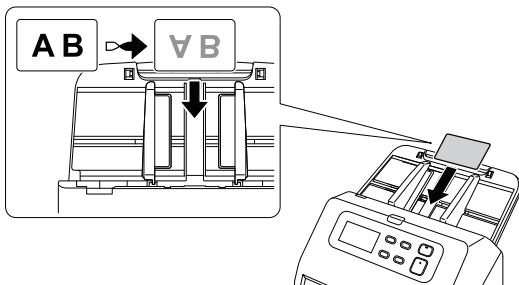

CAUTION

- Place the cards one at a time.
- When scanning cards, place them to be fed horizontally. If you place cards to be fed vertically, they may not be ejected properly, and cards that get jammed may be damaged when you remove them.

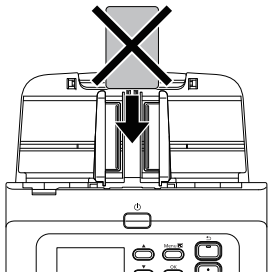


Hint

Up to 10 cards can be placed in the scanner at the same time if they are not embossed.

Placing Folded Documents

Folio Scan enables you to scan documents that are larger than LTR/A4 and therefore do not fit in the feeder. To use the function, fold the document in half lengthwise and place it into the feeder. The DR-M260 will scan both sides and combine the scanned images into a single image.

- 1** Opens the scanner driver's Detail Settings screen. (See p. 65)
- 2** Switch the scanner to non separation mode. (See p. 29)
- 3** Set [Page Size] on the [Basic] tab to a size that is half that of the paper to be actually scanned, and set [Scanning Side] to [Folio].
For example, when scanning a document of A3 size folded, set [Page Size] to [A4].

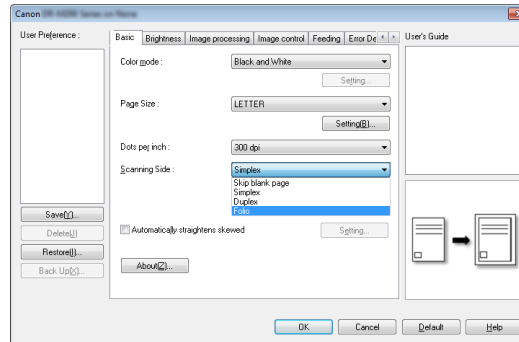

- 4** Click the [OK] button to close the settings screen.


5 Fold the document in half.

Crease the document firmly down its center to fold the document in half. Fold the document so that its edges are neatly aligned. If the document is not folded properly, paper jams may occur or distortions may appear in the combined scanned image.

! IMPORTANT

A portion of the scanned image will be missing at the fold line.

6 Place the document with the folded edge facing right and the top edge facing downward.

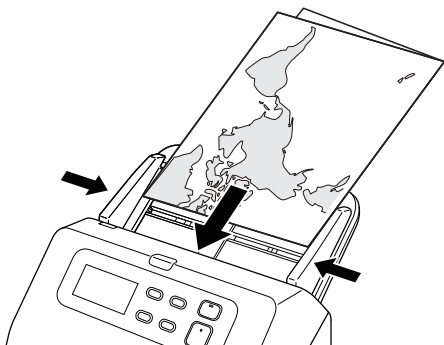

! IMPORTANT

Adjust the document guides to fit the width of the document. Otherwise, the image may scan as skewed or shifted.

💡 Hint


- The side of the folded document facing you will become the right side of the combined image.
- The maximum size for the combined image is A3. Use this method to scan A3-sized documents. When scanning a folded document of a size other than the standard formats, set [Page Size] on the scanner driver settings screen to [Match original size]. (See p. 68)

Scanning with Carrier Sheets

To prevent damage to a document while scanning it, insert it into an optional carrier sheet before loading it in the scanner.

1 Opens the scanner driver's Detail Settings screen. (See p. 65)


2 Open the [Feeding] tab, and set [Carrier sheet] to [Document Type].

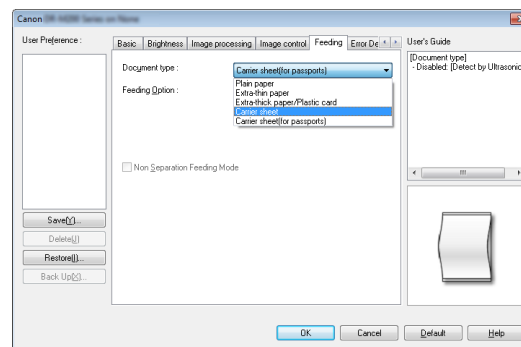


3 Click the [OK] button to close the settings screen.

4 Insert the document into the carrier sheet.

You can set up to three Carrier sheets at a time in the scanner.

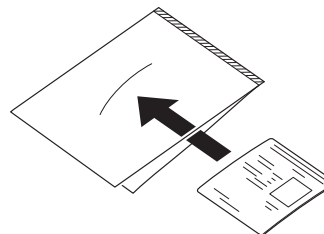

5 Load the document with the sealed end of the carrier sheet as the leading edge.

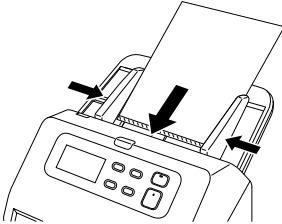


After placing the document, align the document guides with both edges of the document.

CAUTION

If the document is not placed properly inside the carrier sheet, you may get a document jam or not get a scan image as intended.

IMPORTANT

- Insert documents straight into the center of the carrier sheet. Proper scanning will not be possible if the document is too close to either side, tilted, or protruding from the carrier sheet.

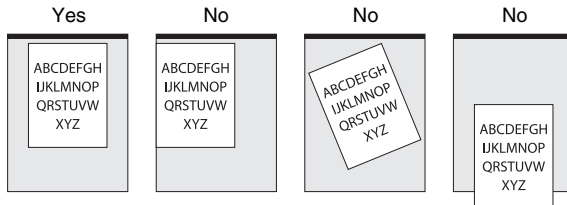

- The maximum thickness that can be scanned is 127g/m². If the thickness exceeds 127g/m², the scanner may break down due to problems such as paper jam.
- When scanning passports, use the optional carrier sheet for passports.
- Carrier sheet is a consumable item. Replace it with a new one when necessary, if there is visible damage or smudging.

- As a rough guide, replace the carrier sheet after 1,000 scanning operations with a single 80g/m² (22 lb bond) sheet inserted.

Setting the Long Document Mode


The length of documents that can be scanned with the scanner is normally 356 mm (14.02"), but you can scan documents up to 5,588 mm (220") long by setting the scanner to the Long Document mode (200dpi gray scale).

IMPORTANT

By selecting the Long Document mode and setting the [Page Size] on the scanner driver settings screen to Auto-detection, documents of up to 5,588 mm (220") in length can be scanned. Note the following when using the Long Document mode:


- When scanning in the Long Document mode, if the document is placed on the scanner in a skewed position, it may hit the edges of the feeding area and be damaged. Be careful to place the document so that it is not skewed.
- When scanning with the Long Document mode, paper jam detection may react slowly, resulting in damage to the document. Be careful to avoid paper jams.
- When scanning large-sized documents with the Long Document mode, scanning may be slower. Errors also occur due to memory shortage, and scanning may be disabled.

- 1 Opens the scanner driver's Detail Settings screen. (See p. 65)
- 2 Switch the scanner to non separation mode. (See p. 29)
- 3 In the [Basic] tab, click the [Setting] button of [Page Size] [Page Size Settings] dialog box will open.

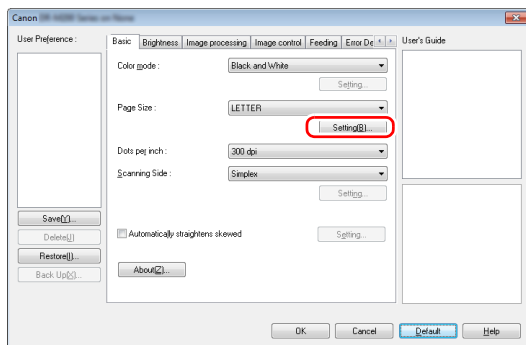

- 4 Click the [Long Document Mode] tab and specify the Long mode.

Depending on the length of the document, select [Long Document Mode (1000 mm)], [Long Document Mode (3000 mm)], or [Long Document Mode (5588 mm)].

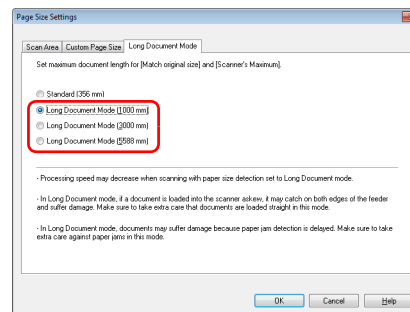


- 5 Click the [OK] button to close the settings screen.



Hint

When you set the Long mode, [(Long Document)] will be displayed in [Page Size] in the [Basic] tab.

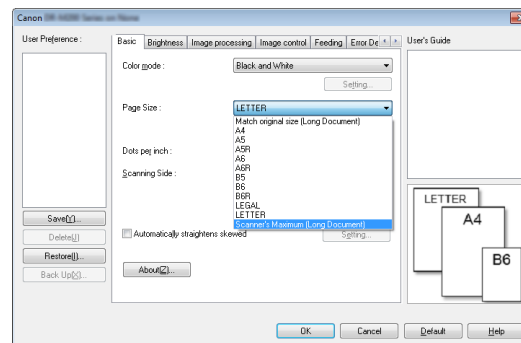


Detecting a document double feed

This scanner includes a function to detect document double feeds. By using this function, the scanner will automatically stop when it detects that multiple documents have been fed at the same time. You can also specify whether to save the scanned image after scanning has finished and continue scanning the document (double feed detection ignore function).


To use the double feed detection function, you must first open the scanner driver settings screen and enable double feed detection. It is also necessary to set [Rapid recovery system] to use the double feed detection ignore function.

Setting procedure

- 1 Opens the scanner driver's Detail Settings screen. (See p. 65)
- 2 Open the [Error Detection] Tab.
- 3 Select either the [Detect by Length] or the [Detect by Ultrasonic] check box (or both).

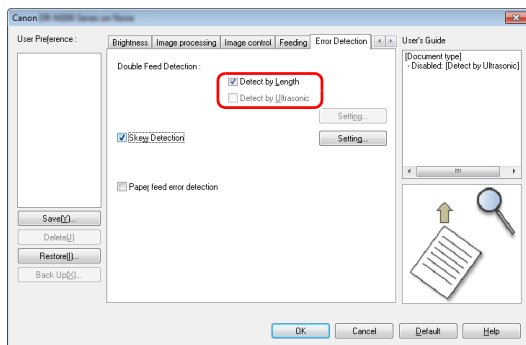

- 4 To use the double feed detection ignore function, open the [Others] tab and select the [Rapid recovery system] check box.

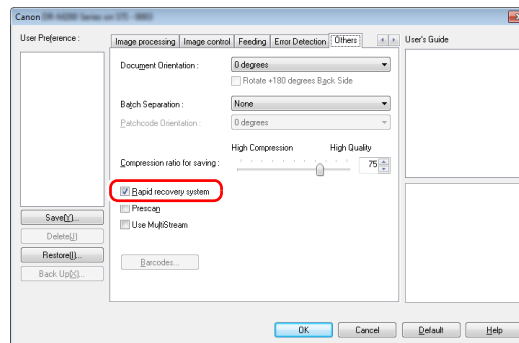

- 5 Click the [OK] button and close the settings screen.
- 6 Place the document as described in the "Scanning multiple documents" procedure on p. 27.


! IMPORTANT

- If documents like plastic cards are scanned, it may be falsely detected as a double feed.
- Depending on the paper type and paper thickness, false detection of double feed may occur. If the double feed detection malfunctions, clear the [Detect by Ultrasonic] check box of the [Error detection] tab.


What to do when a double feed is detected

When not using the double feed detection ignore function

If a document double feed is detected during scanning, document feeding stops when the double fed documents are ejected. When this happens, the following error is displayed in the operation panel. [see "Error message" on p. 99](#)

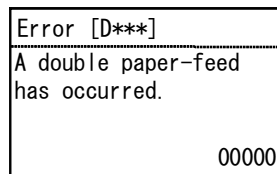


Also, a message screen is displayed to notify you that a double feed has been detected.

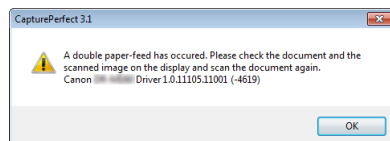


When using the double feed detection ignore function

If a document double feed is detected during scanning, document feeding stops when the double fed documents are ejected. The following error is displayed in the operation panel.

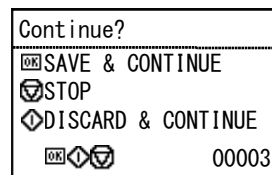

Also, the [Rapid Recovery System] screen appears to enable you to specify whether to continue scanning.

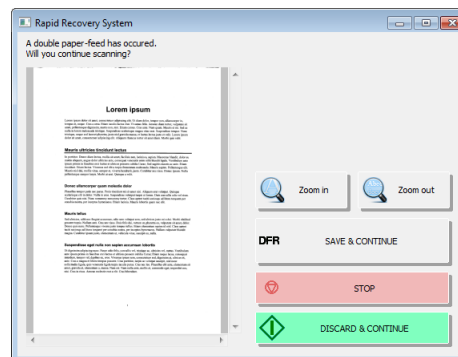


Buttons of [Rapid Recovery System] Screen	Buttons of Operating Panel	Description
[SAVE & CONTINUE]	OK Button	Saves the preview image as a scanned image and scans the rest of the document.
[STOP]	Stop button	Discards the preview image and stops scanning.
[DISCARD & CONTINUE]	Start button	Discards the preview image and continues scanning. Place the double fed document again before clicking this button.

Detecting Skewed Documents

This scanner includes a function that can detect when a document has been fed at a slant. When this function is used, the scanner will stop a scanning operation automatically when it detects a skewed document that exceeds a fixed angle, thereby preventing damage to the document. In addition to skewed documents, this function also detects stapled documents. This function is useful for documents that are 148 mm (5.83") or larger in width. To use the skew detection function, open the scanner driver settings screen and enable the skew detection function beforehand.

Setting procedure

- 1** Opens the scanner driver's Detail Settings screen. (See p. 65)
- 2** Open the [Error Detection] Tab.
- 3** Select the [Skew Detection] check box.

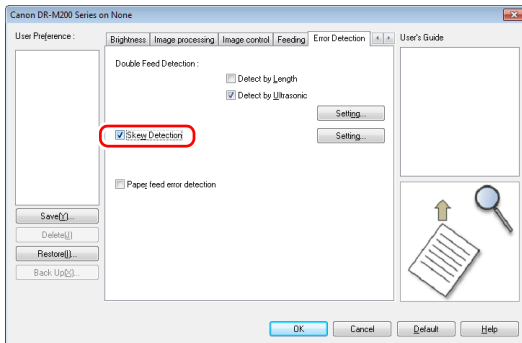

- 4** Click the [OK] button to close the settings screen.


- 5** Place the document as described in the [see "Scanning multiple documents" on p. 27.](#)

! IMPORTANT


When this function is enabled, small documents and documents that have been placed to the left or right of the center of the feed inlet may be detected as skewed, and the scanning operation may stop. Place documents in the center of the feed inlet, or disable the skew detection function.

When a skewed document is detected

Feeding automatically stops when a skewed document is detected during scanning. The following error is displayed on the operation panel.

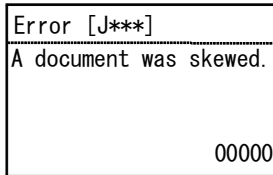


Also, a message screen is displayed to notify you that a skewed document has been detected.

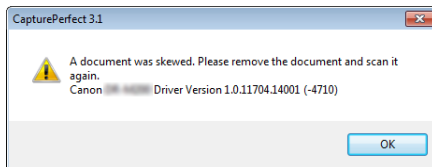

Hint

If [Rapid recovery system] is enabled in the [Others] tab of the scanner driver settings screen, the following screen appears instead of the above message screen. In such cases, reload the document and click [Yes] to continue scanning.

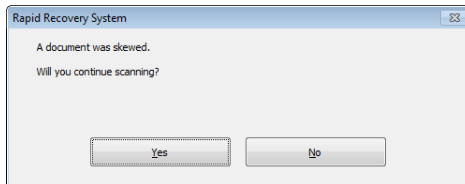

Paper feed error detection


This scanner includes a function that can detect paper feed errors. When this function is used, the scanner will stop a scanning operation automatically when a feed error occurs, thereby preventing damage to the document.

The feed error detection function is useful for documents that are 148 mm (5.83") or larger in width.

To use the feed error detection function, open the scanner driver settings screen and enable the paper feed error detection function beforehand.

Setting procedure

- 1 Opens the scanner driver's Detail Settings screen. (See p. 65)
- 2 Open the [Error Detection] Tab.
- 3 Select the [Paper feed error detector] check box.

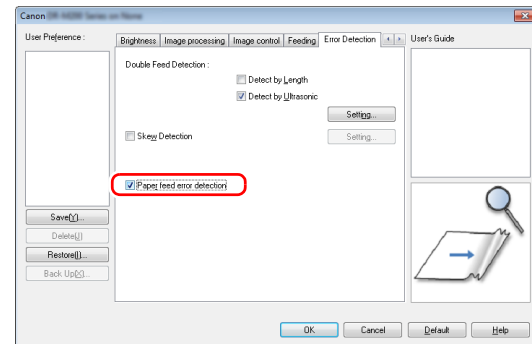

4 Click the [OK] button to close the settings screen.

5 Place the document as described in the [see "Scanning multiple documents" on p. 27.](#)




Hint


The scanner may be unable to detect feeding irregularities for several documents after using the separation retry function.

Operation when a paper feed error is detected

Feeding automatically stops when a feed error is detected during scanning. The following error is also displayed in the operation panel.

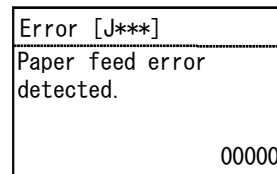


A notification that a feed error was detected also appears on the screen.

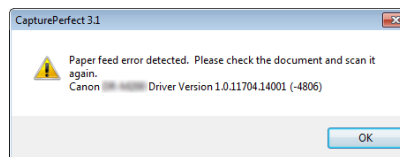

Hint

When [Rapid recovery system] is enabled in the [Others] tab of the scanner driver settings screen, the following screen appears instead of the above message screen. In such cases, place the document again, and then click [Yes] to resume scanning.

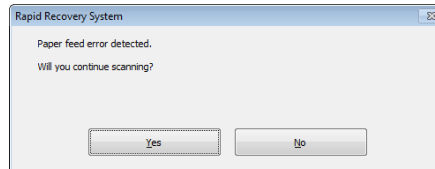


Scanning methods


Scanning with CaptureOnTouch

What is CaptureOnTouch?


CaptureOnTouch is a scanning application that enables you to scan a document with a simple operation merely by selecting the screen panel.

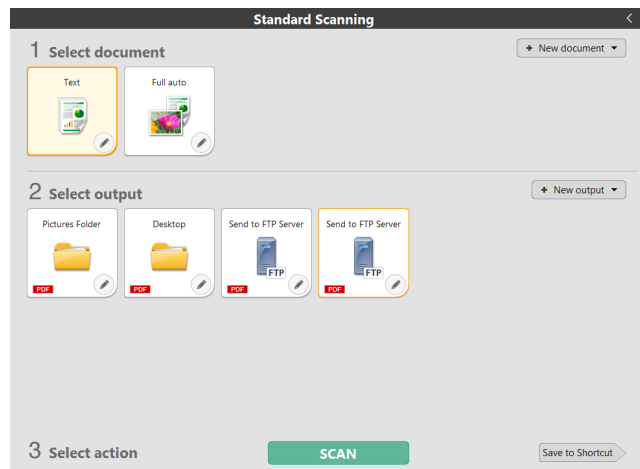

CaptureOnTouch is provided with multiple scanning methods that can be selected according to the purpose and application.

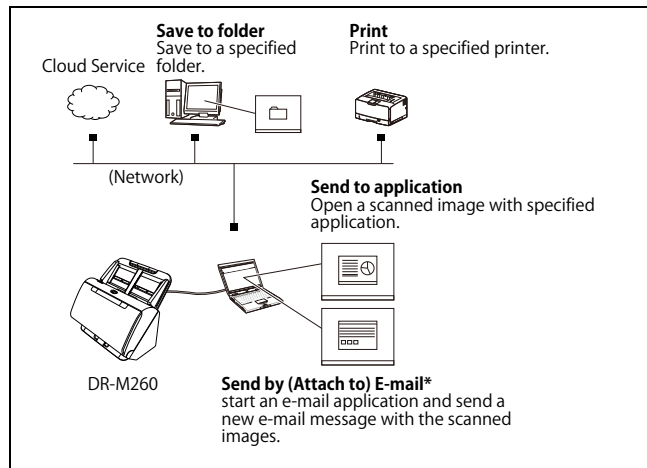

CaptureOnTouch supports the following scanning methods.

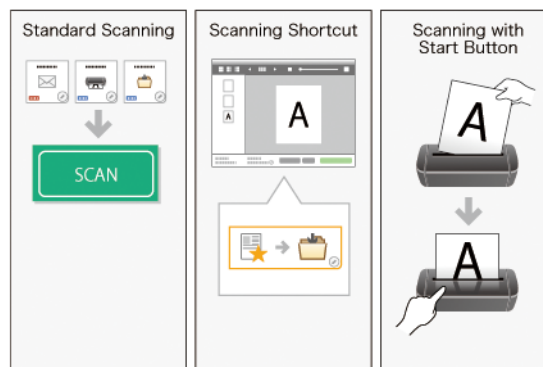

Standard Scanning

Click the Select document and Output panels, and then click the [Scan] button to scan the document. You can select the scan method according to the document type and purpose of use before scanning. "Standard Scanning" (See p. 44)

Scanning Shortcut

You can register in advance combinations of frequently-used document selections and output methods as a "Scanning Shortcut". Just click the Scanning shortcut panel to implement the scan.

"Scanning Shortcut" (See p. 46)

Start button


If a job is assigned, the scanning starts when you set the document and press the Start button.

"Scanning with Start Button" (See p. 51)

Starting and Exiting CaptureOnTouch

By default, CaptureOnTouch becomes resident in the system when you start your computer.




Double-click  in the taskbar to start CaptureOnTouch and display the main window.




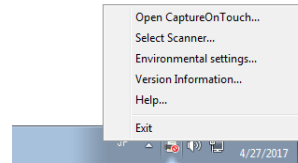
Hint

- You can also start CaptureOnTouch from the Start menu. Click [Start] - [All Programs] - [CaptureOnTouch].
- The interval between the time you press the Start button on the scanner and the time scanning begins is shortened when the [Make CaptureOnTouch resident] check box is selected in the [Basic settings] tab of the [Environmental settings] dialog box. For details, see "Environmental Settings" on p. 60.

Exiting CaptureOnTouch

To close the CaptureOnTouch window, click  at the top of the window. This closes the window, but CaptureOnTouch will continue to reside in the system.

To quit the CaptureOnTouch application, click  in the taskbar, and select [Exit] from the menu.



CaptureOnTouch becomes no longer resident in the system and the icon disappears from the taskbar.

Restarting CaptureOnTouch


To use CaptureOnTouch after it has been made not resident in the system, use one of the following procedures to restart it. CaptureOnTouch will start and become resident in the system again.

- Click [Start] - [All Programs] - [CaptureOnTouch].
- Press the Start button on the scanner (in this case, the main screen of CaptureOnTouch will open and scanning will start using the scan method assigned to the Start button).




Hint

In Windows 8.1, it is registered in the following location.

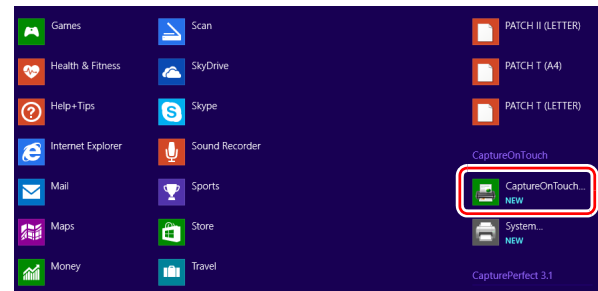


Selecting a scanner

The following is an explanation of how to select a scanner using CaptureOnTouch.


- 1 Click the  (CaptureOnTouch Icon) on the taskbar.



- 2 Click [Select scanner] on the menu.

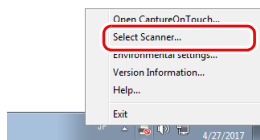

- 3 Select [CANON DR-M200] and click [OK].

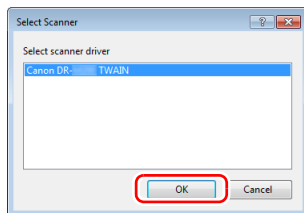


Hint

If [CANON DR-M200] is not displayed, reinstall the scanner driver.
(see p. 8)

Screen Descriptions

There are two areas in the CaptureOnTouch main screen, [Scanning Shortcut] and [Standard Scanning].

Use the [>] [<] at the top right of the main window to move between sections.

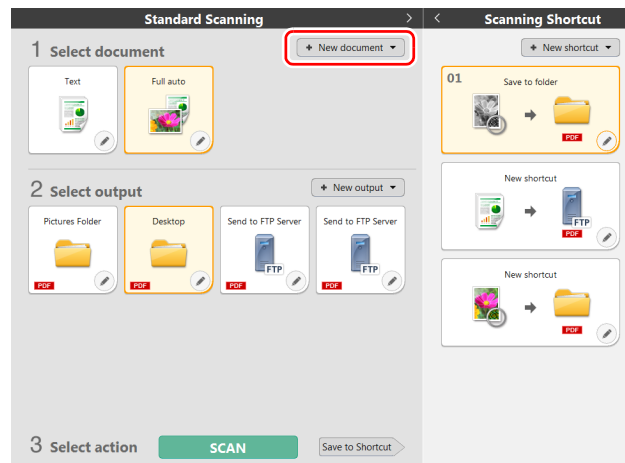

Various panels have been prepared according to the scan types and outputs in each section.

Click the [New document] button, and a [New document] panel will be added.

Standard Scanning


Operations;

Selecting the Select document panel-> Selecting the Select output panel->Start scanning

1 Place the document in the scanner.


2 Click the select document panel for the document to be scanned from [1 Select document]. The selected [Select document] panel will be displayed in orange.

To edit scan images, see "Select document settings" on p. 55

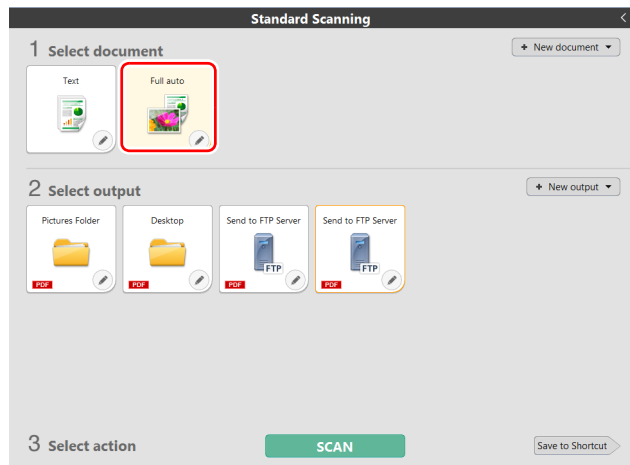


3 Click the output panel for the scan image application from [2 Select output].

The selected [Output] panel will be displayed in orange. To edit the [Output] panel, see "Setting the output" on p. 57

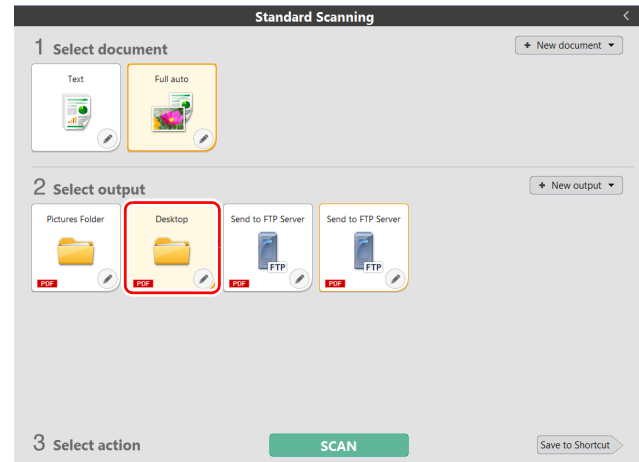

4 Click the [SCAN] button.

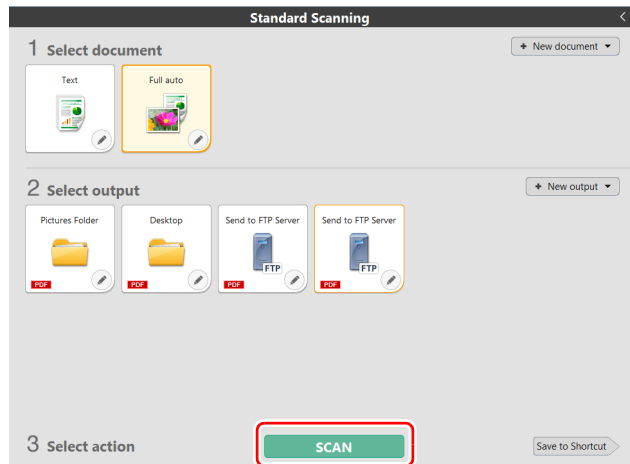

The document is scanned. While scanning is in progress, the number of pages scanned is displayed in addition to the scanner settings. When the scan is finished, the [Scanned image preview screen] opens.

Hint


If using the same document selection and output combination the next time, click the [Save to Shortcut] button. The Select document and Select output that you selected are added to Scanning Shortcut. A new panel is added in the Scanning Shortcut panel view.

CAUTION


- If you configure scanning conditions that consume a large amount of the computer's memory, scanning may stop because of insufficient memory. If an error message appears due to insufficient memory while scanning is in progress, stop scanning, change the scanning conditions, and then try scanning again.
- A multiple-page scan cannot be saved when it reaches the file size of 2 GB. Change the save settings if an error message is displayed.

Hint

If scanning continuously, set the next document, and click the [Scan more pages] button to start the document scan.

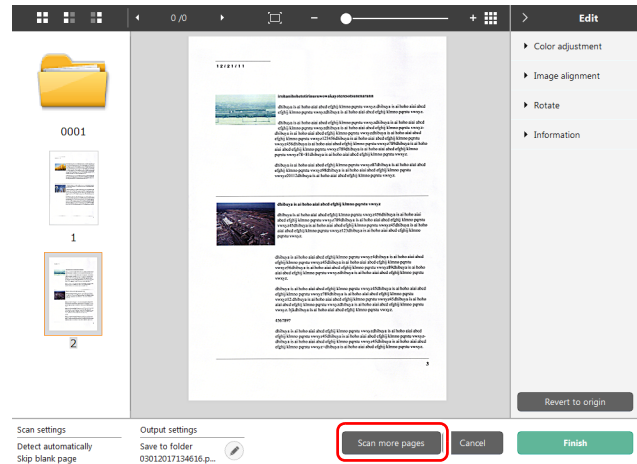

5 To check the scanned image, click the [Finish] button.

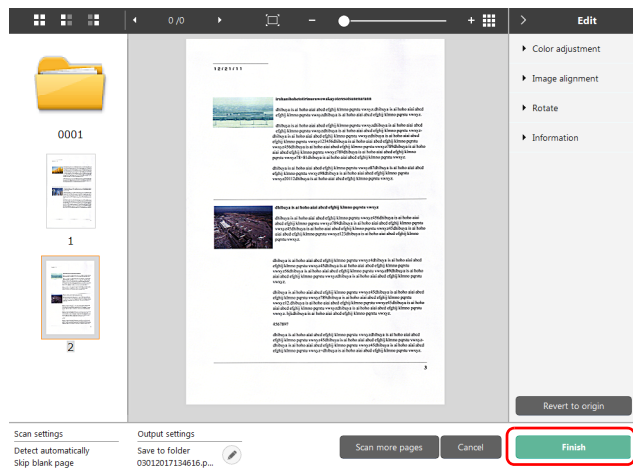

To edit scan images, see "Operations for the scanned image edit window" on p. 51


Click the [] button to edit the output settings.

"Setting the output" (See p. 57)

Click the [Cancel] button to discard the scanned image and return to the main window.

When the output has finished, a popup window will be displayed. If saving the scanned image, the link to [Open storage folder] will be displayed.

This completes the Standard Scanning.

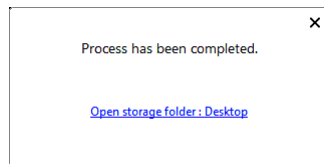

Hint

If you click [Open storage folder], the folder in which the saved scanned images were saved opens. Depending on the output settings, the [Open storage folder] link may not be displayed.

Scanning Shortcut

Operations;

Save [Scanning Shortcut] -> Scan the document -> Output the scanned images By adding scanning shortcuts that combine frequently-used document selections and outputs, you can scan just by clicking the Scanning Shortcut panel.



Hint

If a registered scanning shortcut is assigned as a job, you can run shortcut scans using these settings by pressing the scanner start button.


"Scanning with Start Button" (See p. 51)

Registering and editing scanning shortcuts

Multiple scanning shortcuts can be allocated to CaptureOnTouch.

- 1 Either click the [New shortcut] button in [Scanning shortcut], or select the document scan and output in [Standard Scanning], and click the [Save to Shortcut] button.


A scanning shortcut panel will be created.

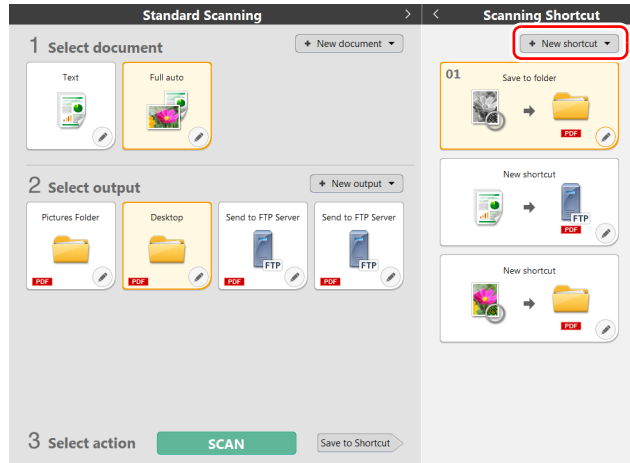

Hint


You can also create a new Destination panel by clicking [] on the [New shortcut] button, and in the menu that appears, selecting the type of Scanning Shortcut.

- 2 The Edit Scanning Shortcut Panel dialog box appears when you click the Edit button.

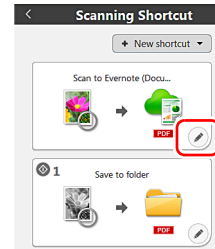

- 3 Click the [Document] tab to set the Select document settings.

"Select document settings" (See p. 55)

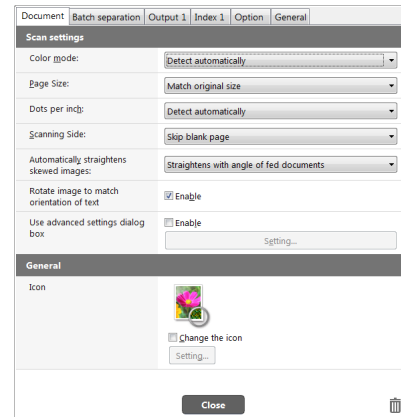

4 Click the [Batch separation] tab to set the batch separation.

"Setting the Batch Separation" (See p. 56)

The screenshot shows the 'Batch separation' tab selected. It contains two main settings: 'Separation method' set to 'No Separation' and 'Separation paper' set to 'Discard page'. Both settings have a 'Detail Settings...' button next to them. At the bottom right, there is a 'Close' button and a trash icon.

6 Click the [Index] tab to set the index file.

"Setting the Index" (See p. 58)

The screenshot shows the 'Index' tab selected. It contains three sections: 'Page index' with an 'Output' checkbox and 'Output settings...' button; 'Document index' with an 'Output' checkbox and 'Output settings...' button; and 'Barcode / OCR settings' with an 'Apea setting...' button. At the bottom right, there is a 'Close' button and a trash icon.

5 Click the [Output] tab to set the outputs.

"Setting the output" (See p. 57)

The screenshot shows the 'Output' tab selected. It is divided into 'Output settings' and 'General' sections. 'Output settings' includes 'Output method selection' (set to 'Save to folder'), 'File name / folder name' (set to 'Image_'), 'File type' (set to '.PDF (*.pdf)'), and 'Save in folder' (set to 'My Pictures'). Each has a 'Detail Settings...' button. The 'General' section includes an 'Icon' (a folder icon) and a 'Change the icon' checkbox with a 'Setting...' button. At the bottom right, there is a 'Close' button and a trash icon.

7 Click the [Option] tab to set the options.

The screenshot shows the 'Option' tab selected. It contains 'Edit after scanning' (checked), 'Enable additional scan' (checked), and 'Job assignment' (set to 'No. 1'). Below these is the 'Order of output' section, which shows a list with 'Save to folder' and icons for adding, deleting, and moving items. At the bottom right, there is a 'Close' button and a trash icon.

[Edit after scanning]

Check it on to enable modifying the scanned images in Scan Editing screen. When unchecked, the Edit window is not displayed in Scan Editing screen.

["Operations for the scanned image edit window"](#) (See p. 51)

[Enable additional scan]

Check it on to display [Scan more pages] button in the Scan Editing screen to enable continuing scanning.

[Job assignment]

You can assign a scanning shortcut as a job.


When a scanning shortcut is assigned as a job, an icon for the assigned job No. will be displayed in the scanning shortcuts panel.



[Order of output]

Click each button to configure "Adding and Deleting output," and "Order change".

8 Click the [General] tab to make other settings.

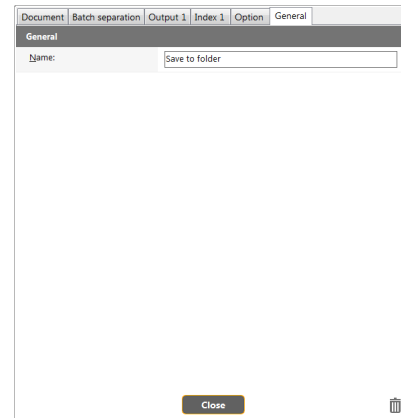

[Name]


Enter the Scanning shortcut panel name.

Selecting and scanning shortcuts

1 Place the document in the scanner.

["Basic Operation"](#) (See p. 25)

2 Click the scanning shortcut panel.

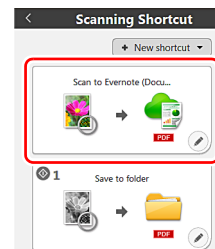

The document is scanned. While scanning is in progress, the number of pages scanned is displayed in addition to the scanner settings.

When the scan is finished, the [Scanned image preview screen] opens.


⚠ CAUTION

- If you configure scanning conditions that consume a large amount of the computer's memory, scanning may stop because of insufficient memory. If an error message appears due to insufficient memory while scanning is in progress, stop scanning, change the scanning conditions, and then try scanning again.
- A multiple-page scan cannot be saved when it reaches the file size of 2 GB. Change the save settings if an error message is displayed.


💡 Hint

If scanning continuously, set the next document, and click the [Scan more pages] button to start the document scan.

If [Enable additional scan] is disabled in the scanning shortcut settings, the [Scan more pages] button will not be displayed.

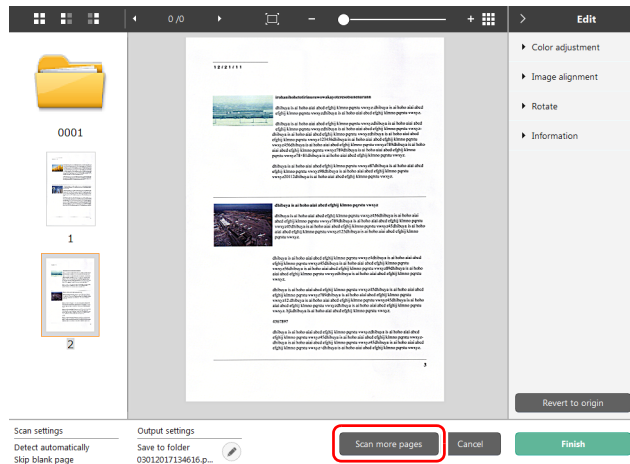

3 To check the scanned image, click the [Finish] button.

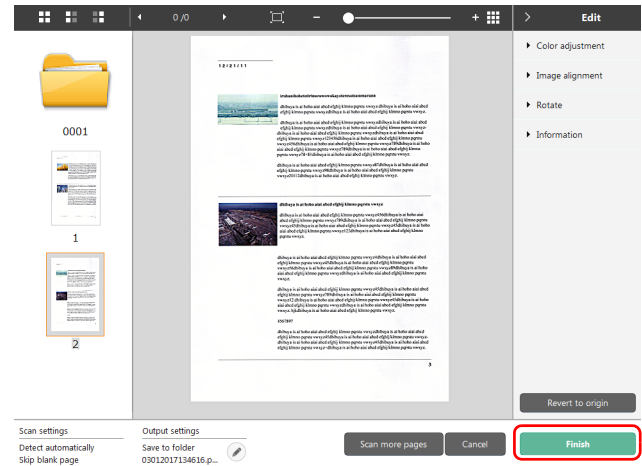

To edit scan images, see "Operations for the scanned image edit window" on p. 51

💡 Hint

If [Edit after scanning] is disabled in the scanning shortcut settings, the edit window will not be displayed.


Click the [] button to edit the output settings.

"Setting the output" (See p. 57)

Click the [Cancel] button to discard the scanned image and return to the main window.

When the output has finished, a popup window will be displayed. If saving the scanned image, the link to [Open storage folder] will be displayed.

This completes the shortcut scans.

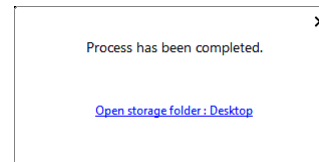


Hint

If you click [Open storage folder], the folder in which the saved scanned images were saved opens. Depending on the output settings, the [Open storage folder] link may not be displayed.

Scanning with Start Button

If you set frequently-used scans to the scanning shortcuts and assign them as jobs, you can run shortcut scans from the operation panel. If you place the document, use the ▲▼ buttons to select the job to be run, and press the Start button, CaptureOnTouch starts and scanning starts.

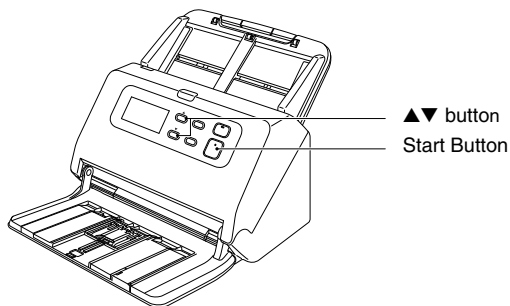


Hint

- If the [Do not display the main screen when the scan is started with the scanner button] checkbox is enabled in the Environmental settings, the main CaptureOnTouch window will not be displayed when a scan is started from the start button. Only dialog boxes and error messages during scanning, and completion popup windows are displayed.
- If the [Do not display the main screen when the scan is started with the scanner button] checkbox is enabled in the Environmental settings, [Enable additional scan] and [Edit after scanning] will be disabled when scanning is started from the start button.


Operations for the scanned image edit window

When scanning has finished, a preview window of the scanned image will be displayed.

To display the edit window in the preview window, click  on the tool bar.





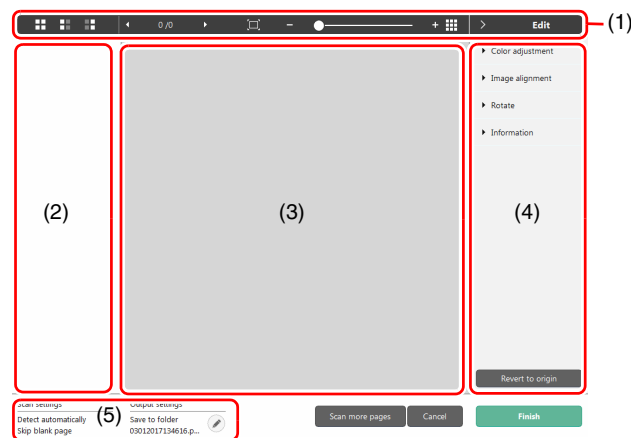






Scanned image preview screen



(1) Toolbar

This tool bar enables operations to thumbnails and preview images.

Tools	Description
	Switches the image selection for the thumbnail area. These buttons mean "All pages", "Odd pages" and "Even pages" from the left.
	Indicates the page of the image displayed on the preview. Click   to change the page to be displayed.
	Changes the display magnification. Move the slider to + (plus) or - (minus) to enlarge or reduce the preview image. Click  to make the display magnification of the preview enlarged to full-screen.
	Click to display or hide the preview area.
	Click  to display or hide the Edit window.

(2) Thumbnail Display Area

Thumbnails of the scanned documents will be displayed. Also, separator will be displayed, if you set the batch separation when you scan. You can implement the following operations.

Click a thumbnail to display a preview of the scanned image in the preview window.

Drag a thumbnail to change pages.

By right-clicking the thumbnail image, you can add a new separator after the page, using [Insert a separation].

(3) Preview Area

The preview images of scanned documents are displayed.

(4) Edit window

You can edit scanned documents.

Click an item to open the edit window.


Click the [Restore] button to discard the edit results and return to the previous scan image.



Hint

If [Edit after scanning] is disabled in the scanning shortcut settings, the edit window will not be displayed.

[Color adjustment] (Easy settings)

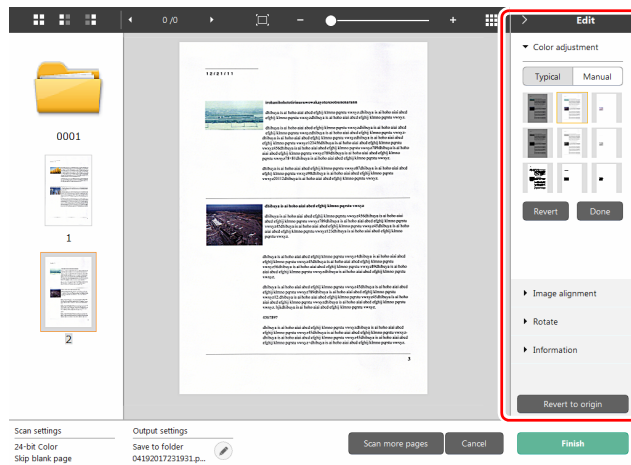

Click [Color adjustment] to display the default.


Click the button to toggle between the typical settings and manual settings displays.

Click a thumbnail in typical color adjustment to select the most suitable preview image that is displayed.

9 thumbnail patterns are displayed for the relevant image in color, and 6 patterns in grayscale.

When adjustment is finished, click the [Done] button. To cancel the adjustment, click the [Revert] button.

[Color adjustment] (Manual settings)

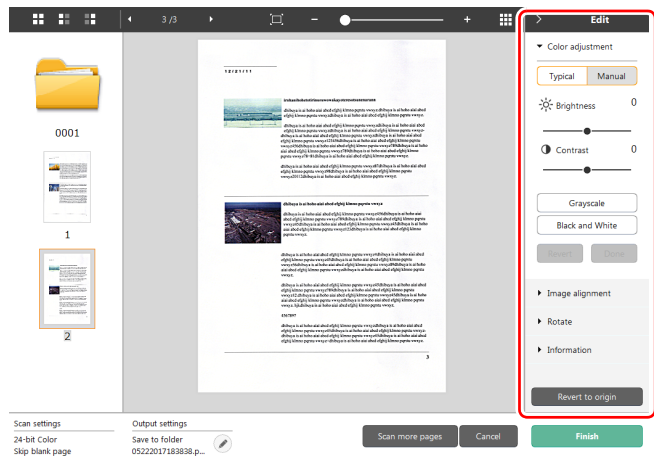


Move the slider to the left or right to adjust the brightness and contrast of the image, checking the preview image.

Click the [Grayscale] button to render the image in grayscale.

Click the [Black and White] button to render the image using 2 values: black and white.




When adjustment is finished, click the [Done] button. To cancel the adjustment, click the [Revert] button.

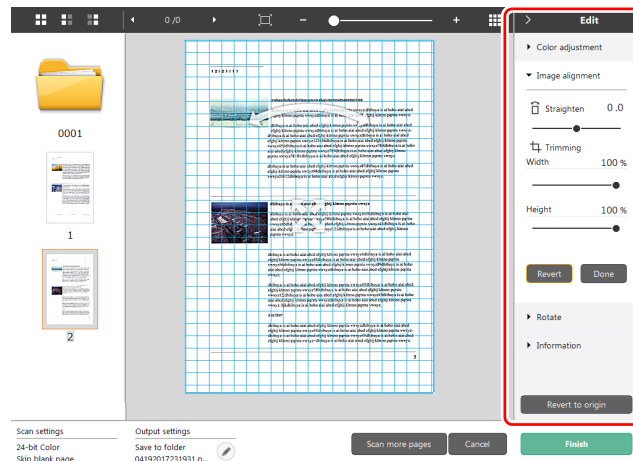[Image alignment]




Click [Image alignment] to display.

The preview image or the slider can be used for the straightening and the trimming.

In the preview image, drag the Move grip , the Straighten grip  and/or the trimming frame directly. To change the extent of the trimmed image, drag the Move grip  on the preview.

When adjustment is finished, click the [Done] button. To cancel the adjustment, click the [Revert] button.


[Rotate]

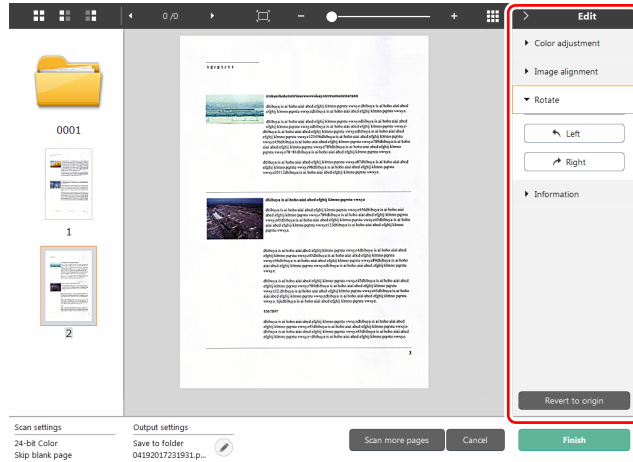

Click [Rotate] to display.

The scanned image can be rotated in 90 degrees to the left or the right. The rotation can be adjusted according to the preview image.

[Information]

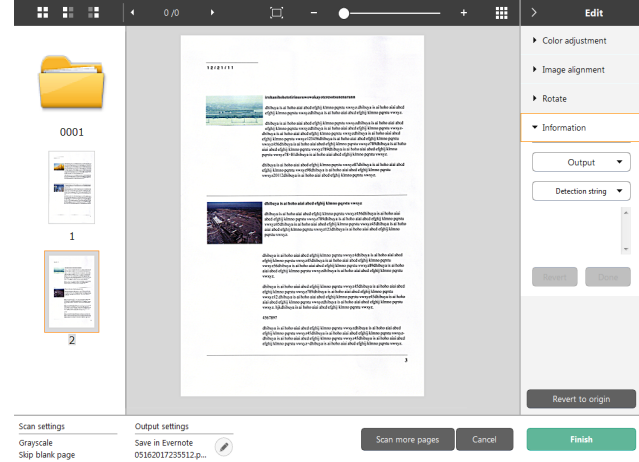

Will be displayed, when you click [Information].

When you click the [Detection string] button when the page thumbnail is selected, "Detection string from 1 to 10" can be selected from the pull-down menu. If you have selected a separator, you can select the [Detection string], and [Document name]. Selected detection string is displayed on area below the button and can be edited.

(5) Information Display Area

The information regarding the "Select document" and "Select output" is displayed.

Click the  button, and the Output Settings dialog will appear.

Click the [Scan more pages] button to continue the scanning.

Clicking the [Cancel] button will destroy the scanned images and return to the top screen.

When clicking the [Finish] button, the output processing will start. After it is completed, the screen will return to the top screen. If saving the scanned image, the link to [Open storage folder] will be displayed.



Hint

If [Enable additional scan] is disabled in the scanning shortcut settings, the [Scan more pages] button will not be displayed.


Select document settings

By default, CaptureOnTouch enables the [Full auto] scan setting, so scanning is implemented using the scan conditions that match the document.


To specify the document size, color mode, and other settings, set the desired scan condition by editing the scan mode panel.

Creating new [Select document] panels

Click the [New document] button, and a [New document] panel will be added.

Click  to display the list of panel types. The selected type of the panel is created.

Edit [Select document] panel

The [Select document edit screen] opens when you click the  button in the [Select document] panel.

Click the [Select document] tab in the shortcuts editing window.

Scan settings

Color mode:

Detect automatically

Page Size:

Match original size

Dots per inch:

Detect automatically

Scanning Side:

Skip blank page

Automatically straightens skewed images:

Straightens with angle of fed documents

Rotate image to match orientation of text

☒ Enable

Use advanced settings dialog box

☐ Enable


Setting...

General

Name:

Full auto


Icon



☒ Change the icon

Setting...

Close



Scan settings

Makes the scan settings.

[Color mode]

Select the color mode for scanning from below.

Detect automatically	Automatically determines the color mode based on the document content and scans accordingly.
24-bit Color	Scans the document in color.
Grayscale	Scans the document in Grayscale.
Black and White	Scans the document in black and white (binary).

[Page Size]

Select the paper size of the document to be scanned.

If you specify [Match original size], the page size of the scanned document is detected and the images are saved at the detected size.

[Dots per inch]

Select the resolution.

Select [Detect automatically] and the software will automatically scan the document at the optimum resolution.

[Scanning Side]

Select the scanning side of the document.

If you select [Skip blank page], scanned images of blank pages are not saved.

[Automatically straightens skewed images]

If a document is not straight when fed, the scanner detects that the document is not straight from the scanned image and straightens the skewed image.

Select the setting from below.

[OFF]

[Straightens with angle of fed documents]

[Straightens with angle contents of fed documents]

[Rotate image to match orientation of text]

Check [Enable] on to rotate the image in the same direction with the characters.

[Use advanced settings dialog box]

Document scan settings include basic items that are configured in [Scan settings], and the settings that are configured in the advanced settings dialog box. The settings in the advanced settings dialog box are applied for settings other than the basic items.

Enable [Use advanced settings dialog box] to implement advanced scanner settings other than the basic items using the advanced settings dialog box (scanner driver). To open the scanner driver, enable this item, and then click the [Setting] button.



Hint

The driver settings dialog box includes setting items that are the same as the basic items in [Scanner setting], but the setting for each of the them is stored separately.

Which settings are used during scanning differs as follows depending on the setting of the [Use advanced settings dialog box] check box.

Setting of [Use advanced settings dialog box]	Basic items	Other than basic items
OFF	Settings of [Scanner setting]	Settings of the advanced settings dialog box of the scanner driver
ON	Settings of the advanced settings dialog box of the scanner driver	

For the advanced settings other than the basic items, see the help in the driver settings dialog box.

General

Set the icon for the scan mode.

Icon


You can change the document scan icon displayed in the select document panel and scanning shortcut panel.

Enable [Change icon] to enable the [Setting] button and select the file. The file formats that can be selected as icon files are described below.

- .ico, .exe, .jpg, .png

Setting the Batch Separation

Set the batch separation.

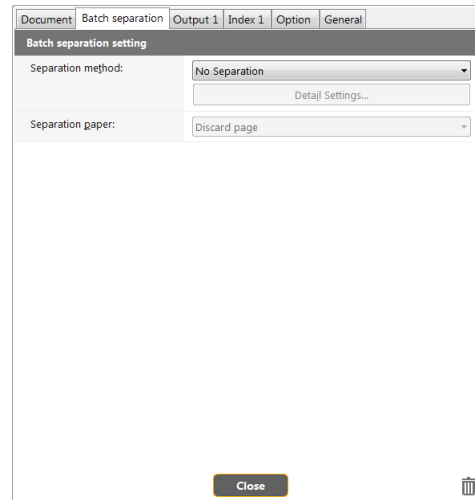

Separation paper

Select the batch separation method and click the [Detail settings] button, to display the [Batch separation settings] and you can set the details of separation method.

Select the batch separation method from the following.

[No Separation]

[Counter]

[Barcode]

[Zone OCR]

[Patch code]

[Blank Page]

[Front of page]

! IMPORTANT

To use [Barcode], you will have to install a bar code module (optional).

Separator page

Select the separator page from the following.

[Discard page]

[Include in the current document]

[Include in a new document]


Setting the output

By default, CaptureOnTouch enables the settings to convert the scanned images to PDF file and save to a folder.


To specify the output method and save location, edit the output panel and set the desired output.

Create new [Output] panel


Click the [New output] button to add a [New output] panel.

Click  to display the list of panel types. The selected type of the panel is created.

Edit [Output] panel

The Edit output screen opens when you click the [] button in the Output panel.


Click the [Output] tab in the shortcuts editing window.

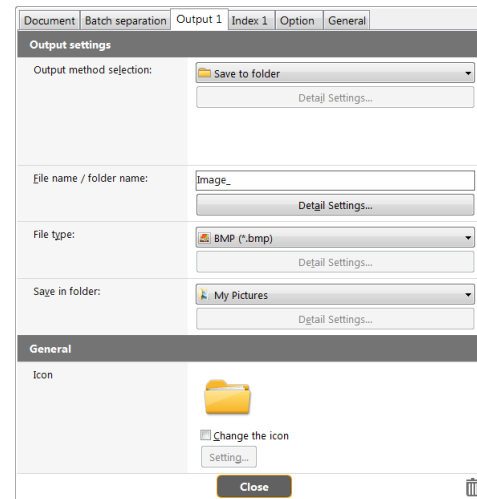

Select output method

File formats and save locations that can be selected depend on the output method selected.

Save to folder

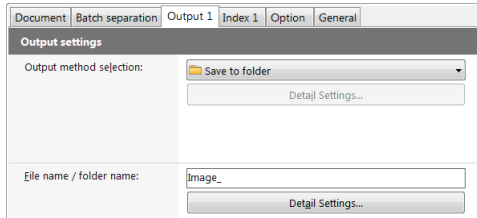

Saves the scanned image to the specified folder. When this output method is specified, set the save location folder.

Other output methods

CaptureOnTouch supplies output methods other than [Save to folder] as plugins.

By installing the plug-in, you can use various services such as printing the scanned image or attaching it in an email.


Checking can be added, when you are installing the software for the plugin.

The output methods that can be selected depend on the plugins that have been installed.

For how to use the plugins, see the plugin help.

Setting the Index

You can set the index file.

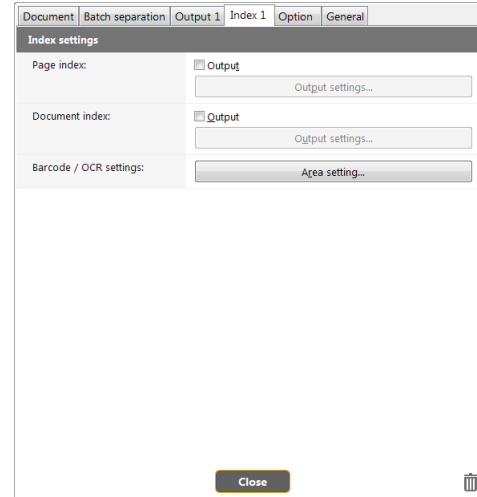

Page index

Outputs the page index.

When you click the [Output settings] button, you can set the page index.

Document index

Outputs the document index.

When you click the [Output settings] button, you can set the document index.

Barcode / OCR settings

Set the bar code / OCR to recognize the text.

When you click the [Area setting] button, a bar code / OCR settings dialog box will be opened.

Scanning Shortcut setting

By default, CaptureOnTouch enables the [Full auto] scan setting, so scanning is implemented using the scan conditions that match the document.


To specify combinations of document selection and outputs, you can edit the scanning shortcut panel to set the desired scanning shortcut.

Creating new [Scanning Shortcut] panels


There are two ways as described below to create a new Scanning Shortcut panel.

- Click the [Save to Shortcut] button in [3 actions] in Standard Scanning to register the selected output and document scan to one of the scanning shortcut panels.

- Click the [New shortcut] button to add [New scanning shortcut] panel.

Click  to display the list of panel types. The selected type of the panel is created.

Editing [Scanning Shortcut] panels

When the Edit button  is clicked, the Scanning Shortcut panel editing dialog will appear. ["Registering and editing scanning shortcuts"](#) (See p. 47)

About file formats

Set the file format of the scanned image. When you select a file format other than BMP or PNG, the [Detail Settings] button is enabled, allowing you to make the detail settings for the selected file format.



Hint


You can select one of the following file formats for the scanned image.

- PDF format
- TIFF format
- PNG format
- JPEG format
- BMP format
- PPTX format (File format for Microsoft PowerPoint 2007 and later)

The file formats that can be selected vary depending on the destination setting.

When you output the scanned image using the plug-in, the image is output in the file format set in the application of the plug-in. Therefore this file format may be different from the one selected in the Select document panel.

PDF setting

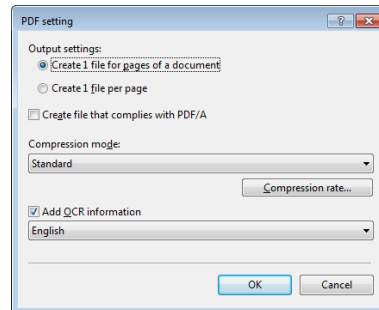


Specify the method used for saving when scanning the multi-page document, on [Output settings].

Create 1 file for pages of a document (Save all pages of the document as one PDF file). Create 1 file per page (Save each page as one PDF file).

For [Create file that complies with PDF/A], select [ON]. For [Compression mode] select either [Standard] or [high compression]. If you click the [Compression rate] button, you can specify the compression rate in the dialog box that appears.


The [Add OCR information] option allows you to specify whether to add OCR information to the scanned images.

TIFF setting

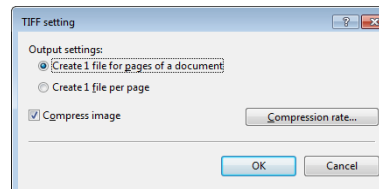


Specify the method used for saving when scanning the multi-page document, on [Output settings].
Create a single file for all the pages in the document (Save all pages of the document as one TIFF file). Create a file for each page (Save each page as one TIFF file).
By selecting ON for [Compress image] and clicking the [Compression rate] button, you can specify the compression rate in the dialog box that appears.

JPEG setting

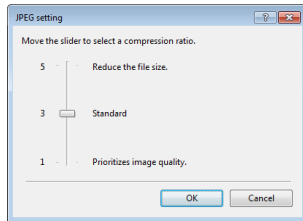


You can specify the compression rate of JPEG images.

PPTX settings

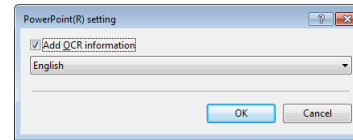


You can specify whether to add OCR information to the scanned images.

Environmental Settings

To configure the environmental settings of CaptureOnTouch, open the [Environmental settings] dialog box.
Click  (CaptureOnTouch icon) in the taskbar, and select [Environmental settings] from the menu.
The following describes the setting items of each tab displayed in the [Environmental settings] dialog box.

[Basic settings] Tab

On the [Basic settings] tab, configure the following settings.

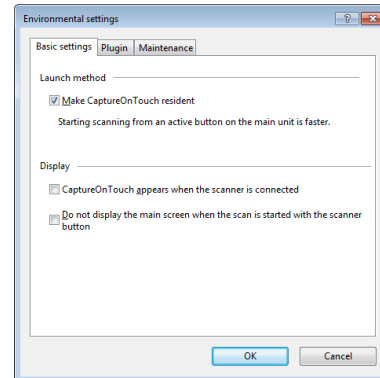

Launch method setting

By default, CaptureOnTouch becomes resident in the system when you start your computer. Clear the [Make CaptureOnTouch resident] check box to not make CaptureOnTouch resident in the system.

Display


Select the [CaptureOnTouch appears when the scanner is connected] checkbox to open the main screen of CaptureOnTouch automatically when the scanner is connected to the computer. This setting is only enabled when CaptureOnTouch is running (or resident in the system). When this setting is enabled, the [Do not display the main screen when the scan is started with the scanner button] setting is disabled.

If the [Do not display the main screen when the scan is started with the scanner button] check box is selected, the main screen of CaptureOnTouch is not displayed when the Scanning Shortcut scanning is started by pressing the scanner's Start button. However, dialogs and error messages during scanning and the pop-up screen when the scan is completed will be displayed.

When this setting is enabled, the [Enable additional scan] and [Edit after scanning] check boxes on the Edit Scanning Shortcut settings screen are disabled.

[Plugin] Tab

On the [Plugin] tab, confirm the plugins that have been added to CaptureOnTouch.

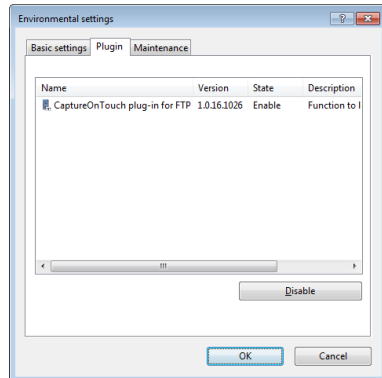

[Setting] button

Displays the detailed information on the selected plugins.




Hint

This button may not be displayed for some plugins.

[Enable] [Disable] button


This button is used to toggle between Enable/Disable modes for the plugin selected from the plugin list.

If you click the [Disable] button, the following dialog is displayed.

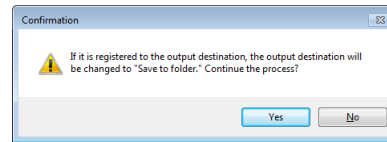


[Maintenance] Tab

On the [Maintenance] tab, you can configure the log settings for the maintenance of CaptureOnTouch and initialize the settings.

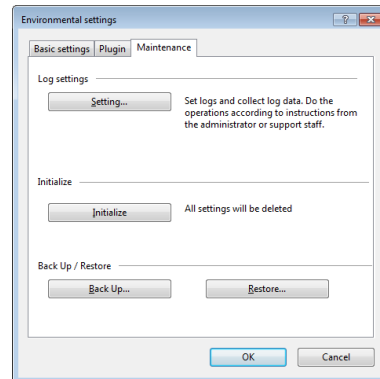

Log settings


The Log file settings screen opens when you click the [Setting] button. Select the type of log file.

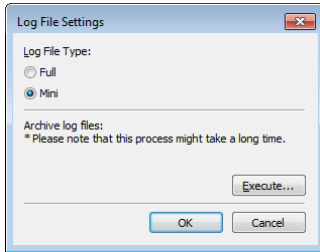

If you click the [Execute] button, the [Save File] dialog is displayed. The operation slows down if you select [Full] for [Log file type].

[Initialize]

A confirmation dialog box appears when you click the [Initialize] button.

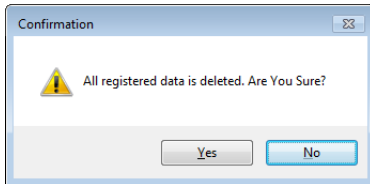

All CaptureOnTouch data are deleted and returned to the default settings.

Back Up / Restore

Use the [Back Up] and [Restore] buttons to back up the configuration file (settings, registered jobs, etc.) of CaptureOnTouch and restore the settings from the backup data.

[Back Up] button

Back up the settings of CaptureOnTouch to a backup file (*.cot). You can store the initial settings of CaptureOnTouch by performing a backup before you first use CaptureOnTouch.

[Restore] button

Restore the settings from the backup file. When using multiple computers, you can back up the environmental settings of one computer and then perform a restore on the other computers so that all of the computers have the same settings.

Scanning with CapturePerfect

Scanning with CapturePerfect


This section describes procedures from launching CapturePerfect to selecting a scanner, as well as procedures for scanning with the [Scan batch to file] function.

See the “CapturePerfect Operating Guide” or help for details.


1 From the Windows task bar, click [Start] and then select [All Programs].

Then click [CapturePerfect 3.1] followed by [CapturePerfect 3.1].

2 Click [Select Scanner] in the [Scan] menu.

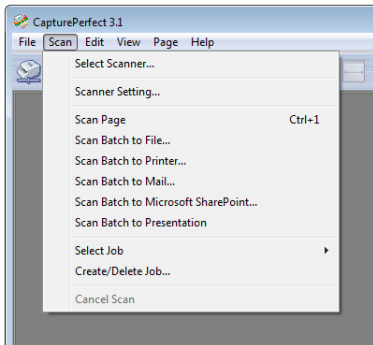


3 Select [Canon DR-M200] and click [OK].

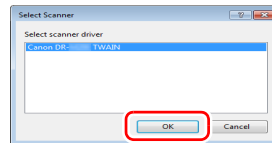

Hint

If [Canon DR-M200] does not appear, reinstall the scanner driver.
(See p. 8)

4 Set the default paper size and click [OK].

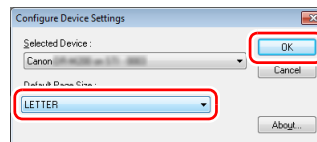


Hint

- The [Configure Device Settings] dialog box appears when selecting [Canon DR-M200] and clicking [OK] for the first time in the [Select Scanner] dialog box, and when [Settings] is clicked in the [Select Scanner] dialog box.
- These settings will apply when [Default] is clicked in the ISIS driver dialog box.
- For the TWAIN driver, the default size will be set to A4 and this cannot be modified.

5 Click [Scanner Setting] in the [Scan] menu.

6 Configure the scanning conditions. (See p. 65)

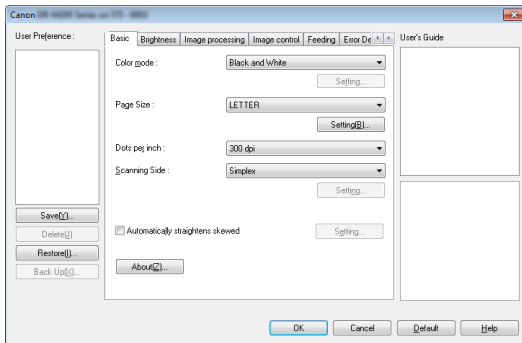

7 Place the document. (See p. 27)


8 Click [Scan Batch to File] in the [Scan] menu.

9 Configure the save destination, the name of the file to be saved and the file format, and then click [Save] to start scanning.

! IMPORTANT

If you configure scanning conditions that consume a large amount of the computer's memory, scanning may stop because of insufficient memory. If an error message appears due to insufficient memory while scanning is in progress, exit the application and try scanning again using different scanning condition settings.

10 If the placed document is removed, the scan will be interrupted and the [Continue Scanning] dialog box appears. To continue scanning, add a document and click [Continue Scanning]. To stop scanning, click [Cancel Scan].

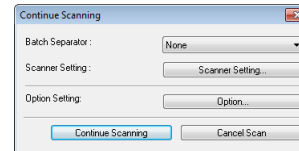

11 When scanning is finished, click [Exit] in the [File] menu.

Setting the Scanner Driver

When you scan a document in an ISIS compatible (CapturePerfect, etc.) or TWAIN compatible application, open the scanner driver and configure the scanning conditions and other settings.

This section describes the configuration and functions of the scanner driver.

Configuration and Functions of the Scanner Driver


The scanner driver consists of the following tabs.



Hint

For details on the setting screen, see the Help of the scanner driver. Click the [Help] button of the driver to display help related to the corresponding tab or dialog box.

[Basic] tab

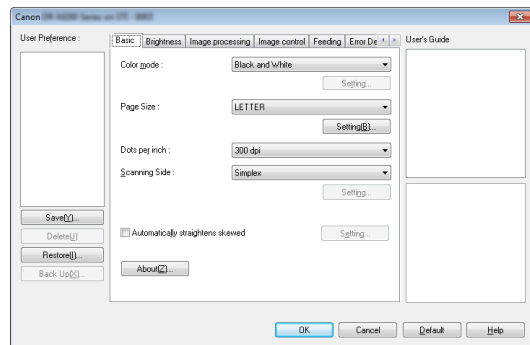


Configure basic scanning conditions such as the mode, page size, resolution, and scanning side.

Click [Setting] button of [Paper Size], to set the scan area and the custom paper size registration and long mode.




Hint

Depending on the ISIS compatible application, the application may have its own screen for setting scanning conditions. If the scanner driver is opened in such an application, setting items related to the functions provided by the scanner driver other than scanning conditions will be displayed on the [Basic] tab.

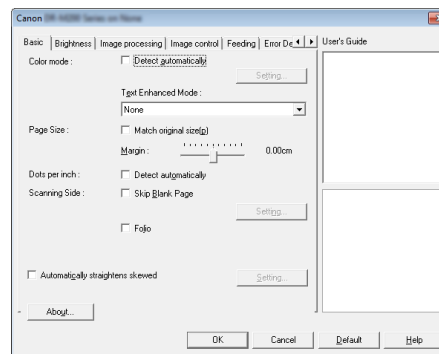


[Brightness] tab

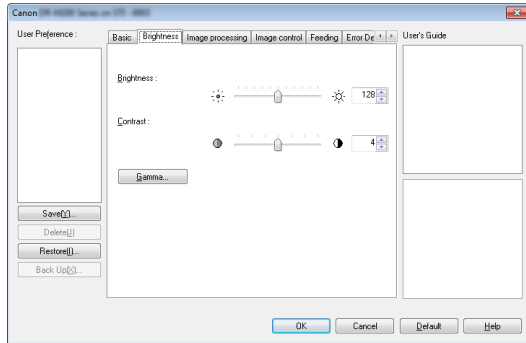


Adjust the brightness and contrast of scanned images. In addition, you can also click [Gamma] and set the gamma correction value for scanned images.

[Image processing] tab

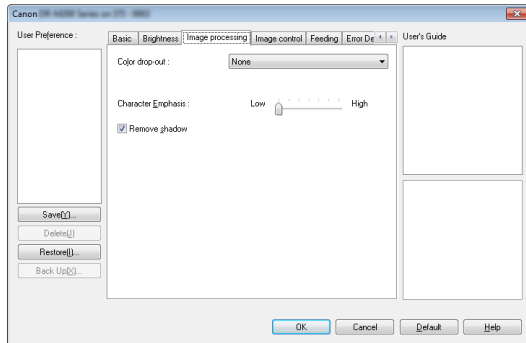


Set the processing method for scanned images.

[Image control] tab

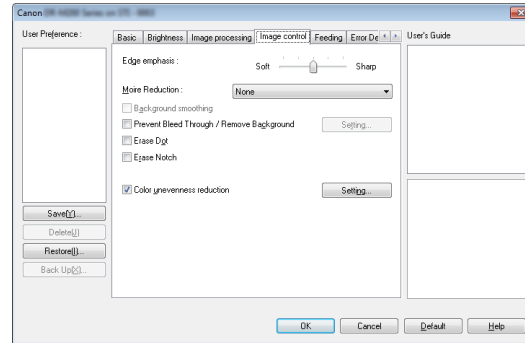


Set the image control method for the scanned image.

[Feeding] tab

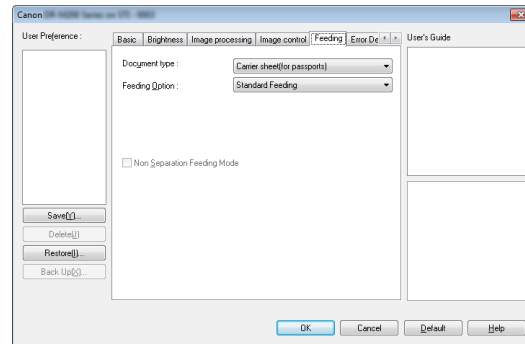


Specify scanner operations related to document feeding.

[Error Detection] tab

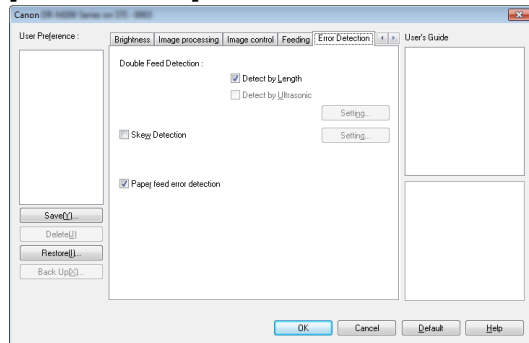


Set the items to be detected as errors during the scan.

[Others] tab

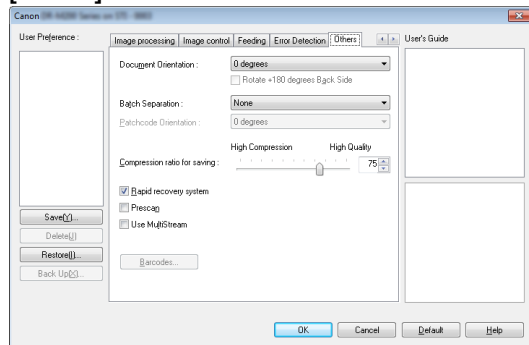

Configure special scan method and image processing settings.

User Guide

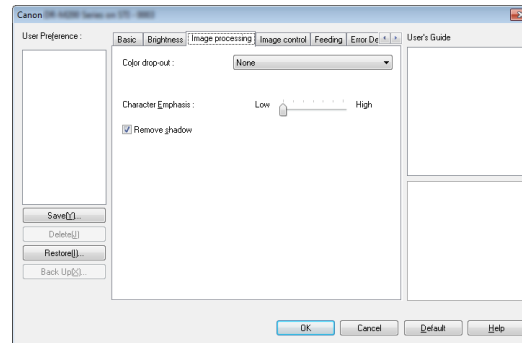


Inform you about the settings changed automatically by the driver. In addition, displays the image for which settings were currently made, in the illustrations.

Setting Basic Scanning Conditions

This section provides an overview of the basic setting items that are the minimum requirements when configuring the scanner settings.


Confirming Basic Conditions for Scanning

When you scan a document, make sure you confirm the [Color mode], [Page Size], [Dots per inch], and [Scanning Side] basic conditions in the Basic settings dialog box.

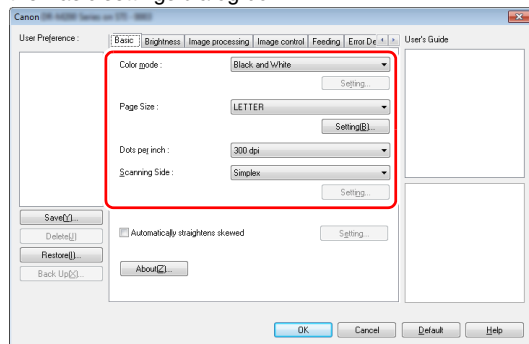

Color mode

Select the scanning mode.

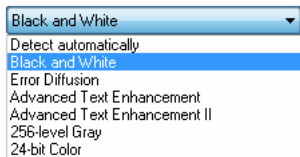


- [Advanced Text Enhancement] and [Advanced Text Enhancement II] remove or process the background color and background surrounding text to enhance the text for easy reading. When [Advanced Text Enhancement II] is selected, you can make the text in scanned images easier to read by adjusting the contrast on the [Brightness] tab.

- [Detect automatically] detects whether the document is in color, grayscale, or black and white. You can configure advanced settings related to the detection method by clicking [Setting]. For details, see the Help.

Page Size


Select the page size that matches the document to be scanned.

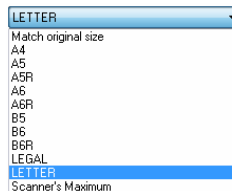

If [Match original size] is selected, the edges of the document are detected and images that match the size of the document are saved.

Dots per inch


Select the scanning resolution.

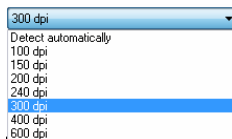

- Higher resolutions provide clearer images but result in larger file sizes and slower scanning.
- When [Detect automatically] is specified, the resolution is detected automatically from the content printed in the document.

Scanning Side

Select which of the sides of the document to scan.




If the scanning side is set to [Skip blank page], the images of blank pages are deleted when images are saved.

Scanning Documents of Unregistered Page Sizes

You can register an unregistered paper of non-standard size with a name, as a custom paper size.

Click the [Setting] button of [Page Size] in the [Basic] tab, to display the [Page Size Settings] dialog box.

Register the paper of non-standard size in the [Custom Page Size] tab.

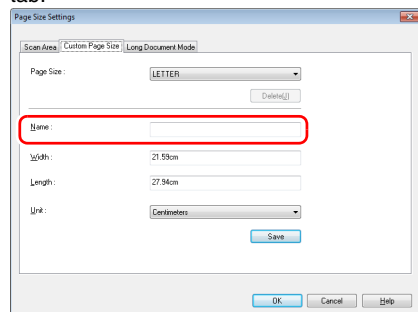


Specifying the Scan Area

Configure the following settings when you want to specify the area of the document to be scanned.

Specifying an area

To scan one area of a larger document, click [Setting] on [Page Size] in the [Basic] tab to display the [Page Size Settings] dialog box.

Designate which area of the document to scan in the [Scan Area] tab.

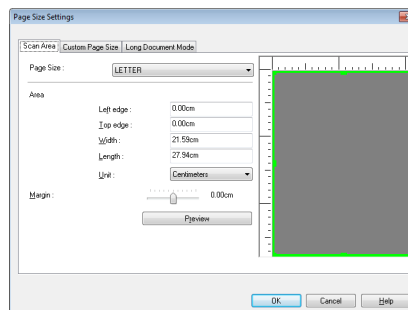


Configuring Scanner Settings According to Purpose


Set the scanning conditions according to the scanning purpose.

When you want to delete the images of the blank pages in two-sided documents

Set the scanning side setting to [Skip Blank Page] on the [Basic] tab to delete the images of the blank pages in the document.

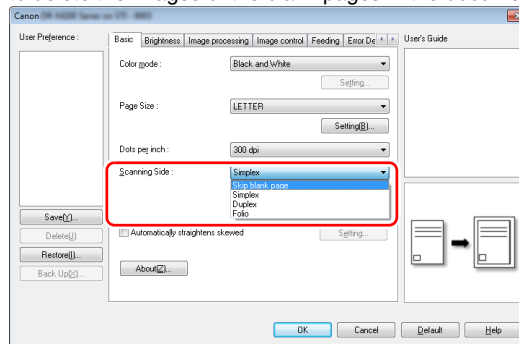


If [Skip Blank Page] is selected, the [Setting] button is enabled, and you can adjust the level for judging whether pages are blank.

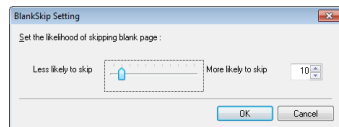


When you want to enhance contours in images

Adjust the edge emphasis setting on the [Image processing] tab.

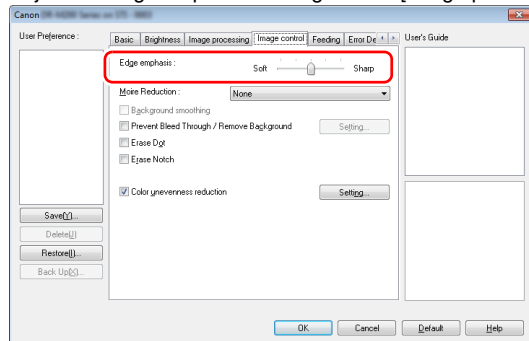

When you want to reduce the moire patterns that appear when color photos in magazines and other documents are scanned at low resolutions

Setting [Moire Reduction] on the [Image control] tab sheet allows you to reduce the moire patterns that are generated when color photos are scanned at low resolutions.

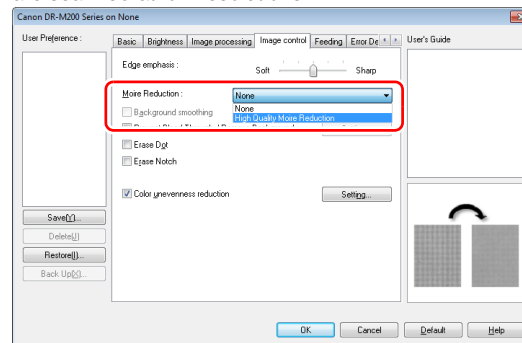


Hint


Moire reduction is enabled when the resolution is 300 dpi or less, and [High Quality Moire Reduction] is displayed when the resolution is 240 dpi or less.

When you want to reduce the color unevenness

Check the check box of [Color unevenness reduction] on the [Image control] tab to reduce the color unevenness.

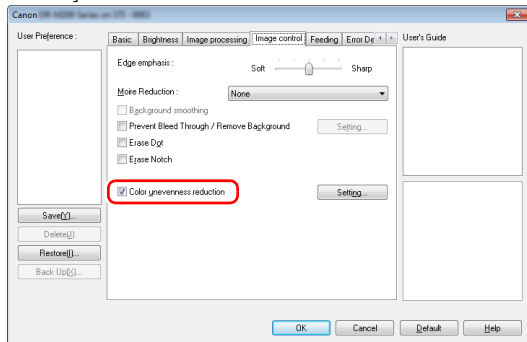


You can control the level of color unevenness by enabling the [Setting] button.

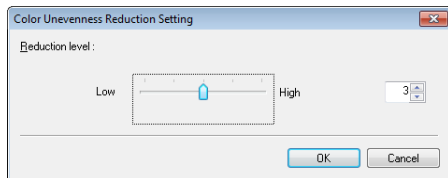


When you want to make lines and text in scanned images thicker or thinner

Drag the [Character Emphasis] slider in the [Image processing] tab to make lines and text in the scanned images thicker or thinner.

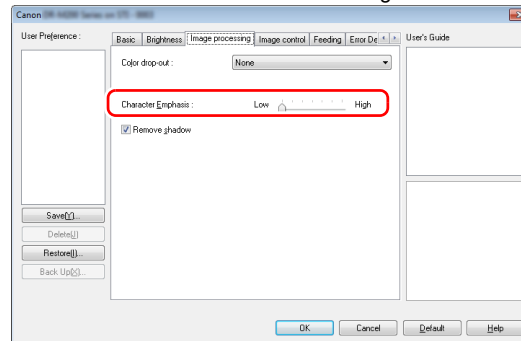

When you want to enhance text that is difficult to read because of factors such as the background of the scanned document


Select [Advanced Text Enhancement] or [Advanced Text Enhancement II] in the mode setting on the [Basic] tab. The background behind the text is removed or processed so that the text is emphasized for better readability.

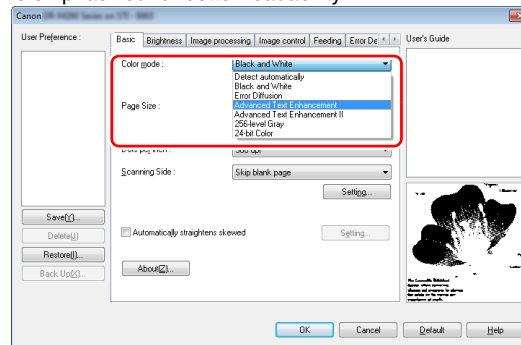

- Advanced Text Enhancement is suitable for a document with a light background color or a document with a non-uniform background (such as a pattern). If the background is uniform, it is removed where it surrounds the text, and if the background is non-uniform, it is processed to enhance text readability.
- Advanced Text Enhancement II is suitable for scanning a document with a uniform background color and light text and background. If the background is non-uniform, such as a pattern, the background may not be able to be completely removed and the text may become difficult to read. If necessary, you can make the text in scanned images easier to read by adjusting the contrast on the [Brightness] tab.


When you want to detect multiple pages fed at the same time

Select the [Double Feed Detection] check box on the [Error Detection] tab. You can enable either one or both of [Detect by Ultrasonic] and [Detect by Length].

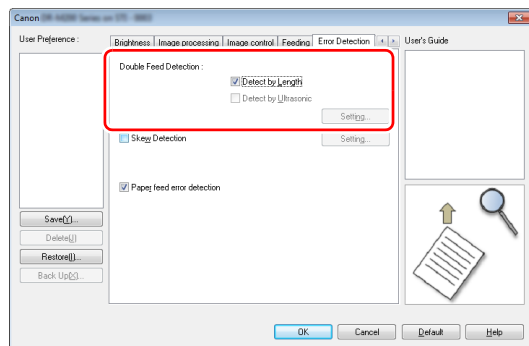


When you want to match the orientation of images to the text when scanning a mixture of pages with different text orientations

Select [Text orientation recognition] in [Document Orientation] on the [Others] tab. The text orientation on each page is detected, and the scanned image is rotated in 90-degree increments to correct the orientation.

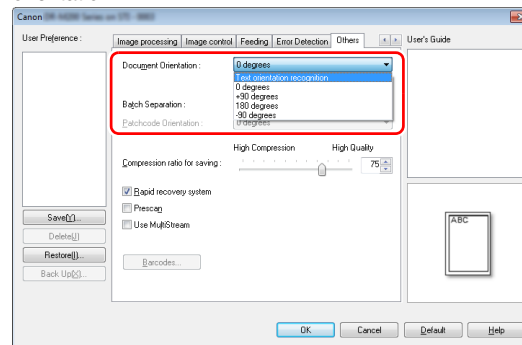


When you want to rotate the images of a document placed horizontally to correct the orientation

Specify the rotation angle in [Document Orientation] on the [Others] tab.

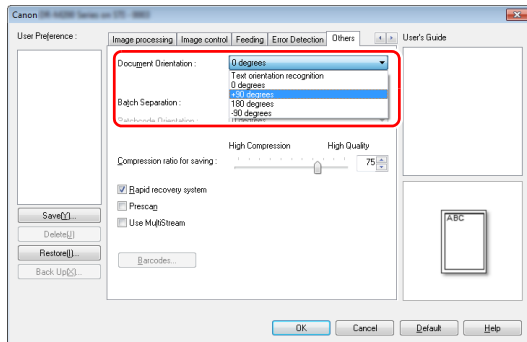

- Set [Batch Separation] on the [Others] tab to [Auto].

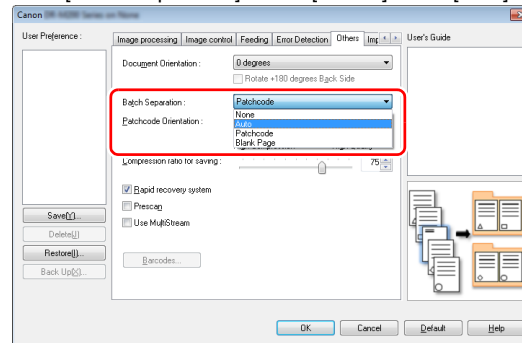


When [Batch Separation] is set to [Auto], the batch is separated after the next document is placed and scanning is continued.

For more details about [Blank Page] and [Patchcode], see "Batch separation using patch code sheets" on p. 78

When you want to use batch separation for scanning

When you want to divide and scan a document, you can separate a batch at the timing with which each next document is placed and scanned. (Only enabled for applications that support batch separation.) In this case, set the scanner driver as follows.


- Set [Feeding Option] on the [Feeding] tab to [Panel-Feeding] or [Automatic Feeding].

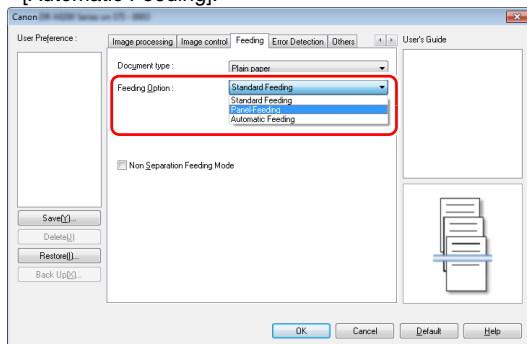

When you want to use multistream settings for scanning

Multi-stream allows you to output multiple different scanned images with a single scan operation, and output scanned images with different scanning conditions for each of the front and back pages (multistream settings).

When you want to use the multistream settings for scanning, select the [Use MultiStream] checkbox on the [Others] tab to display the setting items related to multistream, and then configure the setting items in the following order.

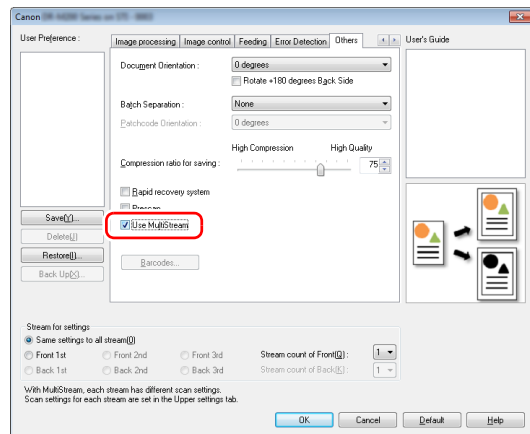

- ① When you want to specify different scanning conditions for the front and back pages of a document, select [Both] for [Scanning Side] on the [Basic] tab in advance.
- ② Specify the number of scanning conditions to apply in [Stream count of Front]. Up to three can be specified.
- ③ Select [Front 1st], and then open the other tabs and set the scanning conditions. Depending on the value specified for [Stream count of Front], configure the remaining [Front 2nd] and [Front 3rd] in the same way.
- ④ When specifying the scanning conditions of the back, configure the settings in the same way as described in ② to ③. In this case, specify [Stream count of Back], and then set the scanning conditions for each of [Back 1st] to [Back 3rd].



Hint

The following shows the setting conditions that can be set in the multistream settings.

Tab	Items that can be set
[Basic] tab	[Color mode] and [Dots per inch] (excluding [Auto-detection] for both)
[Brightness] tab	[Brightness] and [Contrast]
[Image processing] tab	[Character Emphasis]
[Image control] tab	[Edge emphasis]
[Feeding] Tab	None (all disabled)
[Error Detection] tab	None (all disabled)
[Others] Tab	None (only [Use MultiStream] is enabled)


To scan barcodes

Installing a barcode module (optional) allows you to scan barcodes in the document. Click the [Barcode] button on the [Others] tab to configure barcode scanning conditions.

See Help for details about settings.

When you want to remove dots and notches that appear in documents


You can remove dots and notches protruding from object outlines that appear in documents from scanned images.

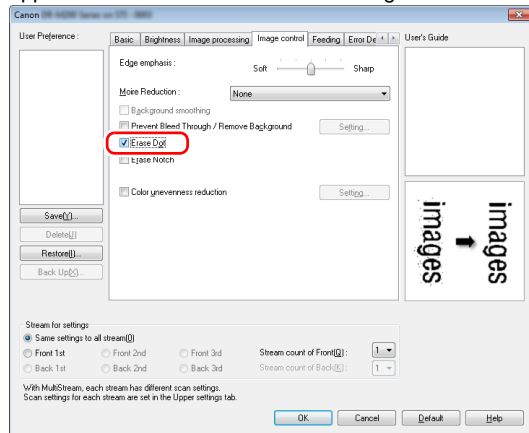

- Select the [Erase Dot] check box to automatically remove isolated black dots (3 x 3 dot size) from white backgrounds (or white dots from black backgrounds).
- Select the [Erase Notch] check box to remove notches that protrude from object outlines in scanned images.

When you want to save a scanner driver setting

When you finish configuring a setting, click the [Save] button of [User Preference] to save the setting.

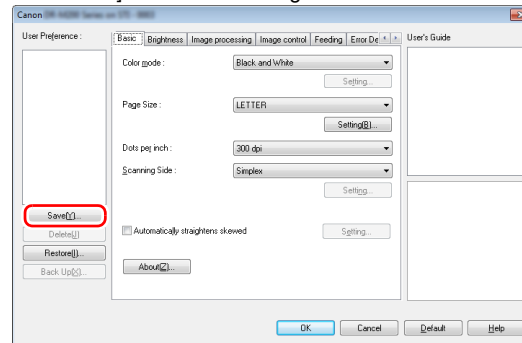

The saved setting is registered to the list. You can delete a setting from the list with the [Delete] button, and save or load a configuration file with the [Back Up] or [Restore] button.

Function Restrictions Depending on Color Mode Setting

Some of the setting items in each of the driver tabs are disabled as follows depending on the setting for [Color Mode] on the [Basic] tab.

[Brightness] tab

Setting value	Contrast
Detect Automatically	O
Black and White	O
Error Diffusion	O
Advanced Text Enhancement	X
Advanced Text Enhancement II	O
256-level Gray	O
24-bit Color	O

(O: Available for setting, X: Not available for setting)

[Others] Tab

Setting value	Prescan
Detect Automatically	X
Black and White	O
Error Diffusion	O
Advanced Text Enhancement	O
Advanced Text Enhancement II	O
256-level Gray	O
24-bit Color	O

(O: Available for setting, X: Not available for setting)

[Image control] tab

Setting value	Color drop-out	Character Emphasis
Detect Automatically	X	O ³⁾
Black and White	O	O
Error Diffusion	O	O
Advanced Text Enhancement	O	O
Advanced Text Enhancement II	O	O
256-level Gray	O	X
24-bit Color	X	X

(O: Available for setting, X: Not available for setting)

[Image processing] tab

Setting value	Edge emphasis	Background smoothing	Prevent Bleed Through / Remove Background	Erase Dot	Erase Notch
Detect Automatically	O	O	O ¹⁾	O ²⁾	O ³⁾
Black and White	O	X	O	O	O
Error Diffusion	O	X	O	X	O
Advanced Text Enhancement	O	X	X	O	O
Advanced Text Enhancement II	X	X	X	O	O
256-level Gray	O	O	O	X	X
24-bit Color	O	O	O	X	X

(O: Available for setting, X: Not available for setting)

¹⁾Not available for setting if all of the following conditions in the [Auto Image Type Detection Settings] dialog box are met.

- [Detection mode] is not set to [Color or Gray]
- [Mode in case of binary] in the [Settings for in case of binary] tab is set to [Advanced Text Enhancement] or [Advanced Text Enhancement II]

²⁾Not available for setting if either one of the following two conditions are met.

- [Detection mode] in the [Auto Image Type Detection Settings] dialog box is set to [Color or Gray]
- [Mode in case of binary] in the [Settings for in case of binary] tab is set to [Error Diffusion]

³⁾Not available for setting if [Detection mode] is set to [Color or Gray] in the [Auto Image Type Detection Settings] dialog box.

Function limit due to the setting of the document type

Depending on the setting of the [Document Type] of the [Feeding] tab, a part of the settings in each tab of the driver will be disabled, in the following manner.

Document type	Ultrasonic Double Feed Detection	Non Separation Feeding Mode
Plain paper	O	O
Extra-thin paper	O	O
Extra-thick paper/Plastic card	X	O
Carrier sheet	X	O
Carrier sheet (for passports)	X	X


(O: Available for setting, X: Not available for setting)

More Advanced Scanning Methods (Batch Separation)

Batch Separation (Insert blank page)

Recognizes blank pages as batch separators and performs batch separation (automatic file separation) when documents containing blank pages are scanned.

On the [Others] tab of the ISIS driver properties, select [Blank Page] from the Batch Separation dropdown list.

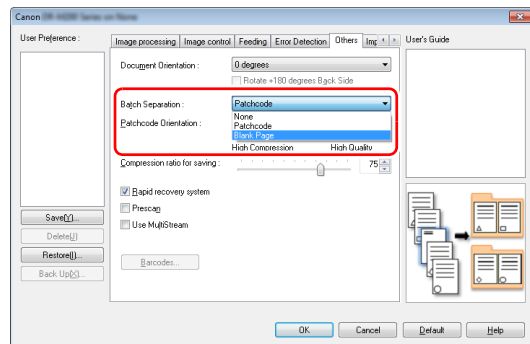

! IMPORTANT

- When [Simplex] is selected in [Scanning Side], blank pages on the scanned side will be recognized as separators. When [Duplex], [Skip blank page], or [Folio] is selected in [Scanning Side], document pages will be recognized as separators when both sides of a page are blank.
- Images of pages recognized as separators will not be saved.

Batch separation using patch code sheets

DR-M260 supports batch separation (automatic file separation) functions by using patchcodes.

By tucking patchcode sheets supplied with this scanner into a document and scanning it, the scanner can automatically separate files by images of documents containing patchcode sheets (or documents after the patchcode sheet).



Hint

Patchcodes are included with this product in PDF format. Applications that can read PDF files such as the supplied CapturePerfect are required to use this function.

The following patchcodes are installed together with the scanner driver as PDF files.


Type of Patchcode	Pattern	Description
PATCH T (FILE A)		Files are separated from the page after the page printed with this patchcode. You specify in the application whether to include the page printed with the patchcode in the scanned image.
PATCH II (FILE B)		Files are separated from the page printed with this patchcode. The page with the printed patchcode is always included in the scanned image.

The following operations are performed when using patchcodes for scanning.

1 Print patchcode with a printer.


Click [Start] – [All Programs] – [Canon DR-M200 Series] and then select [Patchcode] from the menu.

Patchcodes can be printed in A4 and letter (LTR) sizes. Open the application and print a patchcode that is the same size as the document to be scanned.

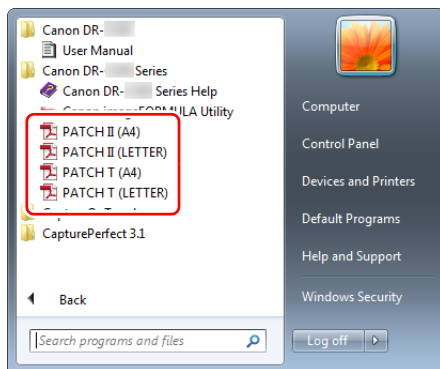


Hint

In Windows 8.1, it is registered at the following location.

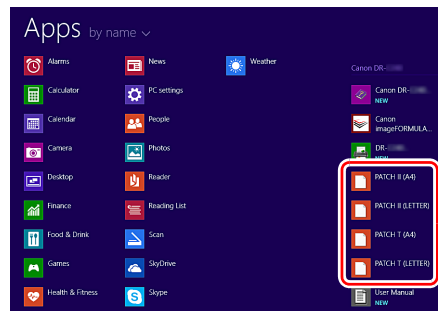

! IMPORTANT


- Patchcodes must be printed in their normal size. If patchcodes are enlarged or reduced, they may not be recognized correctly.
- When copying provided patchcodes to create different sized patchcodes, ensure that the patchcode fits inside the effective range shown in the following diagram. Also, when copying patchcodes, ensure that they are the same size and shade as the original.

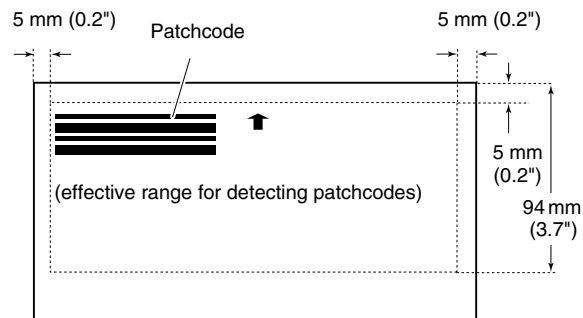

- Keep the patchcode sheet clean. Take particular care to keep the patchcode detection range area clean. Also, do not bend, fold or crease the sheet.


- 2 Place the documents in the scanner after inserting the patchcode sheet in front of the page that separates the files.**

Insert the patchcode sheets at the beginning of documents to change file separation.

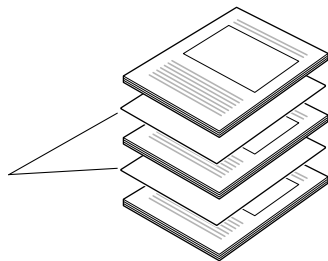


- 3 In an application, specify a patchcode as a type of batch separation.**

When using CapturePerfect, select [Patchcode] in the [Batch Separator] settings.

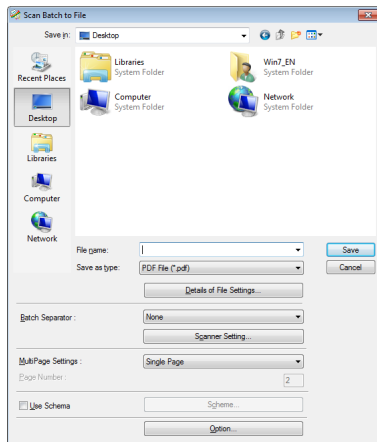

When using other ISIS-compatible applications, open the scanner driver settings screen and select [Patchcode] in [Batch Separation] on the [Others] tab.

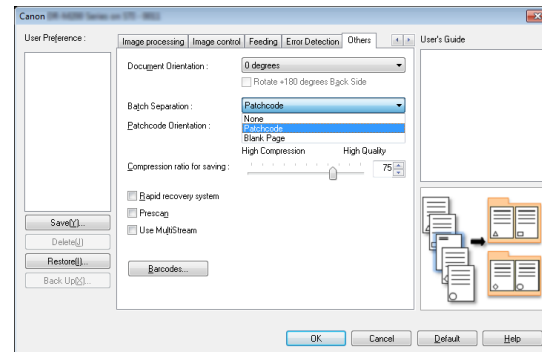

Daily Maintenance


Clean the scanner on a regular basis, as described below, to maintain peak scanning quality.

CAUTION

- When cleaning the scanner and the inside of the scanner, turn OFF the power switch and disconnect the power cord from the power outlet.
- Do not use spray cleaners to clean the scanner. Precision mechanisms, such as the light source, may get wet, and cause a malfunction.
- Never use paint thinner, alcohol, or other organic solvents to clean the scanner. The exterior of the scanner may become deformed, discolored, or melted. It may also cause a fire or electric shock.

Cleaning the Scanner

To clean the outside of the scanner, wipe off any dirt with a cloth that has been dampened with water and thoroughly wrung out, and then wipe the scanner dry with a clean dry cloth.

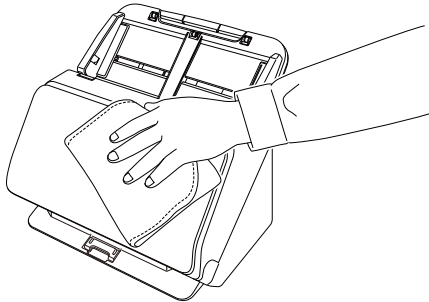


Cleaning the Inside of the Scanner

Dust or paper particles inside the scanner may cause lines or smudges to appear on scanned images. Use compressed air to periodically clean dust and paper particles from the document feed opening and the inside of the scanner. After finishing a large scanning job, turn OFF the scanner and then clean out any paper particles remaining inside the scanner.


Cleaning the Sensor Glass and the Rollers

If scanned images contain streaks, or if the scanned documents become dirty, the sensor glass or rollers inside the scanner may be dirty. Clean them periodically.

1 Open the document eject tray.

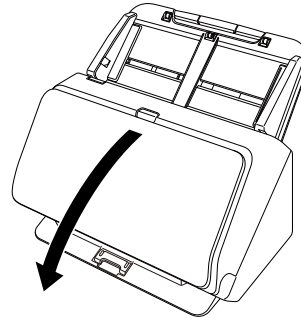


- 2** Pull the OPEN lever and pull open the front unit toward you.

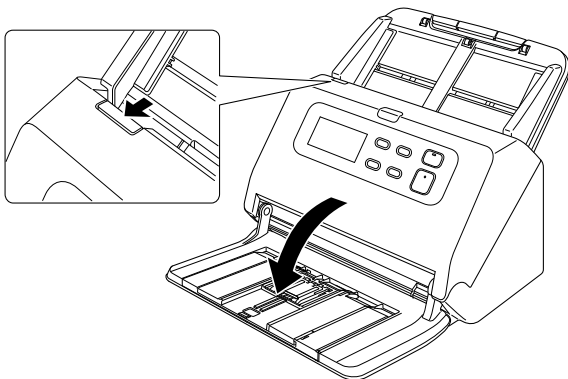

- 3** Use compressed air to remove dust and paper particles from the inside of the scanner.

- 4** Wipe any dirt off the scanning glass.

Wipe any dirt off the scanning glass with a cloth that has been dampened with water and thoroughly wrung out, and then wipe the glass dry with a clean, dry and soft cloth.

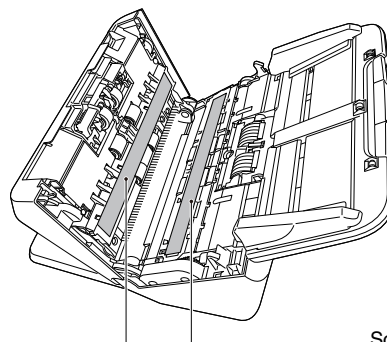


! CAUTION

Do not spray water or neutral detergent directly on the scanner. Precision mechanisms, such as the light source, may get wet, and cause a malfunction.

! IMPORTANT

- Scratches on the sensor glass may cause marks on the images, as well as feeding errors. If there are scratches on the sensor glass, contact your local authorized Canon dealer or service representative.
- Take care to ensure the anti-static brush in the front unit does not become deformed.

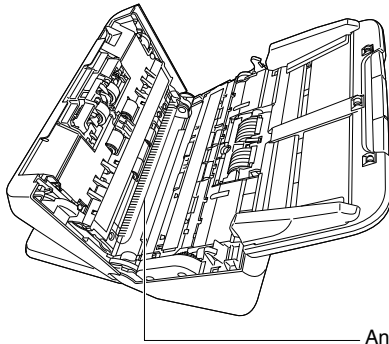


Anti-Static brush

5 Clean the rollers.

Clean the rollers while turning them.

Wipe the rollers with a cloth that has been dampened with water and thoroughly wrung out, and then use a clean, dry and soft cloth to wipe away any moisture.

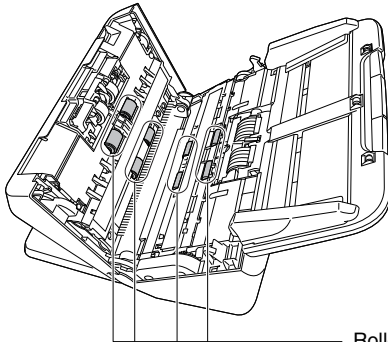


Rollers

6 Remove the retard roller and feed roller. (See p. 86, p. 87)

! IMPORTANT


Remove the retard roller and feed roller from the scanner to clean them, and be sure to reattach them to the scanner when cleaning is finished.

7 Wipe the removed rollers with a cloth that has been dampened with water and thoroughly wrung out.

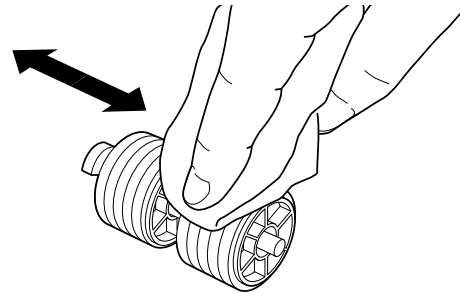


8 Reattach the retard roller and feeding roller. (See p. 86, p. 87)

- 9** Close the front unit by gently pushing it up on both sides until it clicks into place. Make sure that the front unit is completely closed by pushing until you hear a click.

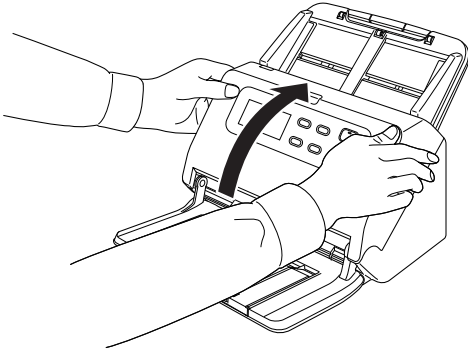


- 10** Close the document eject tray.

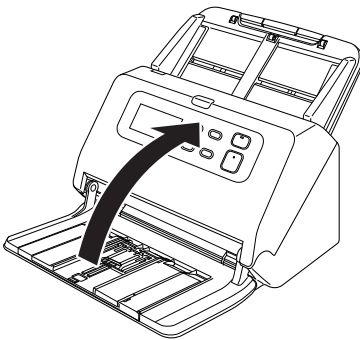


Replacing Consumable Parts

The two rollers (feed roller and retard roller) installed in the scanner are consumable parts. The feed roller and retard roller wear with scanning. If the feed roller and retard roller are worn, documents may not feed correctly and paper jams and double feeds may occur. When more than 200,000 pages have been fed (total number of pages fed by the scanner), the following error is displayed in the operation panel.

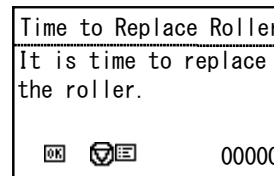

Also, a message prompting you to replace the rollers is displayed, when the computer is started.

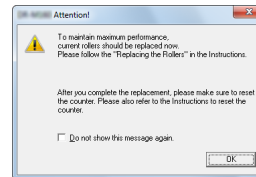

If this message begins to be displayed at startup, purchase an exchange roller kit and replace the worn parts with the consumable parts included in the kit (feed roller and retard roller). [See p. 102](#) for details about the exchange roller kit.


Furthermore, the counter in the scanner that records the number of pages fed also needs to be reset when you replace the rollers. ([See p. 88](#))

Hint


Even before it becomes time to replace the rollers, scanned images may become stretched in the vertical direction due to wear of the rollers. If this happens, adjust the reduction ratio. ([See p. 84](#))

Opening and Closing the Front Unit

- 1 Open the document eject tray.

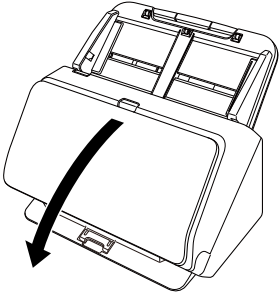


- 2 Pull the OPEN lever and pull open the front unit toward you.

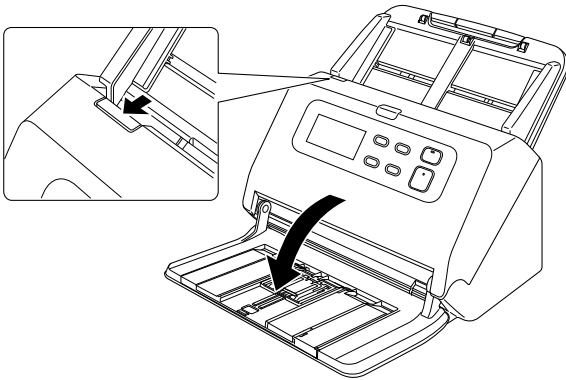


Hint


The location of each of the consumable parts is shown below.

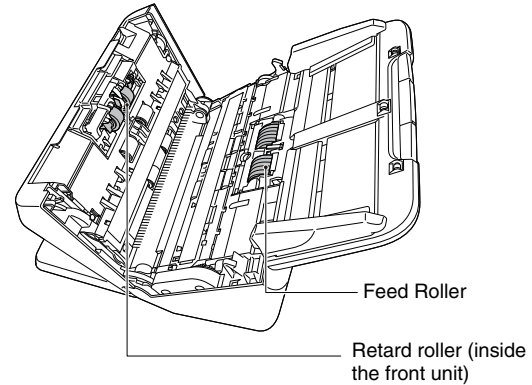

- 3 When closing the front unit, make sure that it is completely closed by gently pressing the left and right until you hear a click.

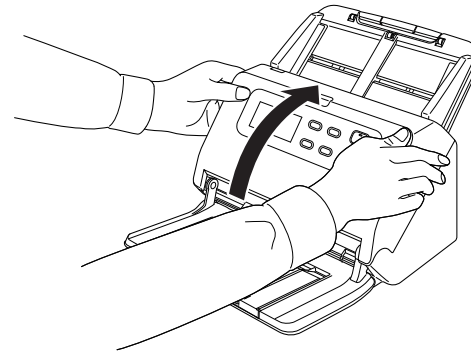


-
- 4** Close the document eject tray.

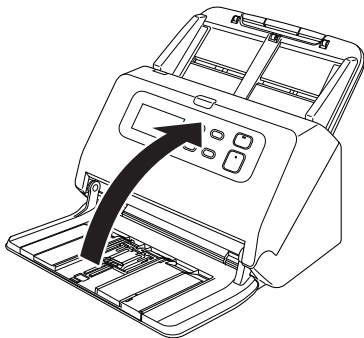


Replacing the Feed Roller


-
- 1** Open the roller cover.

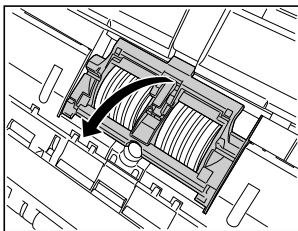


-
- 2** Remove the feed roller.

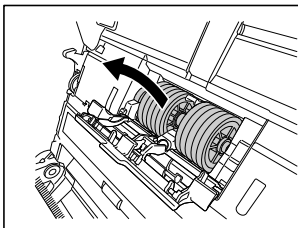

-
- 3** Install the new feed roller.

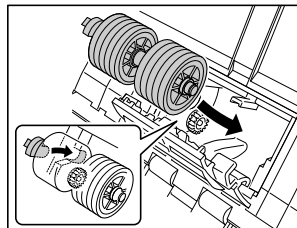


-
- 4** Close the roller cover.

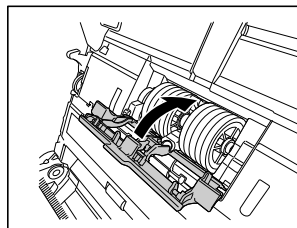


Replacing the Retard Roller



- 1 Open the roller cover.

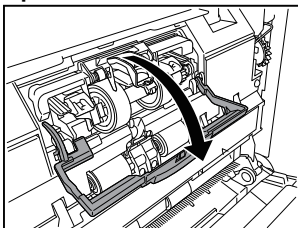


- 2 Lift the document detection lever.

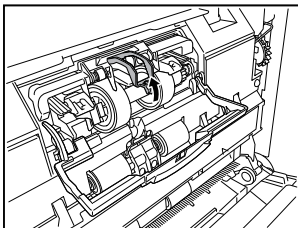


- 3 Pull the left lever that secures the retard roller to the scanner, and remove the roller.

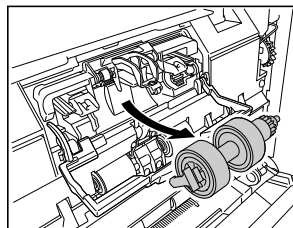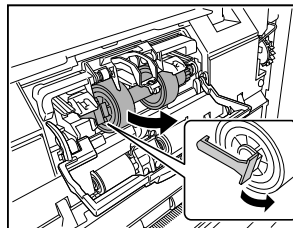


- 4 Install the new retard roller by inserting the right side first.

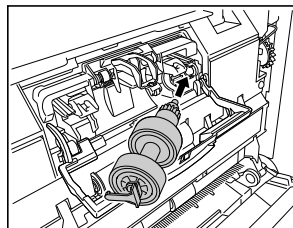

-
- 5** Push the left side of the retard roller to secure it to the scanner.

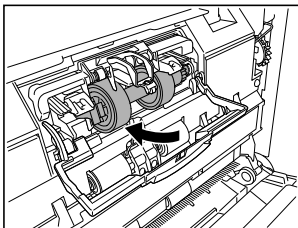

-
- 6** Close the roller cover.

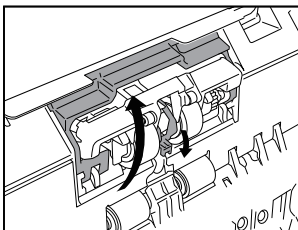

Resetting the counter

-
- 1** Press the Menu button on the control panel.
Menu will be displayed.
-
- 2** Press the ▼ button to display the [Roller Feed Count].
-
- 3** When you press the OK button, the message will be displayed.
Press the ▼ button to select [Reset], then press the OK button.
The value of [Roller Feed Count] will be reset.
-
- 4** Press Menu button to return to the original screen.




Hint

Reset of the counter can be done from the Canon imageFORMULA Driver Setting Tool. ([See p. 90](#))

Removing the Document Feed Tray

When you will store or otherwise not use the scanner for a long period of time, remove the document feed tray.

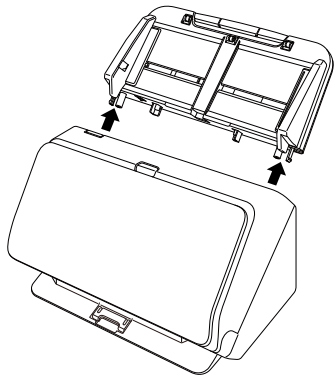

About the Canon imageFORMULA Driver Setting Tool

What is Canon imageFORMULA Driver Setting Tool?

The Canon imageFORMULA Driver Setting Tool can be used to check the information of the scanner, or to configure the maintenance settings.

Canon imageFORMULA Driver Setting Tool consists of the following tabs.

[Information] tab

You can check the scanner's version information and scanner information.

[Maintenance] tab

You can reset the counter of the roller, or carry out the shrinkage rate control.

[Control] tab

You can carry out the control settings of hardware and drivers, and perform the read or write of the control settings.

From the configuration of the hardware, you can set the automatic power-off function.

[Diagnostic] tab

You can output or delete the log file.


Start-up of the Canon imageFORMULA Driver Setting Tool

Click the Start button, then click [All Programs] - [Canon DR-M200 Series] - [Canon imageFORMULA Driver Setting Tool] in that order. Canon imageFORMULA Driver Setting Tool will start.



Hint

In Windows 8.1, it is registered at the following location.

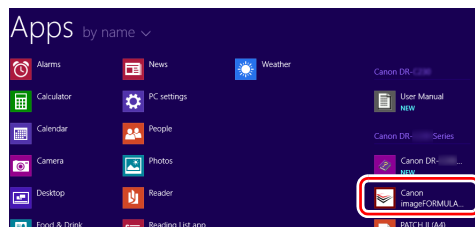

Common Problems and Solutions

This section provides recommended solutions to common problems. If you have a problem that is not solved by the following, contact your local authorized Canon dealer.

Problem 1 The scanner will not turn on.

Solutions Confirm that the AC adapter is plugged firmly into a power outlet.

Problem 2 The scanner is not recognized.

Solutions

- (1) Confirm that the scanner is properly connected to the computer with a USB cable.
- (2) Confirm that the scanner is turned on. See the previous problem (1) if the scanner does not turn on.
- (3) The computer's USB interface may not support the scanner. The scanner cannot be guaranteed to work with all USB interfaces.
- (4) Confirm that the supplied USB cable is used to connect the scanner to the computer. The scanner cannot be guaranteed to work with all available USB cables.
- (5) If you are connected to USB3.1 Gen1, re-connect to USB2.0 and check.
- (6) If the scanner is connected to the computer via a USB hub, try removing the hub and connecting directly to the computer.

Problem 3 Documents feed askew (scanned images are slanted).

Solutions

- (1) Align the document guides to fit the documents as closely as possible, and load the documents so that they feed straightly.
- (2) Open the document feed extension support and place the document.
- (3) Enable [Automatically straightens skewed] in the scanner driver settings.
- (4) If many pages have been scanned since roller cleaning, clean the rollers. If documents still feed askew, roller replacement or other maintenance may be needed. See ["Maintenance" on p. 81](#) for roller replacement procedures.

Problem 4 Documents are not scanned according to the settings configured in the scanner driver.

Solutions When you scan using [Select document] panel registered with CaptureOnTouch, the CaptureOnTouch settings have priority over the scanner driver settings. Edit settings in the [Select document] panel, or create a new [Select document] panel using the desired scanning conditions.

Problem 5 If white lines or streaks appear in scanned images.

Solutions Clean both sides of the scanner glass, and the rollers. If a sticky substance such as glue or correction fluid is found, carefully wipe with just enough pressure to clean the area where the lines appear. If the problem cannot be solved by cleaning, the internal glass may be scratched. Contact your local authorized Canon dealer.

Problem 6 Pages are missing.

Solutions When the scanner driver's [Scanning Side] setting is [Skip Blank Page], documents with very little black may be unintentionally skipped. Decrease the Set the likelihood of skipping blank page value ("[When you want to delete the images of the blank pages in two-sided documents](#)" on p. 69) or set the [Scanning Side] to another mode, such as simplex or duplex. If pages are skipped due to the document double feeding, see "Problem 7 Documents jam (or double-feed)."

Problem 7 Documents are collectively fed

Solutions Open the scanner driver settings screen, clear the check box for [Non Separation Feeding Mode] of the [Feeding] tab. Also, make sure that the roller is installed correctly.

Problem 8 The scanner will multifeed documents.

Solutions (1) Check that the roller is installed correctly. Clean the roller if necessary.
(2) The document will not scan correctly if it is stuck due to static electricity or for any other reason.

Problem 9 Paper jam occurs.

Solutions (1) Check that the roller is installed correctly.
(2) If paper jams occur repeatedly, open the settings window of the scanner driver, and select [Extra-thin paper] for [Document type] in the [Feeding] tab. Alternatively, reduce the number of inputted documents to around 10.
(3) If a paper jam occurs due to the curling of the ends of the document after replacing or cleaning the roller, perform 5 single scans of an A4-sized document.

Problem 10 Scanner does not feed document (or document has stopped in the feeding path).


Solutions Check that the roller is correctly installed. Clean the roller if necessary.

Problem 11 Scanned images are saved in TIFF instead of JPEG format.

Solutions When documents are scanned with CapturePerfect while [Color Mode] is set to [Detect automatically] in the scanner driver, documents detected as black and white are automatically saved in TIFF format, even if the file type is specified as JPEG format. This occurs because JPEG format does not support black and white binary format images. If you want to save all images in JPEG format, change the scanning [Color Mode] to either [24-bit Color] or [256-level Gray].

Problem 12 Multiple pages of scanned images cannot be saved to a single file.

Solutions • Depending on the file format, multiple scanned image pages cannot be saved as a single file with CaptureOnTouch.

File type	Processing for multiple pages
BMP, JPEG	Scanned images are always saved one page per file.
PPTX	Multi-page images are always saved to a single file.
TIFF, PDF	You can save multiple pages to a single file by clicking  and selecting [Save all pages as one file] in the displayed dialog box.

• When you select [Scan Batch to File] from the [Scan] menu in CapturePerfect, a dialog box appears with a [Multi Page Settings] pull-down that allows you to select [Single Page]. If you select [Single Page] here, each page of a multi-page document is saved as a separate image file. To save multiple pages to a single image file, select [Multi Page (All Pages)].

Problem 13 All of the placed documents have been scanned, but the scanned image does not appear on the application.

Solutions When [Panel-Feeding] or [Automatic Feeding] is selected as the feeding method on the scanner driver's Detail Settings screen, a scanning operation will not continue after all of the documents are fed, as the scanner awaits additional documents to be fed. Pressing the Stop button on the operating panel will finish the operation.

Problem 14 Memory becomes insufficient and scanning stops.

Solutions If you configure scanning conditions that use a large amount of the computer's memory, scanning may stop because of insufficient memory. Although this depends on the computer's memory size, the possibility of insufficient memory increases if any of the following scanning conditions overlap.

- [Color Mode] is set to [24-bit Color]
- A large page size (e.g. Legal) is specified as the [Page Size]. Alternatively, the page size is set to [Scanner's Maximum].
- A high resolution (600dpi etc.) is specified for [Dots per inch].

If an error message appears due to insufficient memory while scanning is in progress, exit the application, change the scanning conditions (e.g. reduce the resolution or page size) and then try scanning again. In addition, the amount of memory used can be contained by turning off [Moire Reduction] and [Prevent Bleed Through/Remove Background] if they are set to on.

Problem 15 Multifeeding when scanning multiple bound pages

Solutions Select continue scan on the scanner's operation panel, or uncheck [Non Separation Feeding Mode] on the scanner driver's Settings screen. ([See p. 29](#))

Problem 16 Passport cannot be scanned as intended

Solutions Depending on the condition of the carrier sheet or passport, the image may not be scanned completely or the scanner's image correction may not function properly.

Configure the settings as shown below.

- (1) Set [Page Size] to a larger paper size (A4, for example) on the scanner driver settings screen, and then scan again. ([See p. 68](#))
- (2) Set [Dots per inch] to 300 dpi or less on the scanner driver settings screen. ([See p. 68](#))
- (3) If you scanned the side of the passport with less pages facing down, place the side of the passport with more pages facing down, and gather the side with more pages on the edge of the carrier sheet, then load into the feeder.
- (4) Clean the roller.

Problem 17 Documents on thick paper do not scan correctly.

Solutions Open the settings window of the scanner driver, and select [Extra-thick paper/Plastic card] for [Document type] in the [Feeding] tab.

Problem 18 The size detection and deskew functions fail.

Solutions When [Document Type] is set to [Carrier sheet] in the [Feeding] tab of the scanner driver settings screen and you scan a document with black edges without inserting it in a carrier sheet, the size detection and deskew functions may fail. In such cases, disable the size detection and deskew functions, or set [Document Type] to a value other than [Carrier sheet] in the [Feeding] tab.

Software Troubleshooting

This section describes troubleshooting problems and solutions for operating the supplied software (CaptureOnTouch and CapturePerfect).

If scanning is too slow

- (1) Close other running programs, if any.
- (2) Scanning can be slowed down by memory shortage caused by memory-resident applications such as anti-virus programs. Close such memory-resident programs if necessary to free up memory space.
- (3) When insufficient hard disk space is available, the scanner may be unable to create the necessary temporary files for scanned data. Delete unneeded data on the hard disk to free up more space.
- (4) Scanning is slow, if the computer's USB port is not compliant with high-speed standards such as Hi-Speed USB2.0 and USB3.1 Gen1.
- (5) If using a common USB cable that is not USB3.1 Gen1 compliant, replace the cable with the supplied compliant cable.
- (6) When the scanner is connected to the computer via a USB hub that is not USB3.1 Gen1 compliant, remove the hub and connect the scanner directly to the computer.

If scanned image files cannot be opened in an application

- (1) Scanned images saved as multi-page TIFF files can be opened only by programs that support this file format.
- (2) Images saved as compressed TIFF files (single- as well as multi-page) can only be opened by programs that support the compressed format. This can occur with programs that are not compatible with CaptureOnTouch or CapturePerfect. In this case, select "None" as the image file compression format before scanning.

There is a display glitch on the UI screen of CaptureOnTouch.

Depending on the computer that you are using, a display glitch may occur on the UI screen when there are too many Scan mode panels, Select output panels, or Scanning Shortcut panels. Delete any panel that you will not use.

Useful tips

Here are some useful tips for scanning documents.

Where are scanned images saved? Can the save destination be changed?

Images are saved to the following locations, according to program settings. All destination locations can be changed to other folders.

CaptureOnTouch


Both Standard Scanning and Scanning Shortcut save the output to the destination set in the [Select output] panel.

CapturePerfect

- During normal scanning operations such as single-page scanning, the image file save destination can be specified each time scanning is performed.
- When scanning using a registered job, files are saved to the folder specified by the job settings.

How are the scan settings configured?

CaptureOnTouch

By clicking the Edit button ([]) in the [Select document] panel, you can edit the scan settings when the [Select document edit screen] opens.

CapturePerfect

- For normal scanning, click [Scanner Setting] from the [Scan] menu to open the scanner driver setting screen, and make settings there.
- Scan job settings are made for each job.

How do I save multiple pages in one file, or save one file per page?

When scanned images are saved in BMP or JPEG format, each image is always saved in a separate file.

When scanned images are saved in PDF or TIFF format, you can specify multi- or single-page files. See also “Problem 12” in “Common Problems and Solutions”.

Can I copy or back up scanner setting configurations?

CaptureOnTouch


The setting configurations can be backed up and restored using [Back Up/Restore] on the [Basic settings] tab on the [Environmental settings] dialog box

CapturePerfect

Restore/backup can be performed by clicking the [Import]/[Export] buttons in the [Commonly used settings] dialog.

What rules apply to scanned image file names?

CaptureOnTouch

For both Standard Scanning and Scanning Shortcut, the file names of scanned images are set based on the settings in the [Select output] panel. This screen opens when you click the Edit button ([]) in the [Select document] panel.

Click the [Detail Settings] button on this screen. You can set the file names of scanned images by setting all or some of the three items shown below.

Setting	Description
File name	Any specified text string to be included in the file name.
Add date and time	Appends the date and time to file names. Select the date format from the list box. YYYY = year, MM = month, and DD = day of month. The time is appended after the date.
Add counter to file name	Append serial numbers in the order of scanned image saving. Specify the number of digits and starting number.

A sample file name is displayed as the [File name] in the [File name settings] dialog box.

CapturePerfect

The rules for the file names of scanned images and the folder in which scanned images are saved can be set and then applied during scanning. For details, see the “Operating Guide” or help of CapturePerfect.

How do I scan half-folded documents (folio scanning)?

Fold the document in half, and set it in the scanner with the fold at the right. Specify half-size document (the size after folding) and then scan. For details, [see p. 31](#).

How can I skip blank pages, and scan only non-blank pages?

Specify [Skip Blank Page] on the scanner driver setting screen, then scan.

How do I scan cards?

Set a card in landscape orientation in the scanner. Specify the same size as the card (or [Match original size]), then scan. For details, [see p. 30](#).

Is it possible to add or insert images in a scanned image file?

CapturePerfect includes a function to add or insert pages in scanned image files. Refer to the CapturePerfect Operation Guide for details.

How do I paste OCR results from CapturePerfect into Excel or Word?

After scanning with OCR recognition enabled in CapturePerfect, click [Modify Barcode/OCR] in the [Edit] menu to open the [Modify Barcode/OCR] dialog box, where you can copy the text in the [OCR Characters] box. Alternatively, PDF files that were scanned with OCR enabled can be opened with an application, where the desired text can be copied.

How do I load and scan documents with mixed sizes?

Set [Page Size] to [Match original size] on the scanner driver setting screen, then scan. For details, [see p. 68](#).

What is the best way to scan business cards or photos?

Set [Page Size] to [Match original size] on the scanner driver setting screen, then scan. Alternatively, register the size of the cards or photos to be scanned. For details, [see p. 68](#).

How do I print scanned data?

CaptureOnTouch

- For both Standard Scanning and Scanning Shortcut, select [Print] in the [Select output] panel.
- To use this function, you need to install a plug-in.
- The plug-in can be installed by selecting its checkbox when installing CaptureOnTouch.

CapturePerfect

Scan using the [Scan Batch to Printer] function. Alternatively, register a job with a printer selected as the output destination.

I want to save to other folders

CaptureOnTouch

- In CaptureOnTouch, destinations other than [Save to folder] are provided as a plug-in.
- By installing the plug-in, the scanned image can be printed, attached in an e-mail, or shared using various cloud services.
- The plug-in can be installed by selecting its checkbox when installing CaptureOnTouch.
- The available output destinations vary depending on the installed plug-in.

CapturePerfect

Scan using the [Scan Batch to File] (or [Scan Page]) function. Alternatively, register a job with the output destination as a file, and set the save destination to the shared folder.

How can I attach scanned data to an e-mail (or send it as e-mail)?

CaptureOnTouch


- For both Standard Scanning and Scanning Shortcut, select [Attach to E-mail] in the [Select output] panel.
- To use this function, you need to install a plug-in.
- The plug-in can be installed by selecting its checkbox when installing CaptureOnTouch.

CapturePerfect

Scan using the [Scan Batch to Mail] function. Alternatively, register a job with the output destination as e-mail.

Clearing a Paper Jam

When paper jams are detected during scanning, the following error is displayed in the scanner's display panel and scanning is interrupted.

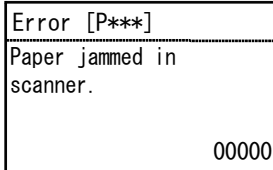


When a paper jam or double feed occurs during scanning, use the following procedures to clear them.


CAUTION

Be careful when removing jammed paper. take care not to cut your hand on the edges of the paper.

1 Remove any documents that have been left in the feed Tray.

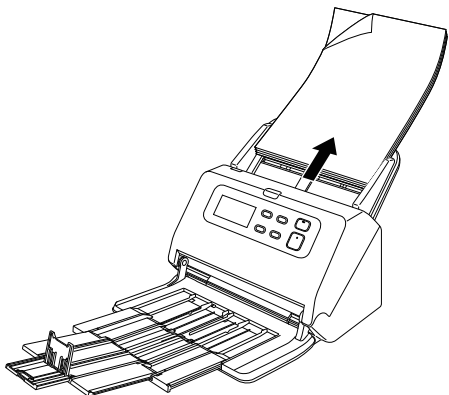


2 Pull the OPEN lever and pull open the front unit toward you.

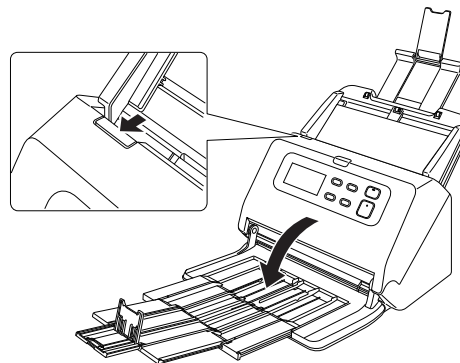

Hint

Cover open error appears in the operating panel when the front unit is open.


3 Remove the jammed document.

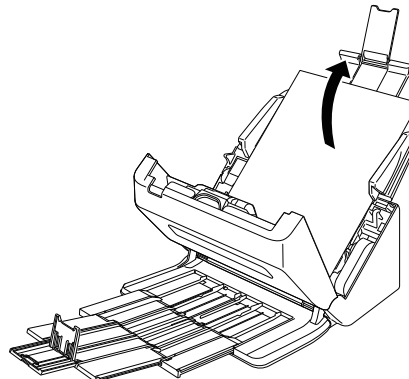

IMPORTANT

Make sure to pull the document out carefully, without applying too much force. If the jammed paper tears while you are pulling it out, make sure to remove any remaining pieces from inside the scanner.

- 4 Close the front unit by gently pushing it up on both sides until it clicks into place. Make sure that the front unit is completely closed by pushing until you hear a click.**

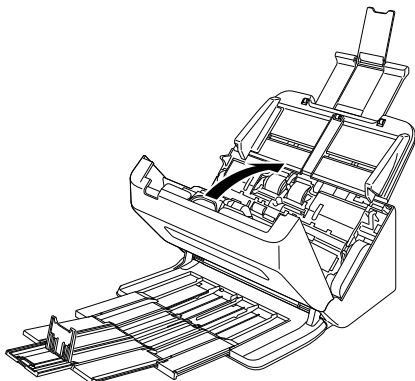

After removing the jammed paper, check to see if the last page was scanned correctly, and then continue scanning.

Hint

When the [Rapid recovery system] check box is enabled in the scanner driver settings screen, you can resume a scanning operation even if it is interrupted by a paper jam by removing the document and resuming from the document that was being fed when the interruption occurred.

As the image of the document that was being fed at the time of the interruption may not be saved in such cases, be sure to verify the last scanned image before resuming the operation.

Error message

When an error occurs in the scanner, you will see the following error messages on the display panel.


Title area	Comments area	Operation buttons area
Error [P***]	Paper jammed in scanner.	▲▼
Error [C***]	Scanner cover is open.	▲▼
Error [J***]	Paper feed error detected.	▲▼
Error [J***]	A document was skewed.	▲▼
Error [D***]	A double paper-feed has occurred.	▲▼
Error [E***]	Scanner hardware problem.	▲▼

Time to Replace Roller

When starting the scanner, the message screen requesting for replacement of roller is displayed.

Click the OK or Stop button to go to the Jobs Screen, or after the scanning operation is complete according to the scanning instructions from the computer, the Jobs Screen will be displayed, click the Menu button to go to the Menu Screen.

This screen will not be displayed until the power is turned OFF when the Jobs Screen or Menu Screen appears after this screen.

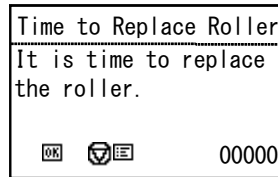

Uninstalling the Software

If the ISIS/TWAIN driver, CaptureOnTouch or CapturePerfect is not operating normally, follow the procedure below to uninstall them. Then, re-install the software from the Setup disc. ([See p. 8](#))



IMPORTANT

Log on to Windows as an Administrator.

1 From the Windows task bar, click the [Start] button and then [Control Panel].

2 Click [Uninstall a program].
The [Uninstall or change a program] dialog box appears.

3 From the Programs list, select the software you want to remove and then click [Remove].
The delete confirmation screen appears.

4 Click [Yes].
Uninstallation of the software is now complete.

Specifications

Main Unit

Type	Desktop sheetfed scanner
Scanning Document Size	
Plain Paper	
Size:	Width: 50 mm to 216 mm (1.97" to 8.5") Length: 54 mm to 356 mm (2.13" to 14.02") (You can scan documents up to 5,588 mm (220") long by setting the scanner to the Long Document mode.)
Paper weight:	Page separation: 27 to 413 g/m ² (7 to 110 lb bond) 0.04 mm to 0.49 mm (0.0016" to 0.0193") Non separation: 27 to 413 g/m ² (7 to 110 lb bond) 0.04 mm to 0.49 mm (0.0016" to 0.0193")
Loading capacity:	A4 size or smaller: 80 sheets (80g/m ² (22 lb bond)) Larger than A4 size: 65 sheets (80g/m ² (22 lb bond)) Make sure stacks do not exceed 10 mm in height for either of the above.
Business Card	
Size:	50 mm x 85 mm (1.97" x 3.35") or larger
Paper thickness:	380 g/m ² (80 lb bond) 0.45 mm (0.0177") or smaller
Card	
Size:	54 mm x 86 mm (2.13" x 3.39") (ISO standard)
Card thickness:	1.4 mm (0.055") or smaller
Orientation:	Horizontal feeding only
Embossed cards can be scanned.	
Loading capacity:	10 cards (non-embossed), 1 card (embossed)
Passport	
Size:	88 mm x 125 mm (3.46" x 4.92") (ISO standard) When scanning, be sure to open the passport and insert it in the separately sold carrier sheet (for passports).
Thickness:	6 mm (0.24") or less (including carrier sheet)

Scanning Sensor	Contact image sensor
Light source	LED
Scanning Side	Simplex/duplex
Scanning modes	Black and White, Error Diffusion, 256-level Grayscale, Advanced Text Enhancement, Advanced Text Enhancement II, 24-bit Color
Scanning resolution (Primary Scan Lines x Secondary Scan Lines)	100 x 100dpi/150 x 150dpi/200 x 200dpi/240x240dpi/300 x 300dpi/400 x 400dpi/600 x 600dpi
Scanning Speed	(Conditions: Core i7 2.8GHz CPU, 4 GB memory, A4 document size)
Grayscale	Simplex 200dpi 60 pages/min. 300dpi 60 pages/min. Duplex 200dpi 120 images/min. 300dpi 120 images/min.
24-bit Color	Simplex 200dpi 60 pages/min. 300dpi 50 pages/min. Duplex 200dpi 120 images/min. 300dpi 100 images/min.
Interface	USB3.1 Gen1
Other functions	Folio scanning, double feed detection ignore
External Dimensions	285 mm (11.22")(W) x 254 mm (10")(D) x 231 mm (9.09")(H) (With the feed tray attached and the document eject tray closed) 285 mm (11.22")(W) x 652 mm (25.67")(D) x 367 mm (14.45")(H) (With the feed tray attached and the document eject tray open)
Weight (without AC adapter)	Approximately 3.4 kg (7.50 lb)
Power Supply (using AC adapter)	DC24V 1.0A
Power Consumption	Scanning: Maximum 23W or less In the Sleep mode: Maximum 1.4W or less With power switch OFF: Maximum 0.1W or less
Noise	Not more than 45 dB

Operating Environment

Temperature: 10°C to 35°C (50°F to 95°F)
Humidity: 20% to 80% RH

AC Adapter (100 to 240 V type)

Model Number	MG1-5039
Input	AC100 to 240V, 50/60 Hz, 1.06 to 0.6 A
Output	DC24V 2.0A
Weight	Approximately 0.3kg (0.66 lb) (excluding power cord)

Specifications are subject to change without notice due to product improvements.

Replacement parts

Exchange roller kit (product code: 1550C001)

Kit to replace rollers (feed roller, retard roller).

- For the replacement procedure, see ["Replacing Consumable Parts" on p. 84](#).
- Contact your local authorized Canon dealer or service representative for detailed information about the replacement parts.

Option

Barcode module (product code: 1922B001)

2D code module (product code: 1922B003)

Add-on module to recognize barcodes printed on documents during scanning.

Carrier sheet (for passports) (Product code: 0697C002)

This is a carrier sheet for scanning passports.

Carrier sheet (product code: 0697C001)

This is a carrier sheet for scanning documents without damaging the documents.

Flatbed scanner unit102 (product code: 2152Cxxx)

Flatbed scanner unit that can be connected to and used with a DR scanner. Connecting the unit to this scanner enables you to use this scanner as a flatbed scanner with an automatic document feeder.

Flatbed scanner unit201 (product code:6240Bxxx)

A flatbed scanner unit that can be used by connecting to a DR scanner and supports A3 size paper. Connecting the unit to this scanner enables you to use this scanner as a flatbed scanner with an automatic document feeder.

About the Flatbed Scanner Unit 102/Flatbed Scanner Unit 201

The optional Flatbed Scanner Unit 102/201 can be connected to and used with this scanner.

System requirements

The computer must comply with the necessary system requirements of Flatbed Scanner Unit 102/201.

The scanner driver of Flatbed Scanner Unit 102/201 needs to be installed to use the unit.

About Use with CaptureOnTouch

! IMPORTANT

Only the Flatbed scanner unit102 can be used with CaptureOnTouch.

About Assigning Function to Start Button

When you connect Flatbed Scanner Unit 102, you can assign Scanning Shortcut of CaptureOnTouch or any job to the start button of Flatbed Scanner Unit 102.

Limitation of Full Auto Mode

When a document is scanned with Flatbed Scanner Unit 102, Full Auto mode of CaptureOnTouch may not function effectively.


Limitation of Restarting with Start Button

When CaptureOnTouch is set not to be resident in memory, CaptureOnTouch cannot be restarted by pressing the start button on Flatbed Scanner Unit 102 after you end CaptureOnTouch.

About Setting up the Scanner Driver

When functions of this scanner cannot be selected with the Flatbed Scanner Unit 102 settings dialog box, click [Option] in the dialog box to open the scanner driver and make the required settings.

Dimensions

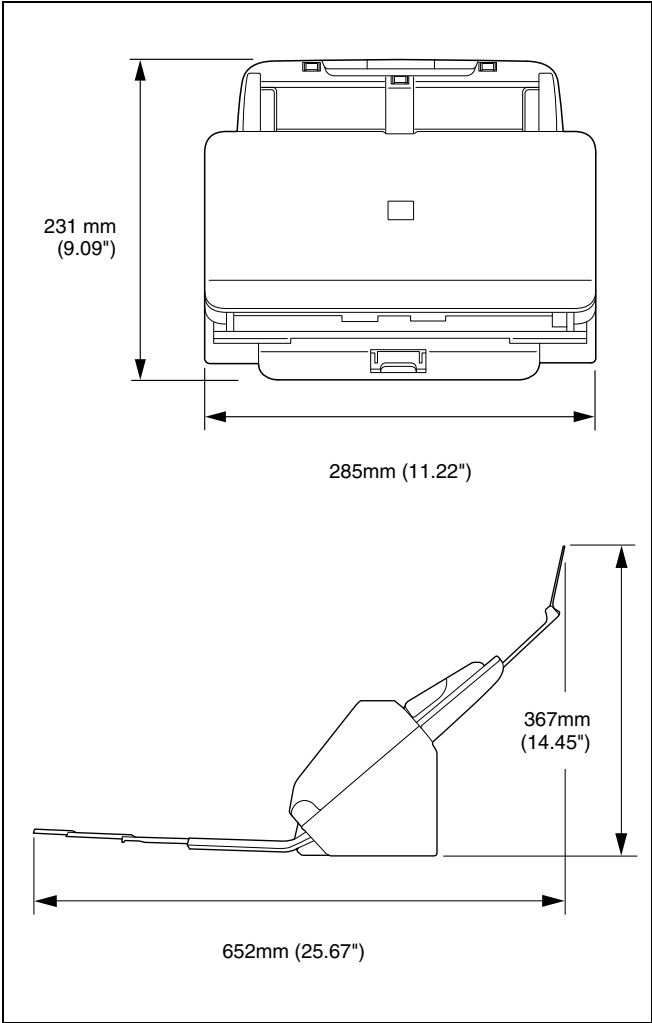

Index

B

Barcode module	102
Batch separation	73, 78
Bundled software	6
Bypass mode	29

C

CaptureOnTouch	41
Environmental settings	60
Restart	42
Scan by pressing the start button	51
Shortcut scan	46
Standard Scanning	44
Start	42
CapturePerfect	63
Card	
Loading method	30
Care and cleaning	81
Carrier sheet	102
Connect	10
Control Panel	22
Counter	88
Custom paper size	69

D

Display Panel	22
Document	25
Card	30
Folio	31
Loading method	27
Double Feed Detection	35, 38

F

Feed roller	84, 86
Flatbed scanner unit 102	102
Flatbed scanner unit 201	102
Folio	31
Front unit	85

I

Install	8
Bundled software	8

J

Job Select button	22
-------------------------	----

L

Long Document Mode	33
--------------------------	----

M

Menu Button	22, 23
Multi-stream setting	74

O

OK Button	22, 23
Operating environment	7
Output method	57

P

Paper jam	97
Power supply	11

R

Roller	83
Cleaning	81
Replace	84

S

Scan area	69
Scanner driver	65
Basic settings	68
Settings suitable for intended use	69
Scanning glass	82
Cleaning	81
Separation roller	84, 87
Setup	5
Start button	22
Stop Button	22

U

Uninstall 100



CANON ELECTRONICS INC.

3-5-10 SHIBAKOEN, MINATO-KU, TOKYO 105-0011, JAPAN

CANON U.S.A. INC.

ONE CANON PARK, MELVILLE, NY 11747, U.S.A.

CANON CANADA INC.

8000 MISSISSAUGA ROAD, BRAMPTON, ONTARIO L6Y 5Z7, CANADA

CANON EUROPA N.V.

BOVENKERKERWEG 59, 1185 XB AMSTELVEEN, THE NETHERLANDS

CANON AUSTRALIA PTY. LTD.

BUILDING A, THE PARK ESTATE, 5 TALAVERA ROAD, MACQUARIE PARK, NSW 2113, AUSTRALIA

CANON SINGAPORE PTE. LTD.

1 FUSIONPOLIS PLACE, #15-10, GALAXIS, SINGAPORE 138522

CANON KOREA BUSINESS SOLUTIONS INC.

BS TOWER, 607 TEHERAN-RO, GANGNAM-GU, SEOUL, KOREA

CANON INDIA PVT. LTD

7TH FLOOR, TOWER B DLF CYBER TERRACES DLF PHASE III GURGAON - 122002 HARYANA, INDIA