beurer WL 32



D	Lichtwecker	
	Gebrauchsanweisung2-	12
GB	Wake up light	
	Instructions for use	2
F	Réveil lumineux	
	Mode d'emploi23-5	3
E	Luz para despertar	
	Manual de instrucciones34-4	43
	Luce sveglia	
	Istruzioni per l'uso44-5	5
TR	İşıklı çalar saat	
	Kullanım kılavuzu54-(ò
RUS	Световой будильник	
	Инструкция по применению64-	7
PL	Budzik świetlny	
	Instrukcja obsługi76-8	3

 ϵ

ENGLISH

Contents

1. Included in delivery	13	7. Cleaning and maintenance	20
•		8. Disposal	
3. Getting to know your instrument	15	9. What if there are problems?	21
4. Unit description	15	10. Technical data	21
5. Initial use	17		
6 Operation	17		

Dear Customer

Thank you for choosing one of our products. Our name stands for high-quality, thoroughly tested products for applications related to heating, weight, blood pressure, body temperature, pulse, gentle therapy, massage, air and beauty.

beauty.

Please read these instructions for use carefully and keep them for later use, be sure to make them accessible to other users and observe the information they contain.

With kind regards Your Beurer team

1. Included in delivery

- 1 Beurer WL 32 wake up light
- 1 mains adapter
- 1 AUX cable
- 1 set of instructions for use

2. Signs and symbols

The following symbols are used in these instructions for use, on the packaging and on the type plate for the device and the accessories:



Warning instruction indicating a risk of injury or damage to health.

1 IMPORTANT	Safety note indicating possible damage to the device/accessory.
(i) Note	Note on important information.
X	Disposal in accordance with EC Directive – WEEE (Waste Electrical and Electronic Equipment)
^	Manufacturer
C€	This product satisfies the requirements of the applicable European and national directives.

⚠ WARNING

- The device is only intended for the purpose described in these instructions for use. The manufacturer is not liable for damage resulting from improper or careless use.
- The device must be placed near an easily accessible socket.
- Only operate the device with the mains adapter provided and at the mains voltage specified on the mains adapter.
- Before use, inspect the device and accessories for visible damage. If you have any doubts, do not use the device and contact your retailer or the specified Customer Services address.

- In the case of defects or operational faults, switch the device off immediately and disconnect the device from the mains socket.
- Never plug in or unplug the mains adapter when you have wet hands.
- Keep packaging material away from children (risk of suffocation).
- Arrange the mains cable so that it is not a trip hazard.
- Keep the device, mains adapter and mains cable away from water.
- This device is not intended for use by people (including children) with restricted physical, sensory or mental skills or a lack of experience and/or a lack of knowledge, unless they are supervised by a person who is responsible for their safety or are instructed by such a person in how to use the device.
- Children should be supervised around the device to ensure they do not play with it.

riangle important

- Do not pull on the mains cable or on the device to disconnect the mains adapter from the socket.
- Never hold or carry the device by the mains cable.
- Protect the device from impacts, humidity, dirt, marked temperature fluctuations and direct sunlight.
- Do not drop the device.


3. Getting to know your instrument

The Beurer WL 32 wake up light wakes you from sleep in a gentle and natural manner. The LED light gradually becomes brighter like a rising sun, allowing you to slowly become accustomed to the light conditions and your body to gently prepare itself for waking up. Along with the simulated sunrise, you can set an acoustic alarm to help you wake up. You can choose between the radio or a beep. The wake up light provides a rested and pleasant start to your day.


4. Unit description

Front view


For snooze/lamp, press the cover of the lamp (at the front) downwards

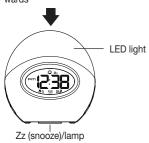


Side view

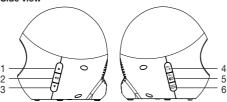

- 1 Up 2 Volume (radio)
- 3 Down
- 4 Alarm 1-2
- 5 Goodnight function (sleep)/radio
- 6 Set/memory

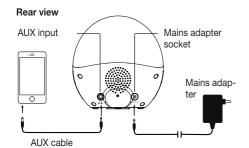

Underside

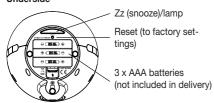

Battery compartment lid



Display description



- 1 Radio memory space 2 Light symbol 3 Snooze 4 Radio on

- 5 Alarm 2 radio

- 6 Alarm 2 facilo
 6 Alarm 2 beep
 7 Alarm 1 radio
 8 Alarm 1 beep
 9 Displays time in 12h format
 10 Sleep timer (goodnight function)

5. Initial use

- Remove the packaging material.
- Check that all parts listed are present.
- Check the device, mains adapter and mains cable for
- Remove the battery compartment lid on the underside of the device and insert the batteries with the correct polarity. The batteries supply power to the device in the event of a power failure.
- Place the device on a firm, even surface.
- Insert the mains adapter connector into the mains adapter socket on the rear of the device.
- Insert the mains adapter into a suitable socket. The time is shown on the device display.

• If you would like to reset the device to the factory settings, press in the reset button on the underside of the device using a pointed object.

6. Operation

(i) Note

The device exits the settings menu automatically if no button is pressed for 10 seconds.

6.1 Setting the time and snooze duration • Press the SET button.

The time will start to flash.

Using the ▲/▼buttons, select the desired time.

(i) Note

To navigate through the hours or minutes more quickly, press and hold the ▲/▼button.

• Confirm the selected time with the set button.

"2ЧH₽" now flashes on the display.

You can now choose between 12 and 24-hour format.

Using the ▲/▼buttons, select the desired hour format and confirm with the ^{SET}/_{mEm} button.

"Zz 05" now flashes on the display.

• Using the ▲/▼buttons, select the desired snooze duration (5-60 minutes) and confirm with the $\frac{\text{SET}}{\text{mem}}$ button.

(i) Note

In order to read the time in the dark, press the cover of the lamp (at the front) downwards.

6.2 Setting the alarm

You can set two separate alarm times (alarm 1 and alarm 2) on the wake up light.

on the wake up light.

• To set alarm 1, press the 1-2 button once.

• To set alarm 2, press the PL button twice.

The corresponding alarm time starts to flash on the display.

- Using the ▲/▼buttons, set the desired alarm time.
- Using the Set me desired alarm time.
 Using the Set me desired alarm sound for this alarm time.

You can choose between radio (1) and a beep (2).

• Confirm using the 1-2 button.





Alarm 1 switched on, Alarm 2 switched on, beep selected as alarm radio selected as alarm

6.3 Switching off the alarm

 When the alarm sounds, press the 1-≥ button.

The alarm is now switched off and will sound again on the following day at the set time.

- 6.4 Permanently deactivating the alarm
 To deactivate alarm 1, press the ¬□□ button once.
 To deactivate alarm 2, press the ¬□□ button twice.
- Now press the ^{SET}/_{mem} button until the note symbol (♣) and bell symbol (♣) disappear from next to the number 1 or 2 on the screen.
- Confirm using the 1-2 button. Alarm 1 or 2 has now been deactivated.

6.5 Snooze function

When an alarm sounds, it can be stopped temporarily by pressing the Zz button. The alarm will sound again once the preset snooze duration has elapsed. For information on setting the snooze duration, see chapter "6.1 Setting the time and snooze duration".

6.6 Sunrise function

Having set an alarm, you can also wake up to a sunrise simulation in addition to the alarm. With this function, the LED light gradually becomes brighter.

(i) Note

For this function, use the mains adapter provided.

- Press and hold the **Zz** button for approx. 5 seconds. "15" will flash on the display.
- Using the ▲/▼buttons, set the desired simulated sunrise.

15 = Sunrise simulation begins 15 minutes before the set alarm time.

 $\exists 0$ = Sunrise simulation begins 30 minutes before the set alarm time.

OFF = Sunrise simulation deactivated. The lamp symbol (🌣) disappears from above the time on the display.

• To confirm your selection, press the **Zz** button.

6.7 Lamp function/mood light with change of colour The wake up light can also be used as a normal lamp or as a mood light with change of colour.

(i) Note

For this function, use the mains adapter provided. When you are listening to the radio or have activated the goodnight function, the "mood light with change of colour" function is deactivated. Only light without change of colour is possible in this mode.

• Press the Zz button.

The LED light begins to light up gradually.

- To activate the lamp function, press the **Zz** button again. "L 09" will flash on the display (brightness level 09).
- Using the △/▼buttons, set your desired brightness level (L 00 to L 15).
- To activate the mood light with change of colour, press the Zz button again.

The mood light with change of colour begins to light up. Wait a few seconds for the colour to change.

- To set one of the mood lights permanently (without change of colour), press the **Zz** button again.
- To switch off all light functions, press the Zz button again.

6.8 Listening to the radio

The wake up light has a flexible wire antenna on the rear of the device. Uncoil the wire and extend it fully to ensure the best reception.

• To switch the radio on, press the 🚡 button.

"BN" will flash on the display first. After approx. 10 seconds, first will appear on the display with the currently set frequency.

- Using the ▲/▼buttons, set the desired frequency.
- To start automatic search, press the ▲/▼button down briefly and then release it. The search will now start and will stop automatically as soon as a radio station has been found.
- To change the volume of the radio, press the ◄») button.
 Using the ▲/▼buttons, set the desired volume.
- To switch the radio off again, press the cover of the lamp (at the front) downwards.

(i) Note

When you are listening to the radio, the "mood light with change of colour" is deactivated. Only light without change of colour is possible in this mode.

6.9 Storing radio stations

You can store up to 10 radio stations on the wake up light.

- To switch on the radio, press the 👸 button.
- Using the ▲/▼buttons, set the frequency of the radio station you would like to store.
- To store the selected radio station, press and hold the SET button for approx. 2 seconds. (1) (memory space number) will flash on the display below the frequency.
- Select the desired memory space number by pressing the set button briefly. To save the transmitter to the desired

memory space number, hold down the $\frac{\text{SET}}{\text{mem}}$ button for 2 seconds

6.10 Selecting preset radio stations

- To switch the radio on, press the button. "en" will flash on the display first. After approx. 10 seconds, and will appear on the display with the currently set frequency.

 To select from the preset radio stations, press the

6.11 Goodnight function

This function automatically switches off the radio after a set period of time.
• Press the button twice.

- "SLEEP" will appear on the display with a flashing $\ensuremath{\text{OS}}.$
- Using the button, select the number of minutes after which the radio should automatically switch off. You can choose between 5, 10, 15, 30, 45, 60, 75 and 90
- To confirm the number of minutes, wait approx. 5 seconds until the display returns to the time. The desired number of minutes is now set. To view the remaining minutes until the radio switches off, press the $\[\[\] \]$ button.

(i) Note

• To end the goodnight function before the set number of minutes has elapsed, press the button until OFF appears on the display.

(i) Note

If you have activated the goodnight function, the "mood light with change of colour" function is deactivated. Only light without change of colour is possible in this mode.

6.12 Listening to music via the AUX input

You can connect your MP3 player to the wake up light using the AUX input.

- Insert one end of the AUX cable (included in delivery) into the AUX input on the rear of the wake up light.
- Insert the other end of the AUX cable into the headphone socket of the MP3 player.

When listening to music via the AUX input, the volume level can be adjusted on the MP3 player only, and not on the wake up light.

When a cable is connected to the AUX input on the device, the "mood light with change of colour" function is deactivated. Only light without change of colour is possible in this

7. Cleaning and maintenance

${f /}$ important

• Please make sure that no water enters the device. If this should happen, reuse the device only when it has fully

- Never immerse the device or mains part plug in water or other liquids.
- Protect the device from knocks, damp, dust, chemicals, marked temperature fluctuations, and nearby sources of heat (ovens, heaters).
- Clean the device with a dry cloth.
- Do not use any abrasive cleaning products.
- Always replace all batteries at the same time and use batteries of the same type. Do not use rechargeable batteries.
- Leaking batteries may damage the device. If you do not intend to use the device for longer periods, remove the batteries from the battery compartment.
- Leaking or damaged batteries may burn the skin therefore use suitable protective gloves if this is the case.

8. Disposal

For environmental reasons, do not dispose of the device in the household waste at the end of its useful life. Dispose of the device at a suitable local collection or recycling point. Observe the local regulations for material disposal. Dispose of the device in accordance with EC Directive – WEEE (Waste Electrical and Electronic Equipment). If you have any questions, please contact the local authorities responsible for waste disposal.

Note: The codes below are printed on batteries containing harmful substances: Pb = Battery contains lead, Cd = Battery contains cadmium, Hg = Battery contains mercury.



9. What if there are problems?

If the time is not displayed correctly or the device does not function correctly, the cause may be attributed to electrostatic discharge or other faults. Therefore, do not position the device near to other devices, such as WLAN etc. To remedy the problem, reset the device to the factory settings. To reset the device to the factory settings, press in the reset button on the underside of the device using a pointed object.

If the problem persists, contact Customer Services.

10. Technical data

Wake up light function	OFF, 15, 30 minutes before alarm
Snooze duration	5 to 60 minutes
Goodnight function	Choose between 5, 10, 15, 30, 45, 60, 75, 90 minutes and OFF.
Dimensions	12.3 x 12 cm
Weight	180 g

Mains part Voltage supply	Input: 100-240 V, AC / 50/60 Hz Output: 5.5 V, DC/500 mA	
Mains part Protection class	Protection class II	
Radio frequency range:	87,5 – 108 MHz VHF	
Illuminance:	Approx. 15 Lux (at distance of 15 cm)	